

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Always load evenly with the centre of gravity of the load as near the centre and rear of the plate as possible.
- ✓ Obtain additional support for large or wide loads to prevent tipping.
- ✗ Do not overload the truck - see Specification.
- ✗ Do not leave unattended, especially when loaded, unless the wheels are chocked or the truck is otherwise secured.
- ✗ Do not use truck on uneven ground and do not run over curbs or steps - use a ramp.
- ✗ Do not allow others to ride on the truck.
- ✗ Do not use the truck if any part is damaged, paying particular attention to the wheels.



2. SPECIFICATION

Model No.	CST982	CST983	CST984	CST986	CST987	CST988	CST994
Max. Load	80kg	150kg	150kg	200kg	200kg	250kg	300kg
Wheel Diameter	150mm	210mm	210mm	250mm	250mm	250mm	250mm
Wheel Thickness	37mm	50mm	45mm	90mm	90mm	90mm	90mm
Height	1100mm	1170mm	1235mm	1100mm	1190mm	1260mm	1100mm
Overall Width	415mm	460mm	420mm	550mm	545mm	560mm	520mm
Platform Depth	150mm	220mm	200mm	178mm	255mm	220mm	250mm

3. PARTS

CST982	
Description	Part No
Pin	CST982/01
Flat Washer	CST982/02
Wheel Solid	CST982/03
Frame	CST982/04
Axle	CST982/05
Nut	CST982/06
Spring Washer	CST982/07
Axle Plate	CST982/08
Bolt	CST982/09

CST983	
Description	Part No
Pin	CST983/01
Flat Washer	CST983/02
Wheel Solid	CST983/03
Frame	CST983/04



CST984	
Description	Part No
Pin	CST984/01
Flat Washer	CST984/02
Wheel Solid	CST984/03
Frame	CST984/04
Axle	CST984/05

CST986	
Description	Part No
Pin	CST986/01
Wheel Pneumatic	CST986/02
Flat Washer	CST986/03
Frame	CST986/04

CST987	
Description	Part No
Pin	CST987/01
Flat Washer	CST987/02
Wheel Pneumatic	CST987/03
Frame	CST987/04
Axle	CST987/05

CST988	
Description	Part No
Pin	CST988/01
Flat Washer	CST988/02
Wheel Pneumatic	CST988/03
Frame	CST988/04
Axle	CST988/05

CST994	
Description	Part No
Pin	CST994/01
Flat Washer	CST994/02
Wheel Pneumatic	CST994/03
Frame	CST994/04
Axle	CST994/05

4. ASSEMBLY

- 4.1 **Wheels** Ensure axle is clean from dust and dirt to allow free movement of the wheel.
- 4.2 For Model Nos. CST987, CST988 and CST994 the axle (1.1) needs to be put through the frame before the wheels can be attached.
- 4.3 Slide the wheel (1.2) onto the axle, put on the washer (1.3) and complete by pushing the split pin (1.4) through the hole in the end of the axle and bending over to retain.
- 4.4 Repeat for the other side.

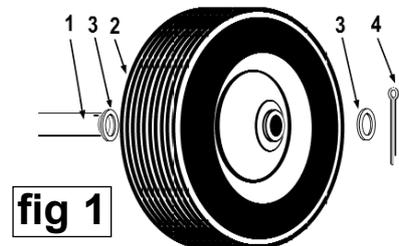


fig 1

5. FEATURES

- 5.1 Models CST982, CST983 & CST984 have solid tyres whilst Models CST986, CST987, CST988 & CST994 have pneumatic tyres.
- 5.2 CST983 can be rested on its handles for flat loading.
- 5.3 CST984 includes loading sled design that allows flat loading without the handles contacting the ground.
- 5.4 CST988 is a case carrying model with a high back and flat loading capabilities.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.