




Parts List for Air-Hydraulic Trolley Jack Model No: 5002HA

Sole UK Distributor,
Sealey Group,
Bury St.Edmunds, Suffolk.

☎ 01284 757500

📠 01284 703534

E-mail: sales@sealey.co.uk

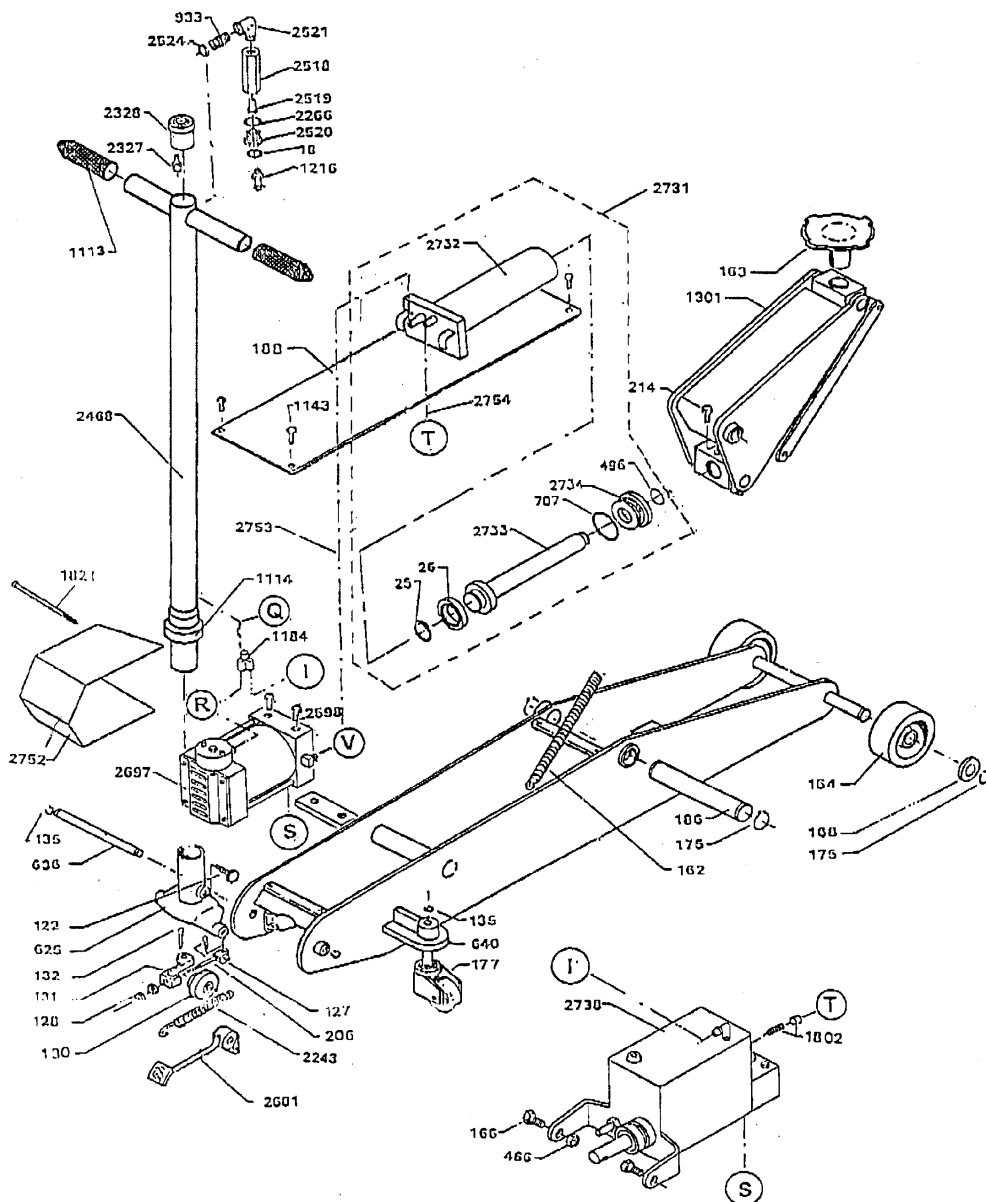

Item	Part No.	Description	Item	Part No.	Description
18	5002HA/18	Copper washer	2521	5002HA/2521	Fitting
25	5002HA/25	Lock ring	2524	5002HA/2524	Washer
26	5002HA/26	Sleeve	2598	5002HA/2598	Screw
122	5002HA/122	Knurled screw	2681	5002HA/2681	Foot pedal
127	5002HA/127	Release rod	2697	5002HA/2697	Air pump
128	5002HA/128	Nut	2731	5002HA/2731	Cylinder, complete
130	5002HA/130	Release hub	2732	5002HA/2732	Cylinder
131	5002HA/131	Release arm	2733	5002HA/2733	Piston
132	5002HA/132	Split pin	2734	5002HA/2734	Stuffing box
135	5002HA/135	Lock ring	2738	5002HA/2738	Pump, manual
162	5002HA/162	Spring	2752	5002HA/2752	Guard
163	5002HA/163	Saddle	2753	5002HA/2753	Pressure pipe
164	5002HA/164	Wheel	2754	5002HA/2754	Pressure pipe
166	5002HA/166	Screw	2755	5002HA/2755	Hoses, I, Q, R, S
168	5002HA/168	Washer		5002HA/RK	Repair kit
175	5002HA/175	Lock ring			
177	5002HA/177	Castor wheel complete			
186	5002HA/186	Shaft			
188	5002HA/188	Cover			
206	5002HA/206	Split pin			
214	5002HA/214	Screw			
466	5002HA/466	Nut			
496	5002HA/496	O-ring			
626	5002HA/626	Fork, handle			
636	5002HA/636	Shaft			
640	5002HA/640	Bracket			
707	5002HA/707	O-ring			
933	5002HA/933	Nipple			
1113	5002HA/1113	Grip			
1114	5002HA/1114	Sleeve			
1143	5002HA/1143	Screw			
1184	5002HA/1184	Air fitting, 'Y'			
1216	5002HA/1216	Coupling, male			
1301	5002HA/1301	Lifting arm			
1802	5002HA/1802	Oil valve			
1821	5002HA/1821	Screw			
2243	5002HA/2243	Spring			
2266	5002HA/2266	Washer, copper			
2327	5002HA/2327	Air fitting			
2328	5002HA/2328	Valve, complete			
2468	5002HA/2468	Handle			
2518	5002HA/2518	Filter housing			
2519	5002HA/2519	Filter			
2520	5002HA/2520	Nipple			

Original Date:- 130799
Issue Date:- 130799
Version No:- 1
Date Modified:- 1st issue