


AK294 & AK295

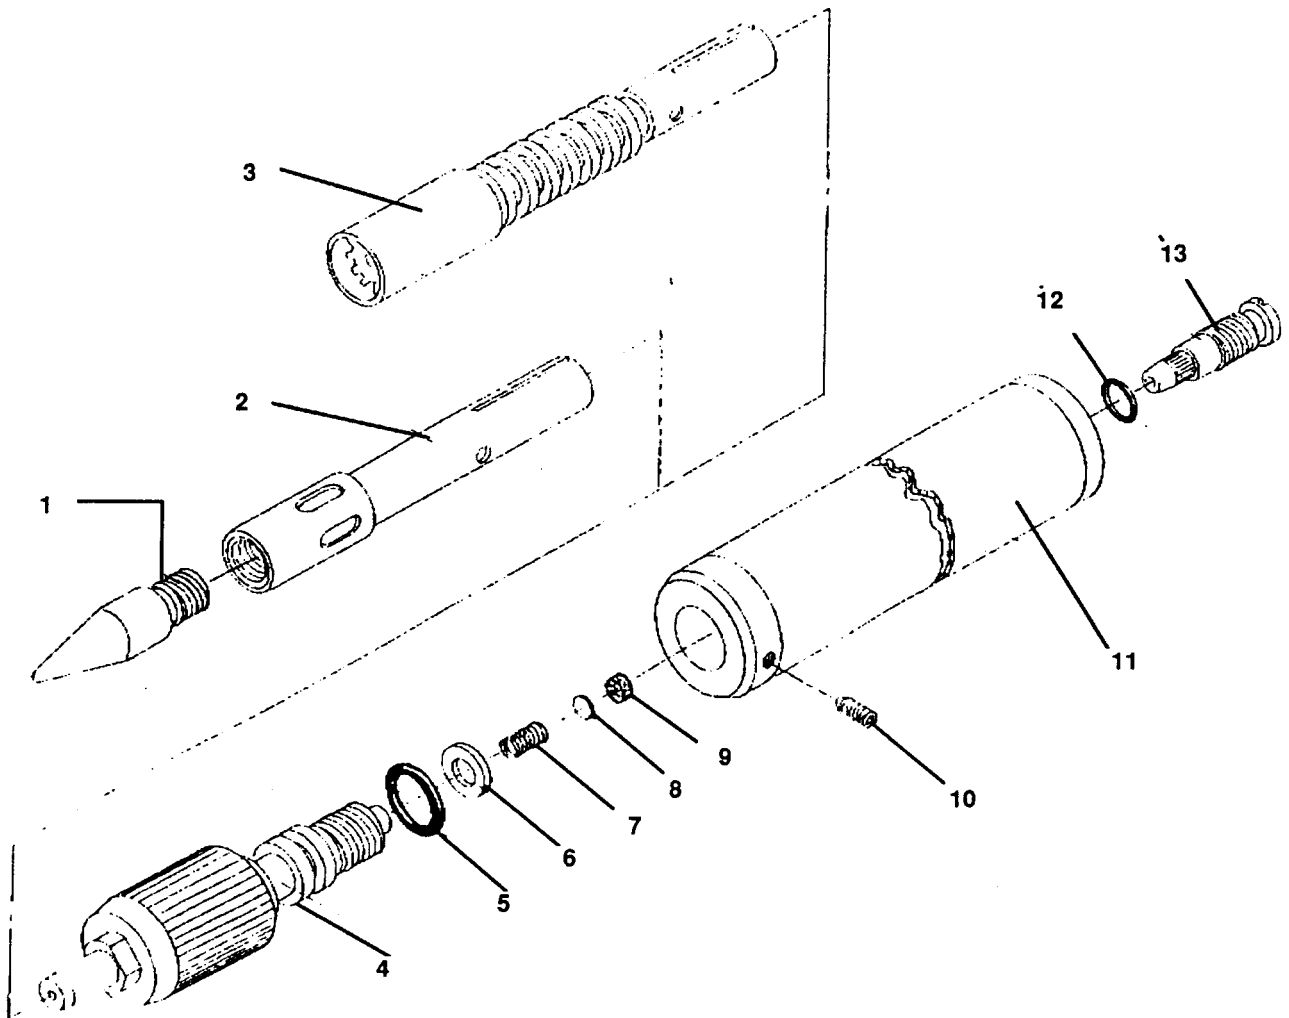

- | | |
|------------|----------------------|
| AK294/5-01 | TIP |
| AK294/5-02 | SOLDERING HEAD |
| AK294/5-03 | PENCIL FLAME HEAD |
| AK294/5-04 | ADJUSTMENT KNOB ASSY |
| AK294/5-05 | O-RING |
| AK294/5-06 | WASHER |
| AK294/5-07 | SPRING |
| AK294/5-08 | WASHER |
| AK294/5-09 | VALVE PIECE |
| AK294/5-10 | SET SCREW |
| AK294/5-11 | GAS CONTAINER |
| AK294/5-12 | O-RING |
| AK294/5-13 | FILLER |

AK 295 TIPS



AK294/5-01 (STANDARD)



AK294/5-01-2



AK294/5-01-3



AK294/5-01-5



AK294/5-01-6