



Item	Part No.	Description
1	BBQ07.01	TEMPERATURE GAUGE
2	BBQ07.02	TOP HANDLE
3	BBQ07.03	TOP LID
4	BBQ07.04	HINGE (TOP LEFT)
	BBQ07.04A	HINGE (TOP RIGHT)
5	BBQ07.05	HINGE (BOTTOM RIGHT)
	BBQ07.05A	HINGE (BOTTOM LEFT)
6	BBQ07.06	COOKING GRILLE
7	BBQ07.07	BURNER HOLDER
8	BBQ07.08	BURNER
9	BBQ07.09	BOTTOM BOWL
10	BBQ07.10	BACK LEG

Item	Part No.	Description
11	BBQ07.11	SIDE SHELF
12	BBQ07.12	SHELF SUPPORT
13	BBQ07.13	SIDE SHELF HINGE
14	BBQ07.14	ADJUSTMENT KNOB
15	BBQ07.15	GAS CONNECTOR
16	BBQ07.16	FRONT LEG (R/S)
17	BBQ07.17	BOTTOM SHELF
18	BBQ07.18	GREASE COLLECTOR
19	BBQ07.19	BRACKET (V-SHAPE)
20	BBQ07.20	BUSHING
21	BBQ07.21	BACK LEG

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.