



Item	Part No.	Description
1	BOOST160V2.01	Lower Panel
2	BOOST160V2.02	Transformer
3	BOOST180.03	Cable Bushing
4	BOOST180.04	Switch, Rocker (Illuminated)
5	BOOST180.05	Switch, Rocker (White)
6	BOOST180.06	Power Cable
7	BOOST180.07	Positive Clamp + Cable
7A	BOOST180.07A	Negative Clamp + Cable
10	BOOST180.10	Terminal (Pair)
11	START560.03	Fuse Cover
12	BOOST180V2.12	Ammeter
14	BOOST180.14	Fuse Holder (c/w Fixings)

Item	Part No.	Description
15	BOOST180.15	Support
16	BOOST180.16	Shunt
17	BOOST180.17	Rectifier
18	BOOST160V2.18	Top Cover
19	BOOST160V2.19	Handle Belt
20	BOOST160V2.20	Middle Support
21	BOOST180V2.21	Rubber Foot
--	BOOST180.08	Cable, Positive (Not Shown)
--	BOOST180.09	Cable, Negative (Not Shown)
--	START180.F	Fuse (Not Shown)
--	BOOST160V2PP	Panel Parts (Not Shown)

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

**IMPORTANT:** No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.