



Item	Part No.	Description
1	CD400.01	BRACKET, TOP RIGHT
2	CD400.02	REAR COVER
3	CD400.03	SCREW
4	CD400.04	UPPER PLATE
5	CD400.05	LEFT SIDE PLATE
6	CD400.06	SUPPORT
7	CD400.07	HEATING ELEMENT
8	CD400.08	FRONT COVER
9	CD400.09	FOOT (BLACK)
--	CD400.09G	FOOT (GREY) (NOT SHOWN)
10	CD400.10	SCREW 4x12mm
11	CD400.11	BRACKET, BOTTOM RIGHT
12	CD400.12	BRACKET, TOP LEFT

Item	Part No.	Description
13	CD400.13	POWER CORD
14	CD400.14	WIRE CLIP
15	CD400.15	BRACKET, BOTTOM LEFT
16	CD400.16	BAFFLE
17	CD400.17	THERMOSTAT
18	CD400.18	SPRING WASHER
19	CD400.19	RIGHT SIDE PLATE
20	CD400.20	SWITCH 250V 16A
21	CD400.21	PROTECTIVE COVER
22	CD400.22	TEMPERATURE CONTROL UNIT
23	CD400.23	SPRING
24	CD400.24	INDICATOR
25	CD400.25	TURN KNOB

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.