

Item	Part No.	Description	Item	Par
1	CP3001/01	Front Cover & Bush	14	CP3
2	CP3001/02	O-Ring	15	CP3
3	CP3001/03	Front Cover & Bush	16	CP3
4	CP3001/04	Rubber Washer	17	CP3
5	CP3001/05	Washer "A"	18	CP3
6	CP3001/06	Front Impact Ass'y	19	CP3
7	CP3001/07	Rear Impact Ass'y	20	CP3
8	CP3001/08	Gear Ring Holder	21	CP3
9	CP3001.V2-07	Gear Ring	22	CP3
10	CP3001/10	Gear Ass'y		CP3
11	CP3001/11	Pinion		CP3
12	CP3001/12	Motor		CP3
13	CP3001/13	Forward/Reverse Rod		CP3

Item	Part No.	Description	
14	CP3001/14	Switch	
15	CP3001/15	Main Housing L & R	
16	CP3001/16	Hand Strap	
17	CP3001/17	Screw	
18	CP3003BP	Cordless Power Tool Battery 19.2V	
19	CP3001/19	Soft Handle	
20	CP3001/20	Screw	
21	CP3001/21	Screw	
22	CP3001/22	Battery Connector Ass'y	
	CP3003CP	Mains Charger (NOT SHOWN)	
	CP3001/24	Side Handle (NOT SHOWN)	
	CP3001/25	Thermal Cut-Out (NOT SHOWN)	
	CP3001/25B	Thermal Cut-Out For Body (NOT SHOWN)	

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 1: 01284 757500 01284 703534 sales@sealey.co.uk

🐑 www.sealey.co.uk

CP3001 Issue 3 PL 13/08/18