



Item	Part No.	Description
1	HS102/01-02	Housing
3	HS102/03	Cover, Temperature Adj
4	HS102/04	Cover
5	HS102/05	Cover, Front
6	HS102/P.C.B.	Circuit Board
7	HS102/C4	Capacitor
8	HS102/MFA	Motor/Fan Assembly
9	HS102/EH	Element/Housing Assembly
17	HS102/17	Rest, Wire

Item	Part No.	Description
21	HS102/21	Ring
35	HS102/35	Switch, Power Rocker (c/w Wire)
--	102/100031	Cable Sleeve
--	HS102/35-CE	Rocker Switch Assembly (Not Shown)
--	HS102/P05	Stand (Not Shown)
--	HS100/1	Fish Tail Nozzle (Not Shown)
--	HS100/2	Window Nozzle (Not Shown)
--	HS100/3	Deflector Nozzle (Not Shown)
--	HS100/4	Reduction Nozzle (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.