



Item	Part No.	Description
1	HVD30.01	Handle
2	HVD30.02	Front Grille
3	HVD30.03	Screw For Grille
4	HVD30.04	Complete Housing For Rotary Switch
5	HVD30.05	Motor
6	MC3CX0.75	Mains Cable Blk, 3 Core, 0.75 mm2
7	FWM8.S	Flat Washer M8 Zinc
8	HHB1265.S	Hex Head Bolt M12 x 65mm
9	HVD30.09	Wheel, Fixed Plastic (D:180 W:36 B:12)

Item	Part No.	Description
10	HVD30.10	Washer For Foot
11	HVD30.11	Screw For Foot
12	HVD30.13	Rubber Foot
15	HVD30.15	Screw For Rubber Foot
--	HVD30.16	Housing For Rotary Switch (Not Shown)
--	HVD36.17	Power Selection Knob For Rotary Switch (Not Shown)
--	HVD30.18	Switch, Rotary Power Selector (3A/250V - T85) (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.