



| Item | Part No.      | Description             |
|------|---------------|-------------------------|
| 1    | INVMIG200V201 | HANDLE                  |
| 2    | IMIG180.02    | COVER                   |
| 3    | INVMIG200V228 | LATCH                   |
| 4    | INVMIG200V227 | SPOOL HOLDER            |
| 5    | IMIG180.05    | SUPPORT POST (RED)      |
| 6    | IMIG180.06    | SUPPORT POST (BLACK)    |
| 7    | INVMIG200V226 | PANEL, LEFT SIDE (DOOR) |
| 8    | SMIG150.V3-38 | WIRE FEEDER             |
| 9    | IMIG180.09    | MIDDLE PANEL            |
| 10   | IMIG180.10    | POTENTIOMETER           |
| 11   | IMIG180.11    | INDICATOR LIGHT         |
| 12   | INVMIG200V223 | POTENTIOMETER KNOB      |
| 13   | SMIG130.27    | MIG TORCH               |

| Item | Part No.      | Description         |
|------|---------------|---------------------|
| 14   | IMIG180.14    | CONICAL NOZZLE      |
| 15   | IMIG180.15    | CONTACT TIP         |
| 16   | IMIG180.16    | EARTH CABLE & CLAMP |
| 17   | IMIG180.17    | FRONT PANEL         |
| 18   | IMIG180.18    | CONTROL PCB BOARD   |
| 19   | IMIG180.19-21 | MAIN PCB BOARD      |
| 20   | INVMIG200V213 | BOTTOM PANEL        |
| 21   | INVMIG200V208 | FAN                 |
| 22   | IMIG180.23    | BACK PANEL          |
| 23   | IMIG180.24    | GAS-VALVE CONNECTOR |
| 24   | IMIG180.24A   | GAS-VALVE FITTING   |
| 25   | INVMIG200V206 | POWER SWITCH        |
| 26   | IMIG180.26    | POWER CORD          |

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.