



NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Parts Information:
Industrial Infrared Diesel Heater 13kW/16kW
Model No: IR13 / IR16

Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR13.03	Front Guard (for IR13 only)
	IR16.03	Front Guard (for IR16 only)
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR13.07	Inside Plate (for IR13 only)
	IR16.07	Inside Plate (for IR16 only)
8	IR13.08	Left Side Panel (for IR13 only)
	IR16.08	Left Side Panel (for IR16 only)
9	IR16.09	Exhaust Pipe Sleeve
10	IR13.10	Left Inside Panel (for IR13 only)
	IR16.10	Left Inside Panel (for IR16 only)
11	IR13.11	Top Cover (for IR13 only)
	IR16.11	Top Cover (for IR16 only)
12	IR16.12	Pipe Clamp
13	IR16.13	Exhaust Pipe Seat
14	IR16.14	Protection Grille
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel
20	IR13.20	Heat Resistance Plate (for IR13 only)
	IR16.20	Heat Resistance Plate (for IR16 only)
21	IR13.21	Right Side Door (for IR13 only)
	IR16.21	Right Side Door (for IR16 only)

Item	Part No.	Description
22	IR16.22	Handle (for Side Door)
23	IR16.23	Decorative Cover
24	IR16.24	Label (for Control Panel)
25	IR16.25	Control Panel
26	IR16.26	Control Box
27	IR16.27	Lock & Key
28	IR13.28	Front Panel (for IR13 only)
	IR16.28	Front Panel (for IR16 only)
29	IR16.29	Power Control PCB
30	IR16.30	Base for Control Panel
31	IR13.31	Left Inside Panel (for IR13 only)
	IR16.31	Left Inside Panel (for IR16 only)
32	IR16.32	Connection Plate (for Inside Panel)
33	IR16.33	Castor Wheel Plate
34	IR16.34	Castor
35	IR16.35	Oil Tank Assembly
36	IR16.36	Fuel Tank Assembly
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR16.41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe
45	IR16.45	Connection Plate
46	IR16.46	Vent Plate

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk