



Item	Part No.	Description
1	IR16.01	Support Tank for Oil Tank
2	IR16.02	Connection Plate
3	IR16.03	Front Guard
4	IR16.04	Power Cord
5	IR16.05	Base
6	IR16.06	Cable Grip
7	IR16.07	Inside Plate
8	IR16.08	Left Side Plate
9	IR16.09	Exhaust Pipe Sleeve
10	IR16.10	Left Inside Plate
11	IR16.11	Top Cover
12	IR16.12	Pipe Clamp
13	IR16.13	Exhaust Pipe Seat
14	IR16.14	Protection Grille
15	IR16.15	Thermostat
16	IR16.16	Bracket for Electrical Box
17	IR16.17	Pipe Bracket (A)
18	IR16.18	Pipe (Short)
19	IR16.19	Rear Panel
20	IR16.20	Heat Resistance Plate
21	IR16.21	Right Side Plate
22	IR16.22	Handle (for Side Door)
23	IR16.23	Decorative Cover

Item	Part No.	Description
24	IR16.24	Label (for Control Panel)
25	IR16.25	Control Panel
26	IR16.26	Control Box
27	IR16.27	Lock & Key
28	IR16.28	Front Panel
29	IR16.29	Power Control PCB
30	IR16.30	Base for Control Panel
31	IR16.31	Right Inside Panel
32	IR16.32	Connection Plate (for Inside Panel)
33	IR16.33	Castor Wheel Plate
34	IR16.34	Castor
35	IR16.35	Oil Tank Assembly
36	IR16.36	Fuel Tank Assembly
37	IR16.37	Tank Cap (c/w Oil Filter)
38	IR16.38	Decorative Plate
39	IR16.39	Vent Plug
40	IR16.40	Sensor
41	IR16.41	Pipe (Middle Section)
42	IR16.42	Lower Front Panel
43	IR16.43	Pipe Clamp
44	IR16.44	Pipe Bracket
45	IR16.45	Connection Plate
46	IR16.46	Muffler Plate

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.