


Trolley Jack 1.8tonne Low Entry Aluminium Rocket Lift

Model No: RJA1800

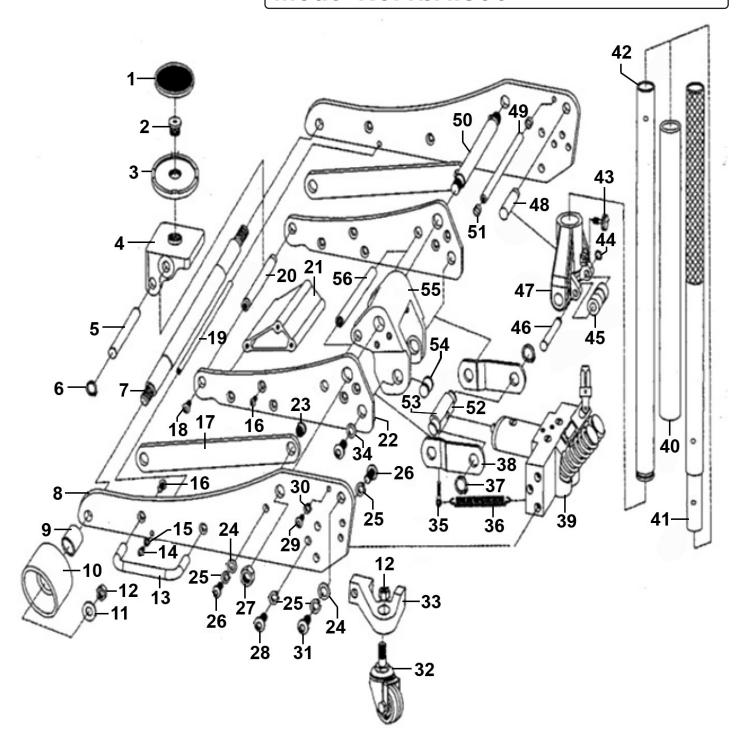

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534







Trolley Jack 1.8tonne Low Entry Aluminium Rockét Lift Model No: RJA1800

Item	Part No.	Description
1	RJA1800.01	Saddle Pad
2	RJAS2500V2.01	Saddle Shaft
3	RJA1800.03	Saddle
4	RJA1800.04	Saddle Base
5	RJA1800.05	Saddle Base Pin
6	RJA1800.06	Retaining Ring
7	RJA1800.07	Front Wheel Axle
8	RJA1800.08	Side Frame, Left
9	RJA1800.09	Wheel Bushing
10	RJA2500.07	Wheel, Front Fixed (D:65 W:50 B:22)
11	RJA1800.11	Washer
12	SN12.S	Steel Nut M12 Zinc
13	RJA2500.08	Carrying Handle
14	RJA1800.14	Nut
15	RJA1800.15	Washer
16	RJA1800.16	Bolt
17	RJA1800.17	Shaft
18	RJA1800.18	Bolt
19	RJA1800.19	Connecting Rod
20	RJA1800.20	Lift Arm Pin
21	RJA1800.21	Lift Arm Support
22	RJA1800.22	Inner Side Frame, Left
23	RJA1800.23	Nut
24	RJA1800.24	Washer
25	RJA1800.25	Spring Washer
26	RJA1800.26	Bolt
27	RJA1800.27	Nut
28	RJA1800.28	Bolt

Item	Part No.	Description
29	RJA1800.29	Bolt
30	RJA1800.30	Spring Washer
31	RJA1800.31	Bolt
32	RJA1800.32	Wheel, Rear Swivel Castor, Single Bolt (D:45 W:22 B:10 H:95)
33	RJA1800.33	Rear Castor Base
34	RJA1800.34	Washer
35	RJA1800.35	Pin
36	RJA1800.36	Spring Dia 15.2mm
37	RJA1800.37	Retaining Ring
38	RJA1800.38	Guide Plate
39	RJA1800.39	Hydraulic Unit
40	RJA2500.16	Handle Cover
41	RJA2500.V2-68	Upper Handle
42	RJA2500.V2-67	Lower Jack Handle (Square) 12mm
43	RJA2500.13	Set Screw
44	RJA1800.44	Retaining Ring
45	RJA1800.45	Socket Roller
46	RJA1800.46	Socket Roller Shaft
47	RJA1800.47	Handle Socket
48	RJA1800.48	Handle Socket Pin
49	RJA1800.49	Tie Rod
50	RJA1800.50	Lift Arm Pin
51	RJA1800.51	Nut
52	RJA1800.52	Set Screw
53	RJA1800.53	Hydraulic Adaptor
54	RJA1800.54	Nut
55	RJA1800.55	Lift Arm
56	RJA1800.56	Pin

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

01284 757500



01284 703534








Trolley Jack 1.8tonne Low Entry Aluminium Rocket Lift

Model No: RJA1800

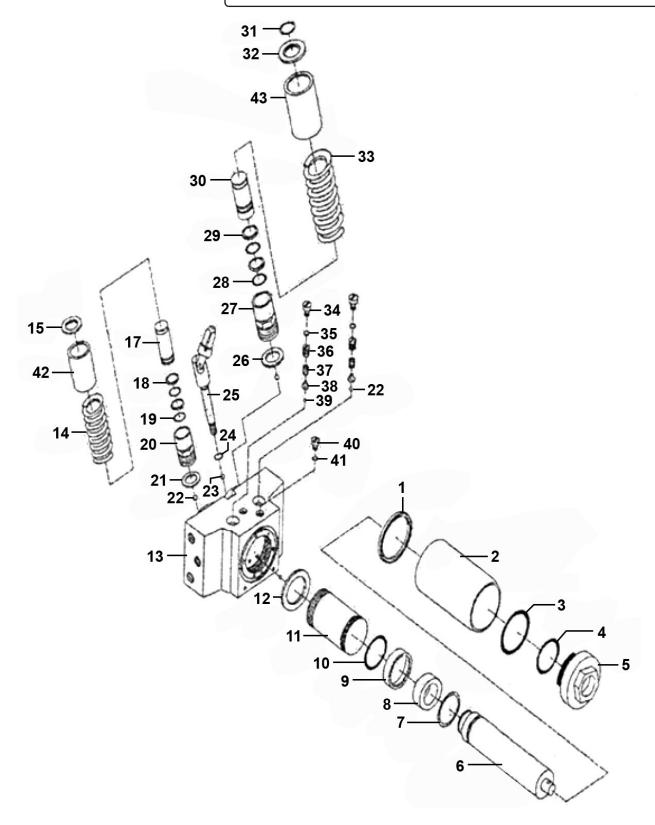

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

 


01284 757500



01284 703534







Trolley Jack 1.8tonne Low Entry Aluminium Rocket Lift

Model No: RJA1800

Item	Part No.	Description
1	RJA1800.P01	Sealing Ring
2	RJA1800.P02	Reservoir
3	RJA1800.P03	Sealing Ring
4	RE91/10.07	O-Ring, (Ex: 36.81 In: 29.75 Cs: 3.53)
5	RJA1800.P05	Top Nut
6	RJA1800.P06	Piston Rod
7	RJA1800.P07	Retaining Ring
8	RJA1800.P08	Seal
9	RJA1800.P09	Washer
10	RJA1800.P10	O-Ring, (Ex: 34.65 In: 24.61 Cs: 5.02)
11	RJA1800.P11	Cylinder
12	RJA1800.P12	Sealing Ring
13	RJA1800.P13	Base Plate
14	RJA1800.P14	Spring Dia 32.8mm
15	RJA1800.P15	Spring Base
17	RJA1800.P17	High Pressure Piston
18	RJA1800.P18	Retaining Ring
19	RJA1800.P19	O-Ring, (Ex: 15.32 In: 10.22 Cs: 2.56)
20	RJA1800.P20	Piston Housing
21	RJA1800.P21	Copper Ring
22	SB-5.0	Steel Ball 5.0mm

Item	Part No.	Description
23	SB-6.0	Steel Ball 6.0mm
24	GSA08.09-4	O-Ring, (Ex: 11.21 In: 7.65 Cs: 1.78)
25	RJA1800.P25	U-Joint
26	RJA1800.P26	Copper Ring
27	RJA1800.P27	Piston Housing
28	SA29.V3-41	O-Ring, (Ex: 22.36 In: 17.12 Cs: 2.62)
29	RJA1800.P29	Retaining Ring
30	RJA1800.P30	Low Pressure Pump Piston
31	RJA1800.P31	Retaining Ring
32	RJA1800.P32	Spring Base
33	RJA1800.P33	Spring Dia 36.8mm
34	RJA1800.P34	Release Valve Screw
35	RJA1800.P35	Square Seal 15x9.5x2
36	RJA1800.P36	Bushing
37	RJA1800.P37	Spring Dia 7.9mm
38	RJA1800.P38	Spring Base
39	SB-4.0	Steel Ball 4.0mm
40	RJA1800.P40	Plug Screw
41	RJA1800.P41	Square Seal 10x6.2x1.5
42	RJA1800.P42	Dust Cover
43	RJA1800.P43	Dust Cover

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

01284 757500



01284 703534



