



SM50 Parts Diagram

SM50 PARTS LIST

<u>ILLUSTRATION NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
1	123/3050081	TRAY
2	123/3050082	BASE
3	123/3150095	BUSH
4	123/3150191	SWITCH PROTECTION
5	123/3150193	FLANGE
6	123/3150194	FLANGE
7	123/3150196	COVER
8	123/3150398	WASHER
9	123/3200028	HANDWHEEL
10	123/3300065	CABLE GRIP
11	123/3600005	GEAR WHEEL
12	123/3650005	EYESHIELD
13	123/5030073	FRONT CASING
14	123/5030075	REAR CASING
15	123/5031002	SPACER
16	123/5050002	DISC HOLDING RING
17	123/5050014	ADJUSTABLE STAND
18	123/5050071	TOOL REST
19	123/5050108	INNER HOUSING
20	123/5050109	OUTER CASING
21	123/5101005-1464507	WHEEL 150x20x16
22	123/5101019-1464511	WHEEL 175x30x25
23	123/5130054	SHAFT
24	123/5130060	MOTOR SHAFT
25	123/5172008	WORM SCREW
26	123/5200046	BEARING
27	123/5209510	WASHER
28	123/5500548	NUT, M16x1.5
29	123/5554005	SECURING PLATE
30	123/7357021	STATOR
31	123/7400014	SWITCH
32	123/7450016	CAPACITOR

