

SM59 PARTS DIAGRAM

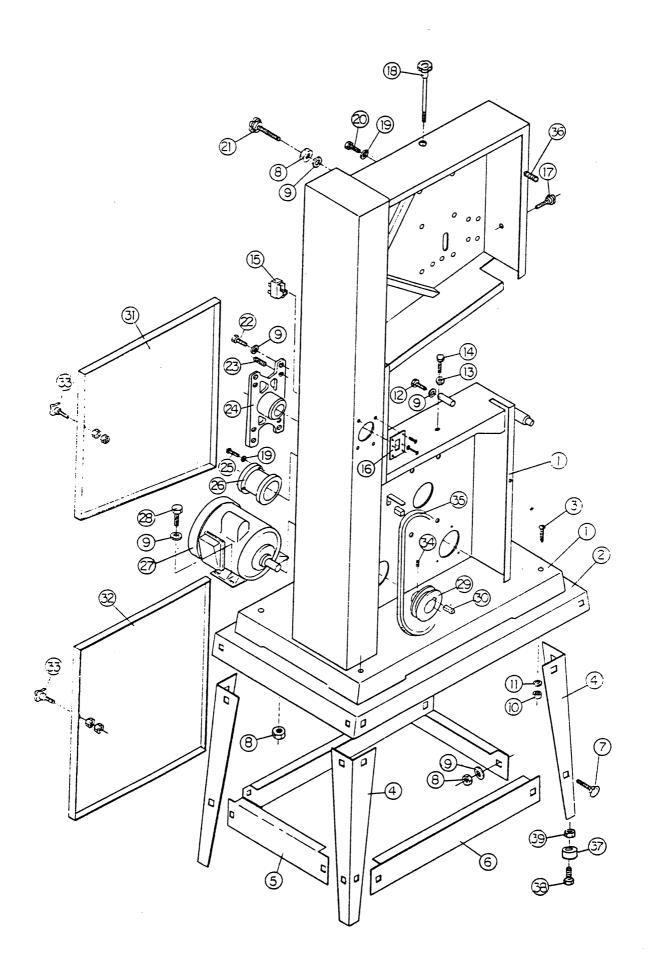

```
ITEM
 NO.
                     DESCRIPTION
  1
                     BASE AND FRAME, WELDED
  2
                     TOP, STAND
  3
                     SCREW
  4
                     LEG
  5
                     BRACE, SIDE ANGLE
  6
                     BRACE, FRONT AND REAR ANGLE
  7
                   BOLT, CAP HD. SQ. SHOULDER
  8
                     NUT, HEX
  9
                     WASHER,
 10
                     NUT, HEX
 11
                     WASHER,
 12
                     SCREW,
 13
                     NUT, HEX.
 14
                     SCREW, HEX. HD.
 15
                     SWITCH
16
                    PLATE, SWITCH
 17
                    SCREW, LOCK KNOB
18
                    SCREW, TENSION "
19
                    WASHER,
20
                    SCREW, HEX. HD.
21
                    SCREW, TILT
22
                    SCREW, HEX. HD.
23
                    SCREW, ADJUSTING
24
                    HOUSING, LOWER BEARING
25
                    SCREW, ROUND HD.
26
                    OUTLET, DUST
27
                    MOTOR
28
                    SCREW, HEX HD.
29
                    PULLEY,
30
                    KEY
3 1
                    DOOR, UPPER WHEEL
32
                    DOOR, LOWER WHEEL
33
                    SCREW, LOCK KNOB
34
                    SCREW, SET
35
                    V-BELT
36
                    S'CREW, HEX. HD.
37
                   FOOT, RUBBER PAD
38
                   SCREW, HEX. HD.
39
                   NUT, HEX.
```

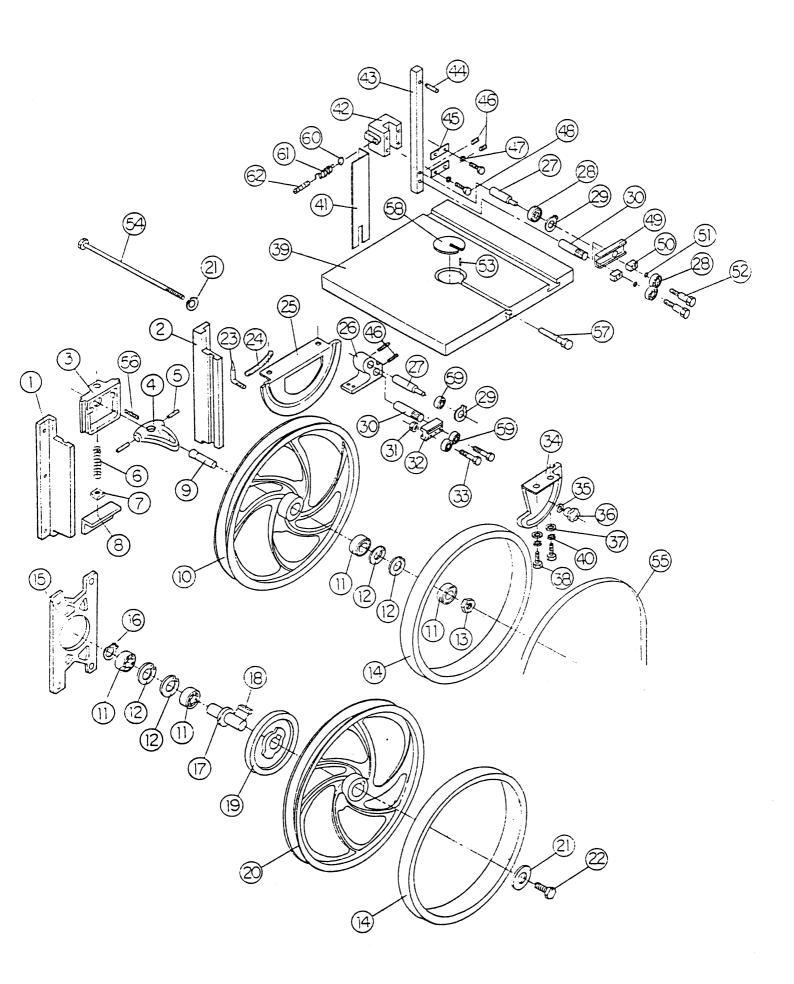

| LEFT BRACKET, UPPER HOUSING RIGHT, BRACKET, UPPER HOUSING BRACKET, UPPER MOUNT HOUSING BRACKET, UPPER WHEEL SHAFT SUPPORT PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, RING, RETAINING, | NO. 35 36 37 38 39 40 41 42 43 44 | DESCRIPTION WASHER KNOB, TRUNNION ADJUSTING WASHER, SCREW, HEX. HD. TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE PIN, SPRING |
|---|--|--|
| RIGHT, BRACKET, UPPER HOUSING BRACKET, UPPER MOUNT HOUSING BRACKET, UPPER WHEEL SHAFT SUPPORT PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 36 37 38 39 40 41 42 43 | KNOB, TRUNNION ADJUSTING WASHER, SCREW, HEX. HD. TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| RIGHT, BRACKET, UPPER HOUSING BRACKET, UPPER MOUNT HOUSING BRACKET, UPPER WHEEL SHAFT SUPPORT PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 36 37 38 39 40 41 42 43 | KNOB, TRUNNION ADJUSTING WASHER, SCREW, HEX. HD. TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| BRACKET, UPPER MOUNT HOUSING BRACKET, UPPER WHEEL SHAFT SUPPORT PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 37 38 39 40 41 42 43 44 | WASHER, SCREW, HEX. HD. TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| BRACKET, UPPER WHEEL SHAFT SUPPORT PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 38 40 41 42 43 44 | SCREW, HEX. HD. TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| PIN, PIVOT SPRING NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 39 40 41 42 43 44 | TABLE, BAND SAW WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| NUT, SQ. TENSION ADJUSTING BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 40 41 43 44 | WASHER, LOCK GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 41 42 43 44 | GUARD, BLADE HOLDER, GUIDE BAR BAR, GUIDE |
| BRACKET, ANGLE SHAFT, UPPER WHEEL WHEEL, UPPER BEARING, | 44 43 44 | HOLDER, GUIDE BAR BAR, GUIDE |
| WHEEL, UPPER BEARING, | 44 44 | BAR, GUIDE |
| WHEEL, UPPER BEARING, | ЦЦ | • |
| * | | |
| RING, RETAINING, | | PLATE, CLAMPING |
| | | SET SCREW |
| NUT, HEX. | | WASHER, |
| TIRE, WHEEL | | SCREW, HEX. HD. |
| BRACKET, INSIDE LOWER MOUNTING | | HOLDER, UPPER BLADE GUIDE |
| | · · | BLOCK, MOUNTING, UPPER BEARING |
| SHAFT, LOWER WHEEL | | WASHER, RETAINING, |
| KEY, | | SCREW, HEX. HD. |
| PULLEY, DRIVEN | - | PIN |
| WHEEL, LOWER | | BOLT, TRUMNION TENSION |
| WASHER, | | BLADE |
| SCREW, HEX. HD. | | SET SCREW |
| POINTER | | PIN, TAPERED |
| SCALE | | INSERT, TABLE |
| TRUNNION, REAR | | BEARING, BALL |
| BRACKET, LOWER GUIDE | • | BALL, STEEL |
| ROD, BEARING GUIDE | | SPRING |
| | | SCREW, SEE |
| | | 5000 W. ACT |
| | | |
| NUT, HEX. | | |
| HOLDER, LOWER BLADE GUIDE | | • |
| SCREW, HEX. HD. | | |
| TRUNNION W/SLOT | | |
| | NUT, HEX. TIRE, WHEEL BRACKET, INSIDE LOWER MOUNTING RING, RETAINING, SHAFT, LOWER WHEEL KEY, PULLEY, DRIVEN WHEEL, LOWER WASHER, SCREW, HEX. HD. POINTER SCALE TRUNNION, REAR BRACKET, LOWER GUIDE ROD, BEARING GUIDE BEARING, BALL RING, RETAINING, ROD, BEARING GUIDE NUT, HEX. HOLDER, LOWER BLADE GUIDE SCREW, HEX. HD. | RING, RETAINING, NUT, HEX. TIRE, WHEEL BRACKET, INSIDE LOWER MOUNTING RING, RETAINING, SHAFT, LOWER WHEEL KEY, PULLEY, DRIVEN WHEEL, LOWER WASHER, SCREW, HEX. HD. POINTER SCALE TRUNNION, REAR BRACKET, LOWER GUIDE ROD, BEARING GUIDE BEARING, BALL RING, RETAINING, ROD, BEARING GUIDE NUT, HEX. HOLDER, LOWER BLADE GUIDE SCREW, HEX. HD. |