



Item	Part No.	Description
1	SUPERMIG100-01	Potentiometer Knob
2	SUPERMIG100-02	Switch
3	SUPERMIG100-03	Power Switch
4	SUPERMIG100-04	LED Light
5	SUPERMIG100-05	Mig Torch 2m
6	SUPERMIG100-06	Earth Clamp
8	SUPERMIG100-08	Self Tapping Screw ST5 x 12
9	SUPERMIG100-09	Torch Connection M27 x 1.5
10	SUPERMIG100-10	Top Handle
11	MSP535.S	Machine Screw Pan Head Phillips M5 x 35mm
12	SN5.S	Steel Nut M5 Zinc
13	SUPERMIG100-13	PCB
14	MSP325.S	Machine Screw Pan Head Phillips M3 x 25
15	SUPERMIG100-15	Base Panel
16	FWM5.S	Flat Washer M5 Zinc
17	SN5.S	Steel Nut M5 Zinc
18	MSP512.S	Machine Screw Pan Head Phillips M5 X 12mm
19	SUPERMIG100-19	Rubber Foot
20	SUPERMIG100-20	Side Panel, Left
21	SUPERMIG100-21	Side Panel, Right

Item	Part No.	Description
22	SUPERMIG100-22	Foot Bracket for Transformer
23	FWM5.S	Flat Washer M5 Zinc
24	SUPERMIG100-24	Transformer
25	SUPERMIG100-25	Thermostat
26	SUPERMIG100-26	Power Cord Holder
27	SUPERMIG100-27	Fan
28	SUPERMIG100-28	Spool Holder
29	MSP412.S	Machine Screw Pan Head Phillips M4 X 12mm
30	FWM4.S	Flat Washer M4
31	SN4.S	Steel Nut M4 Zinc
32	SUPERMIG100-32	Middle Panel
33	MSP450.S	Machine Screw Pan Head Phillips M4 x 50mm
34	SUPERMIG100-34	Wire Feed Motor
35	SUPERMIG100-35	Casing Screw M4 x 12
36	SUPERMIG100-36	Top Panel
37	SN4.S	Steel Nut M4 Zinc
38	NLN4.S	Nyloc Nut M4 Zinc
39	SUPERMIG100-39	Axle
40	SUPERMIG100-40	Potentiometer

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

**IMPORTANT:** No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.