


PARTS LIST FOR: HEAVY DUTY AIR JACK MODEL: YAJ20B.V2

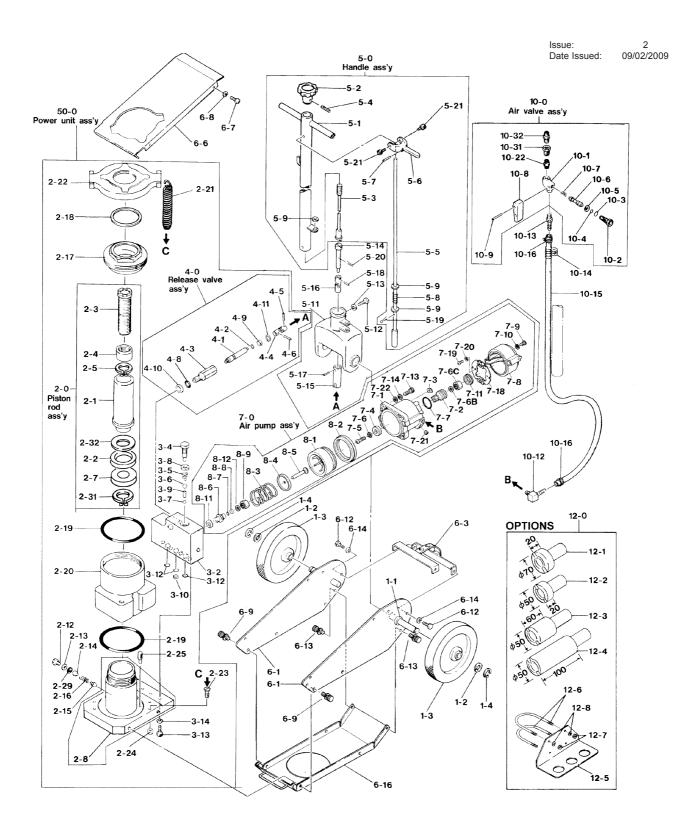

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

Scie UK Distributor
Image: Comparison of the comparison o



PARTS LIST FOR: **HEAVY DUTY AIR JACK** MODEL: YAJ20B.V2

| ITEM | PART NO | DESCRIPTION | ITEM | PART NO | DESCRIPTION |
|--------------|----------------------------|-----------------------------------|--------------|----------------------------|---------------------|
| 1-1 | YAJ20B.1-1 | Wheel shaft | 5-18 | YAJ20B.5-18 | Spring pin |
| 1-2 | YAJ20B.1-2 | Washer | 5-20 | YAJ20B.5-20 | Cotter pin |
| 1-3 | YAJ20B.1-3 | Wheel | 6-1 | YAJ20B.6-1 | Frame |
| 1-4 | YAJ20B.1-4 | Snap ring | 6-3 | YAJ20B.6-3 | Handle fork bracket |
| 2-0 | YAJ20B.2-0 | Piston rod assembly | 6-6 | YAJ20B.6-6 | Upper cover |
| 2-1 | | Piston rod | 6-7 | YAJ20B.6-7 | Machine screw |
| 2-2* | | Packing | 6-8 | YAJ20B.6-8 | Lock washer |
| 2-3 | | Screw | 6-9 | YAJ20B.6-9 | Bolt |
| 2-4 | | Bush | 6-12 | YAJ20B.6-12 | Bolt |
| 2-5 | | Snap ring | 6-13 | YAJ20B.6-13 | Bolt |
| 2-7 | | Retainer packing | 6-14 | YAJ20B.6-14 | Spring washer |
| 2-31 | | Snap ring | 6-16 | YAJ20B.6-16 | Lower cover |
| 2-32 | | Back up ring | 7-0 | YAJ20B.7-0 | Air pump assembly |
| 2-8 | YAJ20B.2-8 | Cylinder (including base) | 7-1 | | Body, air pump |
| 2-12 | YAJ20B.2-12 | Safety valve cap plug | 7-2 | | Servo valve |
| 2-13* | YAJ20B.2-13 | Rubber packing | 7-3 | | Packing |
| 2-14 | YAJ20B.2-14 | Retainer | 7-4 | | Packing guide |
| 2-15 | YAJ20B.2-15 | Safety valve | 7-5 | | Bolt |
| 2-16 | YAJ20B.2-16 | Spring | 7-6 | | Lock washer |
| 2-17 | YAJ20B.2-17 | Tank nut | 7-6B | | Washer |
| 2-18 | YAJ20B.2-18 | Oil seal | 7-6C | | U' Nut |
| 2-19* | YAJ20B.2-19 | O-ring | 7-7 | | O-ring |
| 2-20 | YAJ20B.2-20 | Oil tank | 7-8 | | Muffler cover |
| 2-21 | YAJ20B.2-21 | Spring | 7-9 | | Bolt |
| 2-22 | YAJ20B.2-22 | Spring, hanger | 7-10 | | Lock washer |
| 2-23 | YAJ20B.2-23 | Screw | 7-11* | | Packing |
| 2-24 | YAJ20B.2-24 | Nut | 7-13 | | Bolt |
| 2-25 | YAJ20B.2-25 | Oil strainer | 7-14 | | Spring washer |
| 2-29 3-2 | YAJ20B.2-29 | Rubber packing Oil box | 7-18 7-19 | | Plate Screw |
| 3-2 3-4 | YAJ20B.3-2 YAJ20B.3-4 | | | | |
| 3-4 3-5 | YAJ20B.3-4 YAJ20B.3-5 | Bolt Spring | 7-20 7-21 | | Spring washer |
| 3-5 3-6 | YAJ20B.3-5 YAJ20B.3-6 | Spring Steel ball | 7-21 | | Plug Washer |
| 3-0 | YAJ20B.3-0 YAJ20B.3-7 | Steel ball | 8-1 | | Air piston |
| 3-8 | YAJ20B.3-8 | Copper packing | 8-2* | | Packing |
| 3-9 | YAJ20B.3-9 | Separator | 8-3 | | Spring |
| 3-10 | YAJ20B.3-10 | Back up ring | 8-4 | | Spring retainer |
| 3-12* | YAJ20B.3-12 | O-ring | 8-5 | | Plunger |
| 3-13 | YAJ20B.3-13 | Bolt | 8-6 | | Pump cylinder |
| 3-14 | YAJ20B.3-14 | Spring washer | 8-7* | | O-ring |
| 4-0 | YAJ20B.4-0 | Release valve assembly | 8-8* | | Back up ring |
| 4-1 | | Release valve | 8-9 | | Cap nut |
| 4-2* | | O-ring | 8-11* | | Copper packing |
| 4-3 | | Release valve guide | 8-12 | | Retainer |
| 4-4 | | Universal joint | 10-0 | YAJ20B.10-0 | Air valve assembly |
| 4-5 | | Spring pin | 10-1 | | Air valve body |
| 4-6 | | Spring pin | 10-2 | | Nut |
| 4-8* | | O-ring | 10-3* | | O-ring |
| 4-9 | | Washer | 10-4* | | O-ring |
| 4-10* | | Copper packing | 10-5* | | Packing |
| 4-11 | | Snap ring | 10-6 | | Throttle |
| 5-0 | YAJ20B.5-0 | Handle assembly | 10-7 | | Spring |
| 5-1 | | Handle | 10-8 | | Lever |
| 5-2 | | Knob | 10-9 | | Lever pin |
| 5-3 | | Connecting rod | 10-12 | | Pump elbow |
| 5-4 | | Spring pin | 10-13 | | Hose connector |
| 5-5 | | Stopper | 10-14 | | Spring |
| 5-6 | | Lock lever | 10-15 | | Air hose |
| 5-7 | | Spring pin | 10-16 | | Hose band |
| 5-8 | | Spring | 10-22 | | Filter |
| 5.9 | | Washer | 10-31 | | Bush |
| 5-19 | | Cotter pin | 10-32 | | Plug |
| 5-21 | | Bolt | 12-1 | YAJ20B.12-1 | Adaptor A |
| 5-11 | YAJ20B.5-11 | Handle fork | 12-2 | YAJ20B.12-2 | Adaptor B |
| 5-12 | YAJ20B.5-12 | Bolt Spring weaker | 12-3 | YAJ20B.12-3 | Adaptor C |
| 5-13 | YAJ20B.5-13 | Spring washer | 12-4 | YAJ20B.12-4 | Adaptor D |
| 5-14 5-15 | YAJ20B.5-14 | Connecting rod | 12-5 | YAJ20B.12-5 | Adaptor holder |
| 5-15 5-16 | YAJ20B.5-15 YAJ20B.5-16 | Connecting rod Universal joint | 12-6 12-7 | YAJ20B.12-6 YAJ20B.12-7 | U-bolt Nut |
| 5-16 5-17 | | Spring pin | 12-7 | | Spring washer |
| 0-17 | YAJ20B.5-17 | Spring pin | 12-0 | YAJ20B.12-8 | oping washer |

Items marked with a .*. are available in a Repair Kit - Part No: YAJ20B.V2-RK.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of product. WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim. INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

