

Visor WP-AIR/07 Frame WP-AIR/10





# WP-AIR/07 - Spare Visor WP-AIR/10 - Spare Frame

## **Fitting Instructions**

Disengage tab from centre of visor and lower the flap. Carefully press the sides of the visor and lift it from the visor frame.

Flex replacement visor and insert the top and sides into the visor frame, ensuring that the top visor tabs slide outside of the frame. Swing the bottom of the visor into place, lift the flap and engage the tab through visor centre hole.

## Storage

Store in a clean dry area away from direct sunlight and heat temp. 0-45°, atmospheric pressure 800-1300 mbar, humidity 0-90%. Good quality commercial packing should be used.

#### Maintenance

Clean regularly with a damp cloth. Do not use hydrocarbons, chemicals, cleaning fluids or solvents on the visor. If necessary, a mild solution of washing-up liquid and warm water may be used.



### Approvals

The visor is marked:-

TREND 2 F CE0194

Number "2" is Optical class 2 - is the permissible tolerance for refractive power (EN166).

Letter "F" is the "low energy impact" relating to the protection against high speed particles (EN166). Note that contact of the visor with your skin will not cause allergic reactions under normal conditions. It is unlikely that any contact will occur in normal conditions of use.

The frame is marked:-TREND EN166: 1995 34-F

EN166:1995 is the harmonised European Standard Number.

Number "3" is protection against droplets and splashes or liquids.

Number "4" is protection against large dust particles.

Letter "-F" is the symbol for resistance to high speed particles.



Visor ref. WP-AIR/07 must only be used with the Trend Airshield.

## © Trend Machinery & Cutting Tools Ltd 2000 E & OE

# Trend Machinery & Cutting Tools Ltd

Unit 6 Odhams Trading Estate Watford WD2 5TR

Technical Support: 01923 224681

Fax: 01923 236879

Email: mailserver@trendm.co.uk WWW: www.trendm.co.uk







