



AIR/PRO
THP2 Filter Pack
AIR/P/1
Air Flow Indicator
WP-AIR/P/02

Please
read carefully
before use



INST/AIR/P/FA v3.1

trend[®]
routing technology

THP2 FILTER PACK
REF. AIR/P/1
AIR FLOW INDICATOR
REF. WP-AIR/P/02

Thank you for purchasing this Trend product which should give lasting performance if used in accordance with these instructions.

INTENDED USE

This accessory is intended to be used with the Airshield Pro.

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool instructions before use.

 
PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

Users must be competent in using woodworking equipment before using our products.



Ensure working position is comfortable. Please keep children and visitors away from tools and work area. All tools have a residual risk, so must therefore be handled with caution.

FILTER FITTING INSTRUCTIONS 

- Lift the cover as shown.

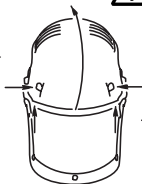

  - Hold the neck of the fitted air filter and push firmly towards sealing face to release from securing tabs and lift filter upwards to remove. Discard appropriately.
- Locate new air filter against sealing face. Push firmly toward sealing face and downwards. Filter will click in securing tabs.
- Repeat for other filter.

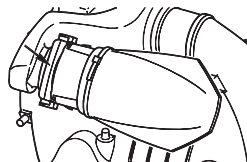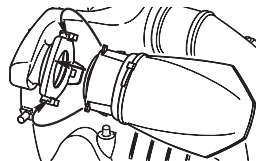

- Refit cover.



Precautions are to be taken to prevent inhalation of harmful dust or contaminant on the surface or retained on the filter and inside the cover.

ENVIRONMENTAL PROTECTION

Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmental-friendly recycling.

The product and its accessories at the end of its life should be sorted for environmental-friendly recycling.


GUARANTEE

 
All Trend products are guaranteed against any defects in either workmanship or material, except products that have been damaged due to improper use or maintenance.

© Trend Machinery & Cutting Tools Ltd. 2014 E&OE

® All trademarks acknowledged

 **Trend Machinery & Cutting Tools Ltd.**
Tel: 0044(0)1923 249911
technical@trendm.co.uk
www.trend-uk.com

 **Trend Routing Technology Inc.**
Tel: 336 292 5051
technical@trend-usa.com
www.trend-usa.com

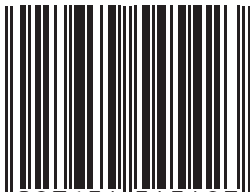


5 027654 545423 >



RECYCLABLE

 Press the red on/off switch to operate the fan.
The red ball is raised to the top of the indicator tube if the system is operating correctly.

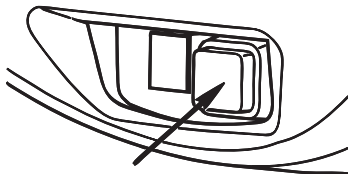

If the red ball is raised to less than half the height of the tube then either the battery charge is low or the filters are blocked and need replacing.

Low Battery Warning

If an audible regular intermittent tone sounds, recharge or replace the battery pack.

MAINTENANCE

Please use Trend only spare parts and accessories.

Filter Storage

Replacement filters are to be left in air sealed bags and expiry dates to be checked regularly.

Functional Test

The purpose of this test is to ensure that the airflow through the respirator is in excess of the minimum design value of 150 litres per minute (5.6 cf/min).

Proceed as follows:

Ensure that the air filters have been installed correctly as shown previously.

To check the airflow turn the respirator upside down and locate the airflow indicator on the four slots at the front of the respirator.

