



Pushstick PUSHSTICK/1



INST/PUSH/1 v1.0

Please
read carefully
before use

PUSHSTICK REF. PUSHSTICK/1

Thank you for purchasing this Trend product, which should give lasting performance if used in accordance with these instructions.

The following symbols are used throughout these instructions.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions.



Refer to the instruction manual of your power tool/machinery.

This unit must not be put into service until it has been established that the power tool/machinery to be connected to this unit is in compliance with 2006/42/EC (identified by the CE marking on the powertool/machinery).

INTENDED USE

This accessory is intended to be used for guiding small sections of timber over a router or saw table. Do not use the push-stick as a lever or for uses other than those envisaged.

The push-stick is made in compliance with :-

- Directive 98/37/EC Annex 1.
- Harmonized Standard UNI EN1870-1.

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool/machinery instructions before use.

PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

The attention of UK users is drawn to The Provision and Use of Work Equipment Regulations 1998, and any subsequent amendments.

Users should also read the HSE/HSC Safe Use of Woodworking Machinery Approved Code of Practice and Guidance Document and any amendments.

Users must be competent in woodworking equipment before using our products.

Attention should be made to the HSE's Safe Use of Vertical Spindle Moulding Machines Information Sheet No. 18 and any revisions.

© Trend Machinery & Cutting Tools Ltd 2009. E&OE
® All trademarks acknowledged

Trend Machinery & Cutting Tools Ltd.

Odhams Trading Estate St Albans Road
Watford WD24 7TR England
Tel: 0044(0)1923 249911
technical@trendm.co.uk
www.trend-uk.com



RECYCLABLE



PTO

trend[®]
routing technology


OPERATION



The push-stick has been designed for use with a router table or saw table, and should always be used when making any cut less than 300mm in length or, when feeding the last 300mm of a longer cut.

When operating a hand-fed circular saw the operator's leading hand should never be closer than is necessary to the front of the saw and hands should never be in line with the saw blade. When using a push-stick on a hand fed circular saw, the left hand should be moved to a position along the plate of the saw, so that in the event of an unexpected movement of the workpiece, the fingers will not be thrown against the teeth. A push-stick should always be used to remove the cut piece from between the saw and the fence, unless the width of the cut piece exceeds 150mm.

The birds mouth is 90° and should be angled at between 20° to 30° to the workpiece to suit the height of the machinist.

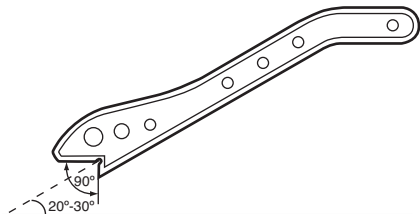

Do not use the push-stick as a lever or for uses other than those envisaged.



Compliance with the safety requirements of the regulations in force is nullified by any modification or tampering with the push-stick.

MAINTENANCE

The accessory has been designed to operate over a long period of time with minimum of maintenance. Continual satisfactory operation depends upon proper tool care and regular cleaning.

Cleaning

- The push-stick is made of thermoplastic material, which is resistant to solvents, oils, greases and water. Do not use concentrated acids or alkalis for cleaning.

Storage

- Hanging holes are provided to store accessory on user supplied peg(s).

ENVIRONMENTAL PROTECTION

Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmental-friendly recycling.

The accessory at the end of its life should be sorted for environmental-friendly recycling.

GUARANTEE

All Trend products guaranteed against any defects in either workmanship or material, except products that have been damaged due to improper use or maintenance.

Safety Points

1. Disconnect power tool and attachment from power supply when not in use, before servicing, when making adjustments and when changing accessories such as bits. Ensure switch is in "off" position and cutter has stopped rotating.
2. Read and understand instructions supplied with power tool, attachment and bit.
3. Current Personal Protective Equipment (PPE) for eye, ear and respiratory protection must be worn.
4. Before each use check cutter is sharp and free from damage. Do not use if bit is dull, broken or cracked or if any damage is noticeable or suspected.
5. The maximum speed (nmax) marked on tool or in instructions or on packaging shall not be exceeded. Where stated, the speed range should be adhered to.
6. Insert the shank into the router collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of shank length is held in collet. Ensure clamping surfaces are clean.
7. Check all fixing and fastening nuts, bolts and screws on power tool, attachment and cutting tools are correctly assembled, tight and to correct torque setting before use.
8. Ensure all visors, guards and dust extraction is fitted.
9. The direction of routing must always be opposite to the bit's direction of rotation.
10. Do not switch power tool on with the bit touching the workpiece.
11. Trial cuts should be made in waste material before starting any project.
12. Repair of tools is only allowed according to tool manufacturers instructions.
13. Do not take deep cuts in one pass, take several shallow passes to reduce the side load applied to the cutter..

Please see www.trend-usa.com/safety for more safety advice.



Our policy of continuous improvements mean that specifications may change without notice. Trend Machinery & Cutting Tools cannot be liable for any material rendered unusable or for any form of consequential loss.