

Router Table Back Fence RT/FENCE/A

ROUTER TABLE BACK FENCE REF. RT/FENCE/A

Thank you for purchasing this Trend product which should give lasting performance if used in accordance with these instructions

The following symbols are used throughout these instructions.



INST/RT/F/A v1.0

trend®

routing techno<u>logy</u>

Denotes risk of personal injury. loss of life or damage to the tool in case of non-observance of the instructions

Refer to the instruction manual of vour power tool.

This unit must not be put into service until it has been established that the power tool to be connected to this unit is in compliance with 2006/42/EC (identified by the CE marking on the power tool).

INTENDED USE

The back fence is intended to be used with a user made router table

It is to be used with a table top with router fitted, side safety pressure, a non-volt release switch, pushstick. We recommend a fine height adjuster is fitted to the router.

Table top will require two slots 8.5mm wide x 100mm long at 408mm centres.

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool instructions before use. PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

The attention of UK users is drawn to The Provision and Use of Work Equipment Regulations 1998, and any subsequent amendments. Users should also read the HSE/HSC Safe Use of Woodworking Machinery Approved Code of Practice and Guidance Document and any amendments.

Users must be competent in using woodworking equipment before using our products.

Attention should be made to the HSE's Safe Use of Vertical Spindle Moulding machines information sheet No.18 and any revisions. Ensure working position is comfortable. Please keep children and visitors away from tools and work area. All tools will have a residual, risk, so must therefore be handled with caution


Only use tooling that meets EN847-1/2 safety standard and any amendments.

ITEMS REQUIRED

- User made router table top.
- Hand tools.
- Router table safety accessories.
- Bouter

ITEMS ENCLOSED & DESCRIPTION OF PARTS

- A. Back fence x1 M Guard bolt x2 B. Fence cheek x1 N. Edge planing C. Dust spout x1 rod x2 D. Back fence locking O. Edge planing knobs x2 rod fixing knob x2 E Back fence P. Edge planing washer x2 rod fixing spring x2 F. Back fence bolt **x2** Q. Edge planing G. Scale x1 rod T-nut x2
- H. Top pressure **x1** R. Dust spout fixing I. Top guard x1 screws x4
- Plastic washer S. Edge planing rod thin x2 fixing washer x2
- K Plastic washer T Instructions x2 thick x2
- I Guard knob x2

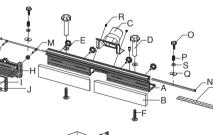

ASSEMBLY

Assemble the back fence as showing diagram.

Slide dust spout into extrusion from one end before fitting fence cheeks knobs.

Slide dust spout into extrusion from one end before fitting fence cheeks knobs.



Scale is self adhesive backed and can be placed onto the top of the fence. Ensure '0' is centered.

Scale can be trimmed to the length of the)(2) back fence.

<u>)</u>

Fitting Back Fence

 
/!\

 
Consider working environment before

usina tools.



For some applications the thick and thin washer can be swapped over. For example, when profile scribing using a pushblock.





PTO

ENVIRONMENTAL PROTECTION Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmentalfriendly recycling. The product and its accessories at the end of its life should be sorted for environmentalfriendly recycling.

GUARANTEE

All Trend products are guaranteed against any defects in either workmanship or material. except products that have been damaged due to improper use or maintenance.

© Trend Machinery & Cutting Tools Ltd. 2015 E&OE ® All trademarks acknowledged

Trend Machinery & Cutting Tools Ltd.

Odhams Trading Estate St. Albans Road Watford WD24 7TR England Tel: 0044(0)1923 249911 technical@trendm.co.uk www.trend-uk.com



 


Please follow instructions supplied with the router table and router before use.

Back Fence Adjustment

Adjust back fence position by loosening the two large knobs and pushing the fence forwards or backwards.

Lock fence position by tightening the two large knobs.





- To adjust fence cheeks loosen four small back knobs. Slide cheeks in and out to suit cutter. Leave gap of 3mm between cheek and cutter.
- Lock cheeks by tightening four small knobs


Feed Direction 2

- Always work with constant, medium rate. Feeding too slow will results in burn marks and excessive heat build up of the cutter.
- Good results will be obtained by removing small amounts of material in several passes.

   Always feed work in the opposite direction to the direction of rotation of the router cutter.








Edge Planing

 
The router table fence features fully independent fence cheeks which allow the fence to double as a vertical planer for a 1.4mm or 2.4mm offset. To set up for edge planing, remove the two jointing rods which are stored in the top slot of the fence. loosen the outfeed fence cheek and place the rods into the shallow recesses behind the outfeed fence.




The rods can be parked in the T-slots in the top of the back fence. The rods are held by tightening the knobs.



 slide the rods into the deeper recesses, as shown below and tighten the fence cheeks locking knobs.



 To position the fence at the 2.4mm setting. slide the rods into the shallower recesses as shown below and tighten the fence cheeks locking knobs.



After use, keep back fence assembled and fitted to the router table top.

MAINTENANCE /!

Please use only Trend original spare parts and accessories

Continual satisfactory operation depends upon proper tool care and regular cleaning.

Cleaning

Regularly clean with a soft cloth.

Lubrication

Accessory requires no additional lubrication.

Storage

When not in use the router table should be stored safely. It is advisable to cover the table

Safety Points

- Disconnect power tool and attachment from power supply when not in use, before servicing, when making adjustments and when changing accessories such as cutters. Ensure switch is in "off" position and cutter has stopped rotating.
- Bead and understand instructions supplied with power tool, attachment and cutter
- Current Personal Protective Equipment (PPE) for eve, ear and respiratory protection must be worn. Keep hands, hair and clothes clear of the cutter.
- Before each use check cutter is sharp and free from damage. Do not use if cutter is dull, broken or cracked or if any damage is noticeable or suspected
- The maximum speed (nmax) marked on tool or in instructions or on packaging shall not be exceeded. Where stated, the speed range should be adhered to.
- Insert the shank into the router collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of shank length is held in collet. Ensure clamping surfaces are clean.
- Check all fixing and fastening nuts, bolts and screws on power tool. attachment and cutting tools are correctly assembled, tight and to correct torque settina before use.
- Ensure all visors, guards and dust extraction is fitted.
- The direction of routing must always be opposite to the cutter's direction of rotation.
- 10. Do not switch power tool on with the cutter touching the workpiece.
- 11. Trial cuts should be made in waste material before starting any project.
- 12. Repair of tools is only allowed according to tool manufacturers instructions
- 13. Do not take deep cuts in one pass, take shallow passes to reduce the side load applied to the cutter.
- Please see www.trend-uk.com/safety for more safety advice.



Our policy of continuous improvements mean that specifications may change without notice. Trend Machinery & Cutting Tools Ltd. cannot be held liable for any material rendered unusable, or for any form of consequential loss.

To position the fence at the 1.4mm setting.

