



ANGLE GRINDNER - T18S/AG115 - SPARE PARTS			
No.	Qty.	Name	Part Number
1A	1	Outside binder plate	WP-T18/AG01A
1B	1	Quick release flange	WP-T18/AG01B
2	1	Grinding wheel	WP-T18/AG002
3	1	Inside binder plate	WP-T18/AG003
4A	1	115mm grinding wheel protection cover grinding	WP-T18/AG04A
4B	1	115mm grinding wheel protection cover cutting	WP-T18/AG04B
5	1	Output shaft	
6	1	Scraper seal	
7	4	Cross recessed pan head screw m4x12	
8	4	Ø4 spring washer	
9	1	Front cover	
10	1	Bearing 6201-2rs	
11	1	Resilient retaining ring for ø32 holes	
12	1	Main gear	
13	1	Hk0810 needle roller bearing	
14	1	Ø6 shaft with steel wire retaining ring	
15	4	Tapping screw st3.9x25	
16	1	Head housing	
17	1	Head housing lock button spring	
18	1	Head shell lock button	
19	1	Nut	
20	1	Pinion	
21	1	O-ring	
22	1	Bearing 629	
23	1	Head housing bearing press plate	
24	2	Countersunk head screw m4x8	
25	1	Fan	
26	1	Brushless motor	
27	1	Air guide ring	
28	1	Bearing 607	
29	1	Anti-self-locking button torsion spring	
30	1	2 X16 pin	
31	1	Switch lock knob	
32	1	Switch lock knob	
33	1	Switch	
34	1	Control board	
35	1	Electrode plate	
36	1	Battery pack	T18S/BA4AM, T18S/BA5A
37	1 pair	Dustproof window	WP-T18/AG037
38	1	Housing	
39	8	Tapping screw st3.9x16	
40	1	Assist handle	WP-T18/AG040

ANGLE GRINDNER - T18S/AG115 - SPARE PARTS			
No.	Qty.	Name	Part Number
41	1	Auxiliary handle anti-slip ring	WP-T18/AG041
42	1	Wrench clip	WP-T18/AG042
43	1	Wrench	WP-T18/AG043
44	1	Rubber ring for inner pressing plate	WP-T18/AG044
45	1	Ventilation window	
46	1	Handle assembly - 40-43	WP-T18/AG046
47	1	Inside binder plate assembly - 3, 44	WP-T18/AG047