



WP-T18/ID046  
Belt Hook Assembly  
- 38-39

<b>IMPACT DRIVER - T18S/ID - SPARE PARTS</b>			
<b>No.</b>	<b>Qty.</b>	<b>Name</b>	<b>Part Number</b>
1	4	Hexagon socket tapping screw st3.9x25	
2	4	Ø4 spring washer	
3	4	4mm flat gasket	
4	1	Shaft with steel wire retaining ring	
5	1	Small washer (1)	
6	1	Remove and install the spring sleeve of the screwdriver	
7	1	Disassemble and install the screwdriver	
8	1	Ø3.5 Steel ball	
9	1	Aluminum head shell	
10	1	Type sealing ring	
11	1	Shaft sleeve	
12	1	Gasket	
13	1	Outer shaft	
14	2	Ø5.5 Steel ball	
15	1	Impact block	
16	24	Ø4 steel ball	
17	2	Gasket	
18	1	Torsion spring	
19	1	Inner shaft	
20	3	Planetary gear	
21	3	Ø6*15.5 Pin	
22	1	Gasket	
23	1	6902z	
24	1	Internal ring gear	
25	1	Sealing ring 45x2	
26	1	Gear box	
27	1	Motor gear	
28		Green shell paper gasket	
29	1	Brushless motor	
30	1	Housing	
31	1	Switch lever	
32	1	Led transparent lampshade	
33	1	Switch button	
34	1	Brushless motor control circuit board	
35	1	Manufacture circuit board bracket	
36	8	St2.9x14	
37	1	Control panel indicator lampshade	
38	1	Belt buckle	WP-T18/ID038
39	1	M3x10 belt pad	WP-T18/ID039
40	2	Serrated lock washers external teeth	
41	2	M3 hexagon nut	
42	1	Electrode plate	
43	1	Batttery pack 2p	T18S/BA4AM, T18S/BA5A
46	1	Belt Hook Assembly - 38-39	WP-T18/ID046