



MITRE SAW - T18S/MS184 - SPARE PARTS			
No.	Qty.	Name	Part Number
1	6	Screw	
2	10	Washer	WP-T18/MS002
3	7	Self-tapping screw	
4	1	Top handle	
5	1	Switch trigger	
6A	1	Extension rod l	WP-T18/MS06A
6B	1	Extension rod r	WP-T18/MS06B
7	4	Wool ring	
8	1	Shoulder screw	
9	1	Battery pin	
10	1	Down handle	
11	13	Screw	
12	1	Warning label	
13	1	Trigger spring	
14	1	Micro-switch	
15	1	Dust bag	WP-T18/MS015
16	1	Nut	
17	2	Screw	WP-T18/MS017
19	10	Screw	WP-T18/MS019
20	1	Laser wire cover	
21	1	Laser	
22	1	Laser box	
23	1	Spindle lock pin	
24	3	Circlip	
25	1	Spindle lock pin spring	
26	1	Brand label	
27	1	Inner flange	WP-T18/MS027
28	1	Flat key	
29	1	Arbor	
30	1	Check ring	
31	1	Gear box cover	
32	1	Bearing	
33	1	Bush	
34	1	Spindle lock stop plate	
35	1	Gear	
36	1	Criclip for shaft	
37	1	Copper sleeve	
38	1	Gear case	
39	1	Cuting depth adj. Screw	WP-T18/MS039
40	1	Knurled nut	WP-T18/MS040

MITRE SAW - T18S/MS184 - SPARE PARTS			
No.	Qty.	Name	Part Number
41	1	Screw	
42	4	Nut	
43	1	Bearing	
44	1	Fan guard	
45	1	Rotor	
46	1	Bearing	
47	1	Rubber sleeve	
48	2	Self-tapping screw	
49	1	Stator	
50	1	Rating label	
51	1	Motor housing	
52-150-151	1	Intenal wire-1	
53	2	Coil spring	
54	2	Brush holder	WP-T18/MS054
55	2	Carbon brush	WP-T18/MS055
56	4	Self-tapping screw	
57	1	Motor housing cover	
58	1	Dust outlet	
59	1	Washer	WP-T18/MS059
60	1	Setscrew	
61	1	Blade	CSB/CC18448T
62	1	Outer flange	WP-T18/MS062
63	1	Screw(left)	WP-T18/MS063
64	1	Rubber guard	WP-T18/MS064
65	1	Laser holder	
66	2	Spring washer	
67	2	Lock knob	WP-T18/MS067
68	1	Spring	
69	1	Moving guard	
70	1	Check ring	
71	1	Inner tooth washer	
72	1	Moving guard wheel	
73	2	Bearing	
74	3	Wave washer	
75	1	Link	
76	2	Shoulder screw	
77	5	Washer	WP-T18/MS077
78	1	Bearing cover	
79	1	Crank arm	
80	1	Washer	

MITRE SAW - T18S/MS184 - SPARE PARTS			
No.	Qty.	Name	Part Number
81	1	Spring	
82	1	Knob	
83	2	Striarght bearing	
84	1	Hex bolt	
85	1	Bevel lock handle	
86	1	Washer	
87	1	Bevel scale	
88	1	Location pin knob	
89	1	O-ring	
90	1	Lock pin	
91	1	Washer	
92	1	Cuting depth stop plate	
93	4	Screw	
94	1	Support	
95	1	Big torsional spring	
96	1	Sleeve	
97	1	Rotary shaft	
98	6	Sunk screw	WP-T18/MS098
99	1	Table insert	WP-T18/MS099
100	1	Locknut	
101	1	Socket head screw	
102	1	Lock plate	
103	1	Square nut	
104	1	Socket head screw	
105	2	Setscrew	
106	3	Washer	
107	1	Bevel indicator	
108	1	Wave washer	
109	1	Locknut	
110	2	Washer	
111	1	Rotary shaft	
112	1	Turntable	
113	1	Setscrew	
114	1	Screw	
115	1	Location push button spring	
116	1	Location push button	
117	1	Socket head cap screw	
118	1	Mitre lock handle cover	WP-T18/MS118
119	1	Mitre lock handle	WP-T18/MS119
120	1	Mitre angle lock rod	WP-T18/MS120

MITRE SAW - T18S/MS184 - SPARE PARTS			
No.	Qty.	Name	Part Number
121	1	Mitre indicator	
122	1	Mitre scale	
123	1	Base	
124	1	Locknut	
125	1	Hex key store	
126	1	Hex key	WP-T18/MS126
127	1	Fence	
129	2	Knob	WP-T18/MS129
130	2	Socket head cap screw	
131	2	Buffer ring	
132	2	Guide rod	
133	1	Guide rod support	
134	1	Clamp screw knob	WP-T18/MS134
135	1	Knob	WP-T18/MS135
136	1	Clamp arm	WP-T18/MS136
137	1	Clamp rod	WP-T18/MS137
138	1	Press plate of clamp	WP-T18/MS138
139	2	Spring washer	
140	2	Washer	
141	1	Laser switch	
142	1	Laser switch cover	
143	1	Inductor	
144	1	Screw	WP-T18/MS144
145	1	Fence tip	WP-T18/MS145
146-149	1	Intenal wire-2	
152	1	Dust spout adapotor	WP-T18/S001
153	1	Clamp assembly - 2, 19, 77, 134-138	WP-T18/MS153
154	1	Trenching Screw assembly - 39-40	WP-T18/MS154
155	1	Brush Assembly - 54-55	WP-T18/MS155
156	1	Table Insert Assembly - 98 (x6), 99	WP-T18/MS156
157	1	Mitre Lock Assembly - 2, 19, 77, 118-120	WP-T18/MS157