



T32 SPARE PART LIST			
No.	Qty.	Name	Part Number
1	1	T32 handle	WP-T32/001
2	1	T32 power switch cover	WP-T32/002
3	1	T32 power switch	WP-T32/003
6	1	T32 motor	WP-T32/006
9	1	T32 buckles	WP-T32/009
13	1	T32 rugged wheels	WP-T32/013
14	1	T32 castors	WP-T32/014
22	1	T32 foam piece	WP-T32/022
23	1	T32 tube outlet plug	WP-T32/023
24	1	T32 inlet elbow	WP-T32/024
39	1	T32 wing nut	WP-T32/039
43	2	T32 extension poles	WP-T32/043
44	1	T32 cleaning wand/tube	WP-T32/044
45	1	T32 hose 3m	WP-T32/045
46	1	T32 high efficiency carpet attachment	WP-T32/046
47	1	T32 hard floor attachment	WP-T32/047
48	1	T32 200mm crevice tool	WP-T32/048
49	1	T32 bayonet hose fitting	WP-T32/049
50	1	T32 power tool adaptor	WP-T32/050
51	1	T32 hose connector	WP-T32/051
94	1	Round brush t33a	WP-T33/094
95	1	Crevice tool 200mm t33a	WP-T33/095