



TELESCOPIC VERTICAL TRANSMISSION JACKS

MODEL NO: **500TTJ.V3, 800TTJ.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions




Wear
safety
footwear



Bleed
before
use

1. SAFETY

- ☐ **WARNING:** The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ☐ **WARNING!** Ensure all preliminary checks are carefully carried out before use of jack. Immediately repair or replace damaged parts (use authorised service agent). Ensure use of genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ☐ **WARNING!** Use jack on level, solid ground, preferably concrete. Ensure the floor over which the jack will be transported is swept clean.
- ▲ **DANGER! DO NOT** use on tarmacadam, or any other soft surface as jack may sink or topple. Serious injury may result if ignored.
- ▲ **DANGER!** If jack tips or leans **STOP WHAT YOUR ARE DOING. MOVE QUICKLY TO A SAFE DISTANCE. DO NOT TRY TO HOLD OR STEADY JACK.**
- ✓ Use jack in a suitable work area. Keep the area clean and tidy and free from unrelated materials. Ensure there is adequate lighting.
- ✓ Before use ensure the gearbox weight and size does not exceed the capacity of the jack.
- ✓ Ensure the vehicle is raised and stabilised at the correct height before attempting to move the jack under the vehicle.
- ✓ Ensure the jack saddle is fully lowered and is clean, dry, and oil free before attempting to transport the jack with or without a load.
- ✓ Keep all unauthorised persons away from the jack during lifting and lowering and when in transit.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery, and contain and/or tie back long hair.
- ☐ **WARNING!** Ensure that the load is placed level and centrally on the jack saddle and that it is fixed in place before attempting to lift, lower or transport the load.
- ✓ The lowering speed is now regulated by a slow release mechanism so turn and hold handle until at required height then release.
- ✓ The user shall work in accordance with the instruction handbook
- ✓ It is necessary that the operator can watch the lifting device and the load during all movements.
- ✓ It is not allowed to work under the raised load until it is secured by suitable means.
- ✓ The operator shall be provided with all necessary information about training and about pumping and translating forces.
- ✓ If more than 400N of effort is generated in lifting, the efforts shall be lowered by an additional person.
- ✓ Should the jack make any abnormal sounds during use, **STOP IMMEDIATELY** and contact your local service agent.
- ✓ Ensure the jack is in sound condition and good working order. Take action for immediate repair or replacement of damaged parts. Use genuine parts only. **DO NOT** modify the jack. The use of non-genuine parts may be dangerous and will invalidate the warranty.
- ✗ **DO NOT** exceed the rated capacity of the jack.
- ✗ **DO NOT** raise/lower vehicle lifting platform whilst the transmission jack is being used.
- ✗ **DO NOT** transport the jack with/without a load, with the saddle in the raised position.
- ✗ **DO NOT** get the jack wet, or use it in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** operate the jack when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** lift or support vehicles with the jack and **DO NOT** use the jack as a load sustaining device.
- ✗ **DO NOT** use the jack for any purpose other than removal, transportation and the installation of transmissions.
- ✗ **DO NOT** adjust, or tamper with, the safety valve.
- ✗ **DO NOT** remove any labels from the jack. If the labels are damaged or unclear, replace them.
- ✗ **DO NOT** use brake fluid to top up the hydraulic unit.
- ✓ Use Sealey hydraulic oil only.
- ✓ Use a qualified person to lubricate and maintain the jack.
- ✓ Before storing the jack in a safe area, ensure that all parts, especially the saddle are clean and free of grease and oil.
- ✓ Only use accessories and adapters provided by the manufacturer.
- ✓ The transmission jack can only be operated and used by person trained or familiar with this operation manual.

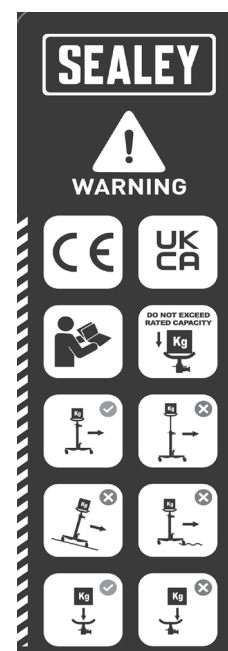

- ✓ The weight of the workpieces to be removed, moved or installed should never exceed the rated capacity of the transmission jack and those of its accessories, and the lifting height should never exceed the maximum stroke of the jack that is indicated on the label.
- ✓ This transmission jack can only be supported on a solid, level and horizontal surface that can withstand the load.

2. INTRODUCTION

Twin axis saddle adjusters allow the gearbox support to be angled in any direction. A 2-stage telescopic piston for reduced clearance lifts. A harden chrome plated piston rod. Foot pedal operation keeps hands-free. Spring loaded dead man's safety release control reduces the risk of inadvertent lowering. Four heavy duty castors, with non-marking nylon wheels, on a sturdy base, make for easy manoeuvrability.

3. SPECIFICATION

| | | |
|--------------------------|------------------|------------------|
| Model No: | 500TTJ.V3 | 800TTJ.V2 |
| Base Size: | 600 x 600mm | 600 x 600mm |
| Capacity: | 600kg | 1000kg |
| Fixed/Adjustable Saddle: | Adjustable | Adjustable |
| Maximum Saddle Height: | 1905mm | 1930mm |
| Minimum Saddle Height: | 885mm | 910mm |
| Ram Extensions: | 2 | 2 |
| Saddle Tilt - Backward: | 10° | 10° |
| Saddle Tilt - Forward: | 10° | 10° |
| Standard: | EN1494 | EN1494 |

4. ASSEMBLY

| | Parts | Quantities | | Parts | Quantities | | Parts | Quantities |
|---|-------------------------|------------|----|----------------|------------|----|------------------------------|------------|
| 1 | Oil cylinder | 1 | 7 | Support strip | 4 | 13 | Nylon locking screw | 4 |
| 2 | Shoulder screw | 1 | 8 | Set screw | 2 | 14 | Foot base | 2 |
| 3 | Shoulder screw | 1 | 9 | Panel assembly | 1 | 15 | Inner hexagonal screw M12x25 | 8 |
| 4 | Y-axis bracket assembly | 1 | 10 | Spacer | 4 | 16 | Hole plug | 8 |
| 5 | X-axis bracket assembly | 1 | 11 | Wing nuts | 4 | 17 | Wheel | 4 |
| 6 | Square neck bolt | 4 | 12 | Screw nut | 2 | | | |





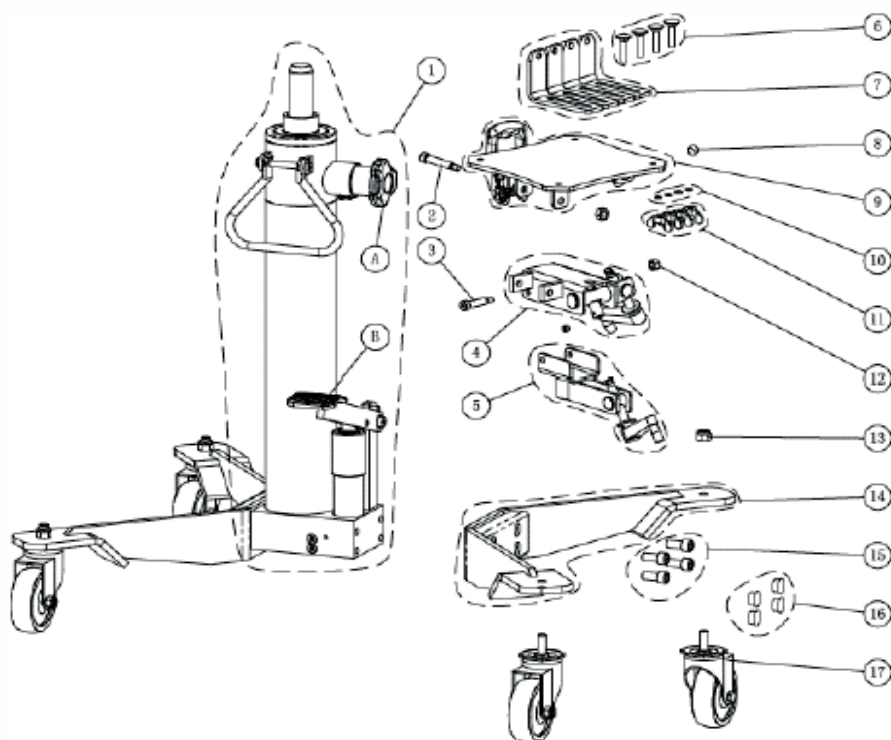


fig.1


- 4.1. Use screw 13 to install the wheel 17 onto the foot base 14 and tighten the screw (fig.2).

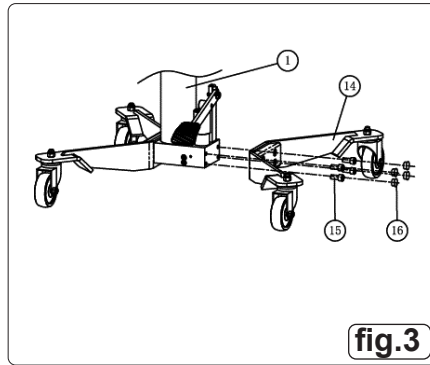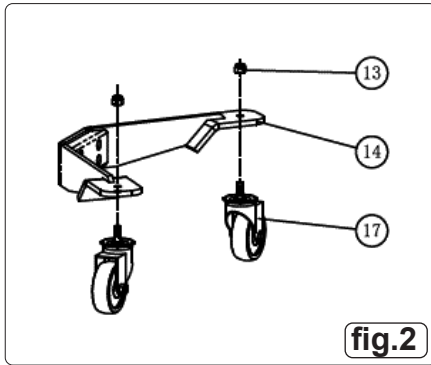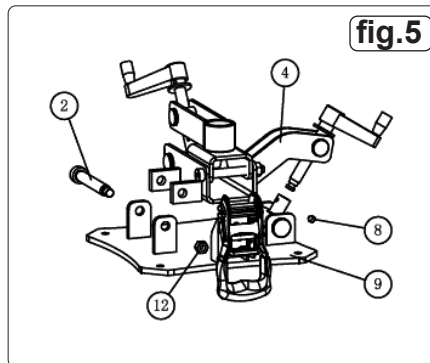

- 4.2. Install the assembled foot base 14 onto the cylinder 1 with the screws 15. When all four wheels are on the ground, lock the screws in turn and cover the hole plug 16 (fig.3).
- 4.3. Install the X-axis bracket assembly 5 onto the Y axis bracket assembly 4 and fix them with plug screws x3 and screw nuts 12. Then install, and lock the set screws 8 as shown in fig.3

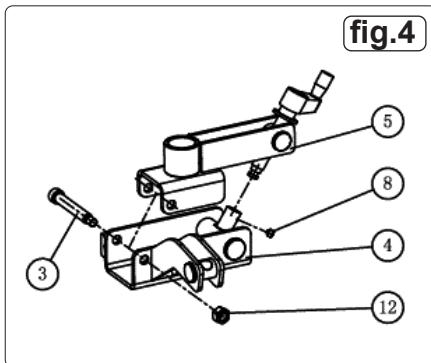

- 4.4. Install as shown in fig.4 fit the installed Y-axis bracket assembly 4 onto the panel 9 and fix them with set screws 2 and screw nuts 12.

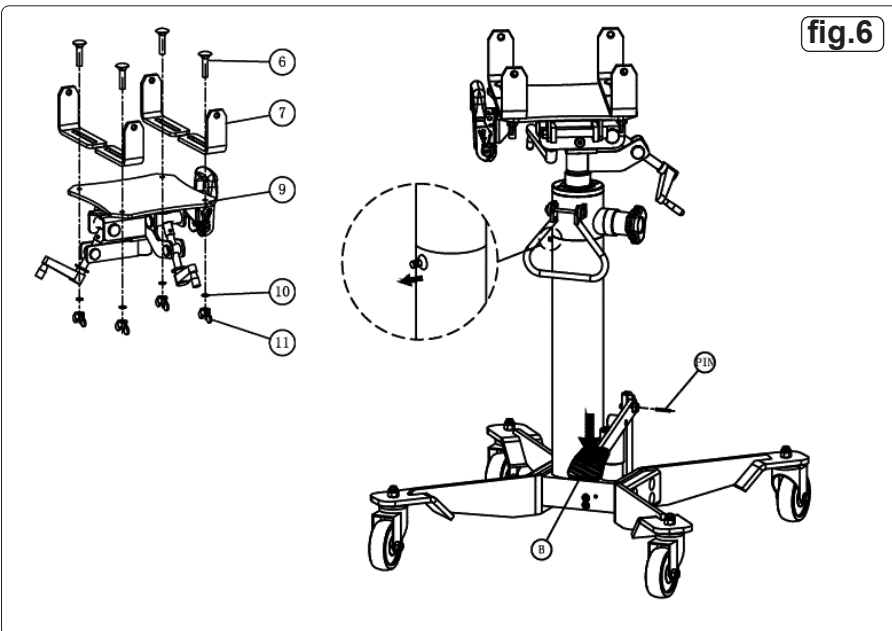



- 4.5. Fix the support strip 7 on the panel assembly 9 with round head square neck bolts 6, flat washers 10 and wing nuts 11, place the assembled bracket on the oil cylinder 1 as shown in fig.5. Then pull out the exhaust rod, press down on the foot pedal B and remove the pin.

NOTE: The exhaust rod cannot completely come out of the rubber plug.

5. PRE-USE CHECK LIST



- 5.1. Before each use, check jack is in sound working order, use following list to form a habitual pre-check procedure. Check items are not: damaged, broken, cracked, bent, malfunctioning, distorted, worn, loose, damage to welds, leaking, dirty, noisy or missing.
- ❑ **WARNING! DO NOT** use jack if any suspect part is found, or if believed to have been subjected to abnormal load or shock. Immediately remove from service and contact an authorised service agent.
- 5.2. **PURGE THE AIR FROM THE HYDRAULIC CYLINDER**
- 5.2.1. Using the Pump Pedal, slowly pump the cylinder. You will observe trapped air escaping from the valve in the Air Vent Valve assembly. Continue to pump until all air is purged.

6. OPERATION

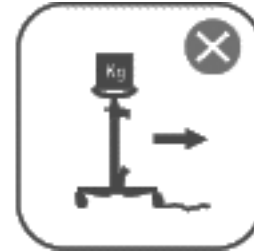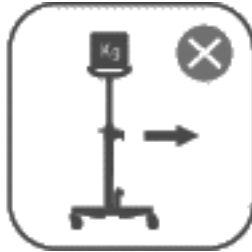

Lower to the lowest position during transporting.

Do not use on inclined and uneven ground

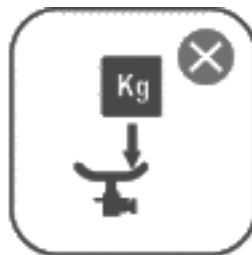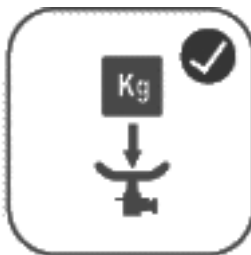

Do not place eccentrically

- ❑ **WARNING!** The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ❑ **WARNING!** Before use, ensure that you read, understand and apply the Safety Instructions in Section 1.
- ❑ **WARNING!** Ensure you prepare the vehicle correctly before attempting to use the Hydraulic Transmission Jack.
- 6.1. **POSITIONING THE JACK BENEATH THE LOAD**
- NOTE:** Before use, ensure that the transmission weight and size does not exceed the capacity of the jack.
- 6.1.1. Ensure the vehicle from which the gearbox or transmission is to be removed is correctly positioned, raised and locked on an appropriate lift system.
- 6.1.2. Ensure that there are no other persons around, or under, the vehicle.
- 6.1.3. Ensure the saddle is in the lowest position. Use the handle to transport and centrally position the jack beneath the transmission.
- 6.1.4. Raise the saddle by pumping the jack foot pedal.
- 6.1.5. When the saddle is just beneath the transmission, re-adjust the alignment if necessary to centralise the saddle.
- 6.2. **LIFTING OF TRANSMISSION JACK**
- 6.2.1. Close relief valve handle A fig.1
- 6.2.2. Press oil pump pedal B fig.1.
- ❑ **Warning!** Ensure the load is central and stable on the jack saddle and that it is fixed securely. Before you loosen the mounting bolts, wrap the ratchet strap over the top of the transmission, and attach the strap tightly before attempting to lift, lower, or transport it.
- 6.3. **LOWERING OF TRANSMISSION JACK**
- 6.3.1. Rotate the pressure relief handle counterclockwise to loose the handle, and the pressure relief valve will be closed automatically.
- 6.4. **TRANSPORTING THE LOAD**
- ❑ **WARNING!** Ensure you read, understand and apply the safety instructions in Section 1.
- 6.4.1. Ensure the jack saddle is fully lowered and the load is fixed in place before attempting to lift, lower, or transport the load.
- 6.4.2. Transport the load over level and solid ground, preferably concrete, and ensure that the floor is swept clean beforehand.
- 6.4.3. Be diligent in continually monitoring the load in transit.
- 6.4.4. Keep all other personnel at a safe distance.
- ▲ **DANGER! DO NOT** use on tarmacadam, or any soft surface as jack may sink or topple. Serious injury or death may result.
- ▲ **DANGER!** If the jack tips or leans, STOP WHAT YOUR ARE DOING AND MOVE QUICKLY TO A SAFE DISTANCE. DO NOT TRY TO HOLD OR STEADY THE JACK. Serious injury or death may result.
- 6.5. **RE-INSTALLING A GEARBOX**
- 6.5.1. To transport, reposition beneath a vehicle, and raise a load up, reverse the procedures outlined above.

7. MAINTENANCE

NOTE: Jacks shall be maintained and repaired in accordance with the manufacturers, instructions. Such maintenance and repair shall be carried out by qualified persons.

7.1. STORAGE

- 7.1.1. When the jack is not in use, the saddle must be in the lowest position to minimise ram and piston corrosion and stored in a dry place.
- 7.2. Check whether the parts of the transmission jack are oil leakage, deformation, damage, etc. everyday.
- 7.3. When refilling the hydraulic system, the characteristics of the hydraulic fluid used in the jack and the level of hydraulic fluid as it is given by the manufacturer shall be observed.
- 7.4. Keep the jack clean and wipe off any oil or grease. Lubricate all moving parts with acid free oil. Clean exposed areas with a clean oiled cloth.
- 7.5. The oil cylinder is a sealed unit and must not be accessed. For service contact your authorised stockist.
- ☐ **WARNING!** Only a good quality Jack oil, such as SEALEY HYDRAULIC JACK OIL must be used.
- 7.6. The hydraulic oil volume for the model is as follows: STL1000 : 2.0L STL600 :1.8L.
- * **DO NOT** use brake fluid.
- 7.7. Before each use, follow the pre-check list to ensure components are not damaged, broken, cracked, bent, malfunctioning, distorted, worn or loose.
- 7.8. Ensure there is no visible damage to welds. If any suspect item is found, remove the jack from service and take the necessary action to remedy the problem.
- * **DO NOT** use the jack if you believe it to have been subjected to abnormal load or shock.
- 7.9. Periodically check the pump piston and piston rod for signs of corrosion.
- NOTE:** NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE JACK.
- 7.10. No modifications shall be carried out which adversely affect the compliance of the jack with this standard.
- 7.11. Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.
- * **DO NOT** Return the jack to us. Please telephone 01284 757500 to obtain the address and 'phone number of your local agent. If the jack is under guarantee, please contact your local stockist.

8. TROUBLESHOOTING

- 8.1. The jack cannot be lifted to the highest position: check and add hydraulic oil.
- 8.2. Poor oil pump (empty pump): check whether the exhaust rod is pulled out.
- 8.3. Lowering under load (not keeping pressure well): check whether the pressure relief knob is closed tightly.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk