

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL

- ✓ Ensure the work light is correctly charged before initial use.
- ✗ **DO NOT** turn the work light on when it is being re-charged.
- ✗ **DO NOT** shine directly into your, other person's or animal's eyes.
- ✗ **DO NOT** allow children to use the worklight unsupervised.
- ✗ **DO NOT** submerge the work light or use outside in wet and damp conditions. The unit is not waterproof.
- ✗ **DO NOT** leave battery in a discharged state, recharge battery immediately. If the light is not in use, recharge the battery every month.

2. INTRODUCTION & SPECIFICATION

2.1 INTRODUCTION.

Bright LED lantern with revolutionary self-powered technology via hand crank. Three light settings with up to 60 minutes' illumination from only 1 minute's wind-up. Take the lantern anywhere with no need to replace batteries or bulbs. Supplied with built-in compass and hanging handle.

2.2 SPECIFICATION

Model No:AK3306
 Light Settings: 1, 3, 9 LED
 Approx. Operating Time:1 LED - 60min
3 LED - 35min
9 LED - 25min

3. CHARGING AND OPERATION

3.1. CHARGING THE WORK LIGHT

❑ IMPORTANT WARRANTY INFORMATION:

The battery fitted to this lantern is considered to be a consumable item and its ability to accept charge will reduce over time. We will warranty it against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery even if it is less than one year old.

3.1.1 **Winding Handle.** Before charging, switch the unit OFF. To get approximately 60 minutes of usage from the 1 LED setting you need to wind the handle at a steady pace in either direction for 60 seconds. If more LEDs are used the usage time will be reduced as shown above under specification. After winding fold the handle back down into its stowage position.

3.1.2 **Mobile Phone Charging.** The lantern is supplied with a Nokia phone charging lead. When this is connected between a suitable phone and the socket on the lantern seen in Fig.1, the cranking charge is diverted from the light to the phone in order to revive a depleted battery sufficiently to make a phone call. To charge the phone you must operate the winding handle for a minimum of 1 minute. Longer will be required if the battery is very flat.



3.2 OPERATION.

3.2.1 On/Off Switch. The Work Light has a 4 mode On/Off switch.

The first press illuminates 1 LED.

The second press illuminates 3 LEDs.

The third press illuminates 9 LEDs.

The fourth press switches the Work Light Off.

Using the button, cycle through the options until you reach the one you require.

3.2.2 The lantern has a convenient hanging hook and a built in compass as seen at the top of Fig.1.

4. CARE MAINTENANCE

4.1 Clean unit with a damp cloth. Do not use solvents.

4.2 To maintain its long term efficiency the battery should be recharged before it is fully depleted.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste.

All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Battery Removal



WARNING! To avoid electric shock, ensure the battery is fully discharged

1. Lift up the winding handle and remove the small screw from the base, then twist the base anti-clockwise and pull the base off.

2. Then remove the four screws on the body of the lamp and split the lamp in two.

3. Remove the four small black screws holding the winding gear in, then cut the wires connecting the battery to the circuit board.

Dispose of batteries according to local authority guidelines.

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme.

Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk