

INSTRUCTIONS FOR:

LED WIND-UP RECHARGEABLE WORK LIGHT

MODEL NO: AK3307

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY, PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL

- Ensure the work light is correctly charged before initial use.
- X DO NOT turn the work light on when it is being re-charged.
- **DO NOT** shine directly into your, other person's or animal's eyes.
- X DO NOT allow children to use the worklight unsupervised.
- X DO NOT submerge the work light or use outside in wet and damp conditions. The unit is not waterproof.
- X DO NOT leave battery in a discharged state, recharge battery immediately. If the light is not in use, recharge the battery every month.

2. INTRODUCTION & SPECIFICATION

2.1 INTRODUCTION.

Bright LED directional work light with optional charging methods. Either revolutionary self-powered technology via hand crank or cigarette lighter adaptor. Three light settings with up to 45 minutes' illumination from only 1 minute's wind-up, with no replacing of batteries or bulbs.

2.2 SPECIFICATION

Model No:	K3307
Light Settings: 6, 12, 2	20 LED
Approx. Operating Time: 6 LED -	45min
12 LED -	35min
	25min

3. CHARGING AND OPERATION

3.1. CHARGING THE WORK LIGHT

☐ IMPORTANT WARRANTY INFORMATION:

The battery fitted to this work light is considered to be a consumable item and its ability to accept charge will reduce over time. We will warranty it against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery even if it is less than one year old.

- 3.1.1 Winding Handle. Before charging, switch the unit OFF. To get approximately 45 minutes of usage from the 6 LED setting you need to wind the handle at a steady pace in either direction for 60 seconds. If more LEDs are used the usage time will be reduced as shown above under specification. After winding fold the handle back down into its stowage position.
- 3.1.2 Car Cigarette Lighter Charging. Alternatively the unit can be charged from a car battery by plugging into a cigarette lighter socket using the adaptor supplied. Plug the other end of the adaptor cable into the charging socket on the light. See Fig.1. Charging from a fully charged car battery is very quick. Do not leave the unit connected to the battery for more than one minute.



3.2 OPERATION.

3.2.1 On/Off Switch. The Work Light has a 4 mode On/Off switch.

The first press illuminates 6 LEDs.

The second press illuminates 12 LEDs.

The third press illuminates 20 LEDs.

The fourth press switches the Work Light Off.

Using the button, cycle through the options until you reach the one you require.

3.2.2 The Work Light has a convenient hanging hook and once positioned can be rotated through 360°

4. CARE MAINTENANCE

- 4.1 Clean unit with a damp cloth. Do not use solvents.
- 4.2 To maintain its long term efficiency the battery should be recharged before it is fully depleted.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste.

All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Battery Removal



- WARNING! To avoid electric shock, ensure the battery is fully discharged
- Lift up the winding handle and remove the small screw from the base, then twist the base anti-clokwise and pull the base off.
- 2. Then remove the four screws on the body of the lamp and split the lamp in two.
- Remove the four small black screws holding the winding gear in, then cut the wires connecting the battery to the circuit board.

Dispose of batteries according to local authority guidelines.

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme.

Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.





Sole UK Distributor, Sealey Group, Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR





3 01284 703534