



DOUBLE LEVER GREASE GUN

MODEL NO: **AK4405**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear eye
protection



Wear protective
gloves

1. SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with the application and the limitations of the grease gun, as well as the potential hazards.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep the grease gun clean for best and safest performance.
- ✓ Check moving parts alignment on a regular basis.
- ✗ **DO NOT** use the grease gun for any purpose other than that it was designed for.
- ✗ **DO NOT** operate the grease gun if any parts are damaged or missing, as this may cause failure and/or personal injury.
- ✓ When not in use store in a safe, dry, childproof location.
- ☐ **WARNING!** Always wear approved eye protection when operating the grease gun.

2. INTRODUCTION

Robust, double-arm grease gun. Features a protective cap for hose storage preventing contamination. 1/8"BSPT Thread and supplied with adaptor to fit most screw-type cartridges on the market. Supplied with 300mm (12") delivery hose and 4-jaw coupler.

3. SPECIFICATION

Model No:	AK4405
Delivery per Stroke:	0.7cm ³
Delivery Pressure:	7000psi
Nett Weight:	0.99kg

4. OPERATION

- 4.1. Unscrew the cap of the grease cartridge and push grease out of the top, then screw into the gun. (This enables the grease to be initially pushed into the system).
- 4.2. Ensure that the arm of the grease gun is open when screwing in the cartridge so that the grease can be pushed past the piston inside the head.
- 4.3. Once screwed in push the grease cartridge again to ensure that the grease is packed inside the head of the grease gun.
- 4.4. Pump slowly air should be heard rushing through the system until the grease comes out of the end.





ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk