

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

! IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Maintain pump in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Check the grease bucket to ensure it is not damaged. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Wear appropriate protective clothing. When handling lubricants refer to manufacturer's instructions and conform to local regulations.
- ✓ Use the pump in an appropriate working area for its function. Keep area clean and tidy and free from unrelated materials and ensure there is adequate lighting.
- ✓ Maintain correct balance and footing. Ensure floor is not slippery, wear non slip shoes.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Dispose of waste grease in accordance with local authority regulations.
- ✗ **DO NOT** allow unauthorised persons to operate the pump.
- ✗ **DO NOT** point grease nozzle at yourself or other persons or animals.
- ✗ **DO NOT** pull the pump unit by the hoses.
- ✗ **DO NOT** force the pump to achieve a task it was not designed to perform.
- ✗ **DO NOT** operate the pump when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use store in a dry, safe, childproof area.



2. INTRODUCTION

Zinc die-cast pump head with solid steel pump. High-volume, low-pressure output for filling auto chassis lubrication reservoirs. Central lube coupling supplied with spare plug-in adaptor.


3. ASSEMBLY

Note: Numbers in brackets refer to item numbers on the parts diagram.

- 3.1. Pass the pump (1) through the adaptor (3) fitted to the lid (4).
- 3.2. Tighten the clamp on the adaptor (3).
- 3.3. Fit the unit to a bucket of grease, securing the lid by using the three fixing screws (5).
- 3.4. The unit is now ready for use.

4. PARTS

Item	Part No.	Description
1	AK456.1	Pump
2	AK456.2	Screw pack
3	AK456.3	Adaptor
4	AK456.4	Lid
5	AK456.5	Lid screws
6	AK456.6	Hose clip
7	AK456.7	Hose tail
8	AK456.8	Female coupler
9	AK456.9	Delivery tube
10	AK456.10	Male adaptor
11	AK456.11	Hose, 1.5M

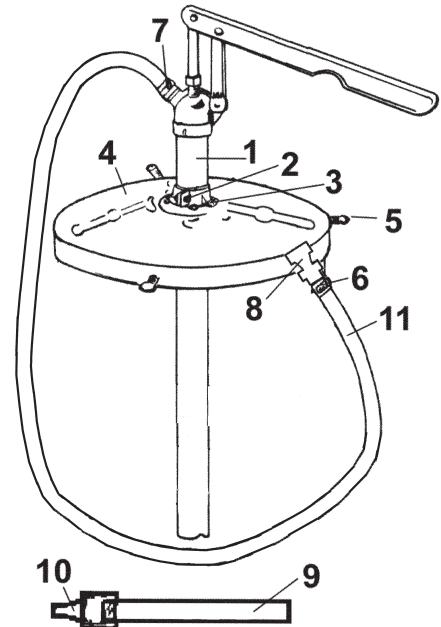

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.