

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

⚠ IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS, AND CAUTIONS. USE THIS PRODUCT CORRECTLY, AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.

1. SAFETY INSTRUCTIONS

- ✓ Replace damaged parts. *Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Keep the drainer clean and in good condition for best and safest performance.
- ✓ Wear appropriate protective clothing.
- ✓ Use drainer in a suitable work area. Keep area clean and tidy, and free from unrelated materials and ensure that there is adequate lighting.
- ✓ Ensure that the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ Dispose of waste liquids in accordance with local authority regulations.
- ☐ **WARNING!** *DO NOT allow uncontrolled discharge of fluids which would pollute the environment.*
- ✗ *DO NOT position the drainer in such a way that it becomes a hazard to others in the work area.*
- ▲ **IMPORTANT:** AK468DX may be used in conjunction with a wall mounted air pump, model no: AK450DP in order to discharge waste oil.

2. INTRODUCTION & SPECIFICATION

Low level drainer suitable for use on the forecourt and workshop floor. Steel fabricated unit with a capacity of 95ltr permits use with commercial vehicles. Fitted with drain tap for gravity discharge and female dry fit coupling for connection to pump away unit (Model No. AK450DP). Fully portable with two castors, two fixed wheels and handle.

Capacity:	95ltr	Suction Feed:	No
Height to Pan:	290mm	Suction Probe:	No
Gravity Feed:	Yes	Air Discharge:	Yes
Gravity Discharge:	Yes		



3. OPERATING INSTRUCTIONS

- 3.1 Collection of waste oil**
- 3.1.1 If unit has been used to drain a previous vehicle check to ensure that there is sufficient spare capacity before you next use the pan.
 - 3.1.2 Place the pan under the vehicle's sump and drain accordingly.
 - 3.1.3 When draining is complete remove pan and wipe up any spillage.
- 3.2 Evacuation of waste oil from pan unit.**
- ☐ **WARNING!** *Dispose of all waste in accordance with local regulations.*
 - 3.2.1 Take the suction hose of wall mounted pump unit AK450DP and connect the female coupling to the male coupling of the pan unit to evacuate waste oil or use gravity discharge via the draintap.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this equipment. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY POWER TOOLS Sole UK Distributor, Sealey Group, Bury St. Edmunds, Suffolk.

 01284 757500
  01284 703534
  www.sealey.co.uk
  sales@sealey.co.uk