



MOBILE MULTIFUNCTION OIL STATION 100L

MODEL NO: **AK485DX & AK490DX**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear eye
protection



Wear protective
gloves



Wear protective
clothing

1. SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with the application and limitations of the oil drainer, as well as the potential hazards.
- ☐ **WARNING!** Disconnect the drainer from the air supply before changing accessories, servicing or performing any maintenance.
- ✓ Maintain the drainer in good condition (contact your local Sealey stockist).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep the drainer clean for best and safest performance.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ☐ **WARNING!** While extracting high temperature oils, keep hands, face and body protected using suitable personal protective equipment (PPE).
- ✗ **DO NOT** Extract caustic or flammable products.
- ✓ Keep children and unauthorised persons away from the working area.
- ☐ **WARNING!** Ensure correct air pressure is maintained and not exceeded.
- ✓ Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use, and ensure that all connections are secure.
- ✗ **DO NOT** use the drainer for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the drainer if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** stand on the drainer.
- ✗ **DO NOT** adjust or tamper with the safety valve.
- ✗ **DO NOT** move the drainer by the hose, or yank the hose from the air supply.
- ✗ **DO NOT** place attachments close to your face (especially eyes, ears, etc.) and **DO NOT** point hose at other persons or animals.
- ✗ **DO NOT** allow untrained persons to operate the drainer.
- ✗ **DO NOT** operate the drainer when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** leave the drainer operating unattended.
- ✗ **DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use disconnect from the air supply, vent reservoir and store in a safe, dry, childproof area.
- ✓ Dispose of waste oil in accordance with local authority regulations.
- ☐ **WARNING! DO NOT** pollute the environment by allowing uncontrolled discharge of waste oil.
- ▲ **DANGER! DO NOT** release drain pan clamp lever when there is pressure in the reservoir as pipe and drain pan will be propelled upward with force. This could result in damage and/or serious injury.
- ✓ Air compressor must maintain stable 0.7 Mpa pressure.
- ✓ The air supply pipe requires a diameter of 10mm.
- ✓ Ensure your air compressor produces dry air.
- ✗ **DO NOT** use the equipment for functions not listed in this manual.
- ✓ For repair services, please contact your Sealey stockist. **DO NOT** attempt to repair it yourself.
- ✗ **DO NOT** alter or disassemble equipment without authorization; serious consequences may occur.
- ✗ **DO NOT** use the lifting rod as a handle; secure loose adjusting screws.
- ✓ Immediately shut off the air supply and inspect for leaks if detected during operation.
- ✓ Maintain air supply pressure within the specified range for proper equipment function.
- ✓ Handle extracted waste oil with care (40~80°C) to prevent burns.
- ✓ Wear gloves and goggles for eye and hand protection.
- ✓ Always keep the engine off during operation.
- ✓ Avoid extracting gasoline, diesel, or liquids with methanol, ketones or flammables.
- ✓ After draining the used oil, make sure to quickly pour it from the measuring cup into the tank to keep the cup in good shape and make it last longer. No need to close the measuring cup drain valve after emptying waste oil.
- ✓ After operations, release equipment pressure, clean it, and handle carefully to prevent damage or injury.
- ✓ Keep away from high temperature, high pressure, and flammable or explosive areas.

2. INTRODUCTION

Three drawer mobile oil station keeps everything close to hand. Five suction probes for extracting oil via dipstick port (fits most vehicles). Three pull out drawers and large cabinet under drawers for extra storage for storing tools and equipment. Clear chamber, making extracted oil visible for inspection and measuring before draining into reservoir. 100L Capacity allowing for multiple oil changes. Perforated side panels for hanging tools and accessories. An air supply is required. AK490DX also includes 61pc oil filter tool set for removing all types of oil filters

3. SPECIFICATION

Model No:..... **AK485DX / AK490DX**

Air Consumption: 150L/Min

Minimum/Maximum Air Pressure: 6-8bar

Nett Weight: 94.2kg / 103kg

Cup Capacity: 10L

Pan Capacity:..... 20L

Tank Capacity: 100L

Oil Discharge Pressure: 0.6-0.8Mpa

Working Oil Temperature:..... 40-80°C

Contents (AK490DX only):


Oil Filter Wrenches:..... 64/65mm - 14 flutes

..... 86/87mm -16

..... 66/67mm -14

..... 84mm-14

4. CONTENTS

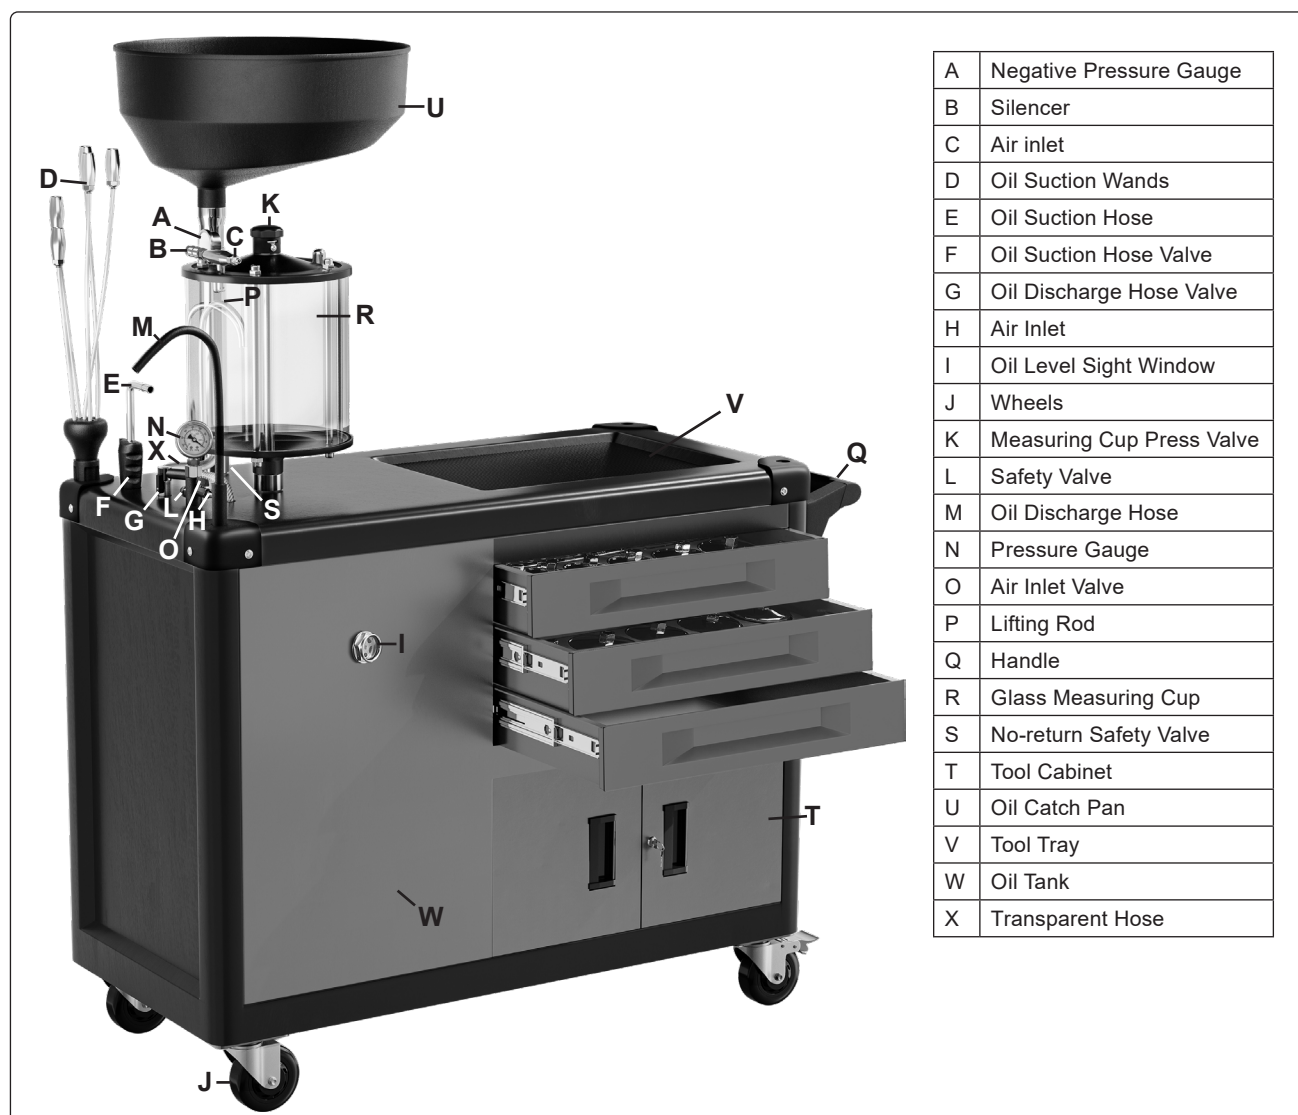

1. English Manual x1

2. Measuring Cup x1

3. Oil Catch Pan x1

4. Silencer x1

5. Handle x1

6. Oil Suction Wands x5

7. Lifting Rod x1

8. Oil Storage Tank x1

9. Swivel Castors x4

5. ASSEMBLY

- 5.1. Attach the wheels (J).
- 5.2. Mount the measuring cup (R) onto main unit and turn clockwise until it is fully seated.
- 5.3. Attach transparent hose (X) to the measuring cup.
- 5.4. Mount the lifting rod (P) onto main unit and turn clockwise until it is fully seated.
- 5.5. Attach pressure gauge (N).
- 5.6. After installation, ensure the lifting rod is perpendicular to the equipment.

6. OPERATION

6.1. HOW TO EXTRACT OIL WITH THE MEASURING CUP

- 6.1.1. Close the measuring cup press valve (K) by pressing down and rotating the valve to the centre slot position; release to let valve spring up to the closed position.
- 6.1.2. Attach the air source to the air inlet (C). The negative pressure gauge holder (A) should move to 0.06 - 0.08 Mpa, then stop pressurisation.
- 6.1.3. Insert the oil suction wands (D) into the engine compartment and open the oil suction valve (F) for sucking.

6.2. HOW TO DISCHARGE OIL FROM MEASURING CUP TO TANK

- 6.2.1. When the oil level in the cup reaches the warning line (8L), discharge the waste oil into the tank.
- 6.2.2. Press and rotate to open valve (K). Waste oil will flow into the tank.
NOTE: to extend the life of the measuring cup, **DO NOT** close the oil sucking and discharge valve if not discharging.
NOTE: if oil temperature exceeds 80°C, it may damage the equipment components.

6.3. HOW TO COLLECT WASTE OIL FROM VEHICLE

- 6.3.1. Use lifting equipment to lift the car to an appropriate height.
- 6.3.2. Clear a safe working area, move the equipment under the vehicle engine, and align the pan with the engine oil discharge hole.
- 6.3.3. Unscrew the oil discharge plug of the vehicle engine for discharging.

6.4. EMPTYING THE WASTE OIL TANK

- 6.4.1. Close the measuring cup press valve (K) by pressing down and rotating the valve to the centre slot position; release to let valve spring up to the closed position.
- 6.4.2. Close air inlet valve (O).
- 6.4.3. Attach the air supply to the air inlet (H).
- 6.4.4. Slowly open the waste tank air inlet valve (O) to pressurise the oil tank. When the pressure gauge (N) moves to 0.18 - 0.2Mpa, immediately close the air inlet valve to stop further pressurisation.
NOTE: when the pressure exceeds the threshold set by the safety valve (S), the safety valve will automatically release the pressure. Close the air inlet valve (O). **DO NOT** pressurise the tank continuously.
- 6.4.5. With the waste oil discharge hose (M) mounted in/over a suitable container, open the waste oil discharge valve (G) to discharge the waste oil.
- 6.4.6. After discharging, unplug the air source and release tank pressure by opening the air inlet valve (O).
- 6.4.7. Open the measuring cup press valve (K) and leave open for subsequent storage of the unit.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk