

ADJUSTABLE-HEIGHT MOBILE WORKSTATION WITH REMOVEABLE TOP TRAY

MODEL NO: AP201

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

IMPORTANT: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be applied by the operator.

1.1. ASSEMBLY PRECAUTIONS

- Assemble only according to these instructions. Improper assembly can create hazards.
- ✓ Keep children, pets, and bystanders out of the area during assembly. Distractions can cause you to lose control of tools, injuring yourself or others.
- Weight capacity and other product capabilities apply to properly and completely assembled product only. DO NOT use if incompletely or improperly assembled.

1.2. USE PRECAUTIONS

- * This product is not a toy. **DO NOT** allow children to play with or near this item.
- ✓ Store out of reach of children.
- Use the mobile workstation and accessories as intended and in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the mobile workstation for operations different from those intended could result in a hazardous situation.
- ✓ Inspect before every use; **DO NOT** use if parts are loose or damaged.
- The maximum bearing capacity of the support centre of the tool tray is 40kg, and the maximum bearing capacity of the edge is 10kg. **NOTE:** Be aware of dynamic loading! Sudden shifts in the load may briefly create excess load, which may result in product failure.
- \checkmark Store idle equipment. When not in use, this product must be stored in a dry location to inhibit rust.
- **WARNING! DO NOT** stand on the mobile workstation when it is deployed as a tool creeper. Serious injury can occur.

2. INTRODUCTION


Adjustable table height adjustable from 775-1200mm. Features two magnetic collection trays, two small tool storage sections, one large section for main workpiece as well as nine screwdriver storage holes and 15 socket storage slots. Tray top can be removed to be used as a tool creeper on the ground. Fitted with four rubber coated castors for manoeuvrability in workshops and warehouses. Maximum weight capacity 60kg. Min./Max. Height: 775/1200mm.

3. SPECIFICATION


MODEL NO:	AP201				
Capacity:	60kg	Nett Weight:	9.8kg		
Minimum/Maximum Height:	775/1200mm	Table Size (W x D):	735 x 460mm		

4. CONTENTS


	Co C			E E
1 - Working Table	2 - Support Frame	3 - Underframe	4 - 3" wheel (2pcs with	5 - 2"Caster
(x1)	(x1)	(x1)	brake wheels) (x4)	(x2)
6 - M6 Inner Hexagon Screws (x2)	7 - M10 Tube Nut (x4)	 Weight and the second se	 O O O O 9 - M6 flat washer (x6) 	10 - M6 Hexagon Bolt (x4)
5		$\sum $		
11 - 10mm Open Wrench	12 - 5mm Hex Wrench	13 - 14mm Open Wrench	14 - 6mm Socket Wrench	
(x1)	(x1)	(x1)	(x1)	

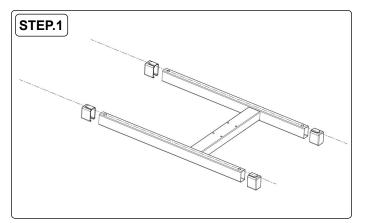


1. Remove the plugs from both sides of the underframe. Leave them off until the wheels have been installed.

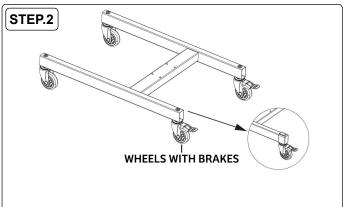


2. Pass the tube nut through the square tube hole of the underframe. Fit the 3" wheels, and tighten with a wrench. Ensure the wheels with brakes are installed at the correct end of the underframe. Insert the plugs back onto the underframe.

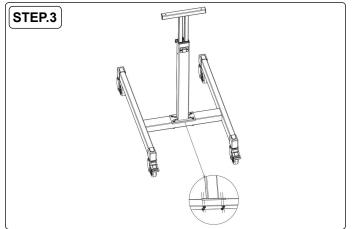

3. Place the support frame assembly on the base as shown, paying attention to the front and rear orientation. Secure with bolt, flat washer and anti-loose nut, using the wrench provided.

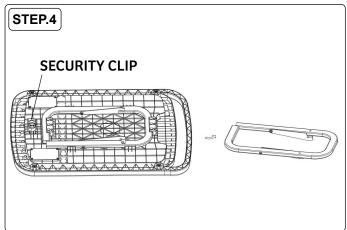


4. Ensure the security clip is 'open' as shown above. Push the upper support frame assembly horizontally to the left and remove it from the tool tray assembly.

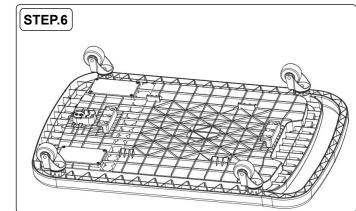


6. Install the 2" wheels in the screw holes of the tool tray as shown. Tighten with the wrench provided.




5. Install the upper support tube assembly on the support frame assembly as shown. Secure with 2 hexagonal screws, flat washers and anti-loose nuts, using the wrench provided.

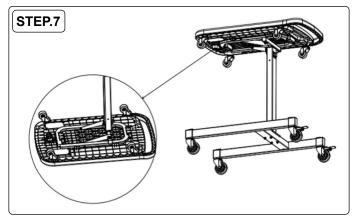

7. Install the tool tray assembly on the upper support tube as shown. Rotate the security clip to the 'closed' position to secure the tool tray into position.

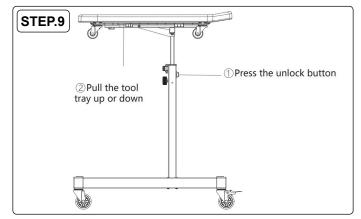

9. Press the unlock button and pull the tool tray up/down to adjust the height.

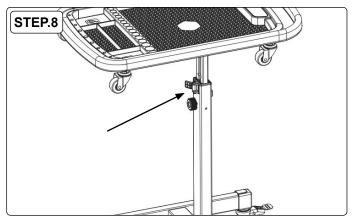

8. To adjust the height, first unlock the clip to the left of the support frame. Loosen the hand screw counterclockwise.



10. After confirming the height adjustment, the "click sound" indicates that the adjustment is completed. Press the clip to the right, and finally tighten the screw clockwise to secure the tray in position.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 @ sales@sealey.co.uk @ www.sealey.co.uk