

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS


1.1 GENERAL SAFETY

- **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this workstation.
- ✓ Locate workstation in a suitable working area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- **WARNING!** Use workstation on level and solid ground, preferably concrete. Avoid tarmac since the workstation may sink into the surface.
- ✓ Keep the workstation clean and tidy in accordance with good workshop practice.
- ✓ Keep children and unauthorised persons away from the working area.
- x **DO NOT** use the workstation for any purpose other than that for which it is designed.
- x **DO NOT** exceed maximum capacity of workstation.
- x **DO NOT** undertake work on the workstation without the workpiece being adequately secured. Use clamps or a vice (not included) to secure the workpiece. Available from your Sealey dealer.
- x **DO NOT** use the workstation out of doors.
- x **DO NOT** get the workstation wet or use in damp or wet locations or areas where there is condensation.
- x **DO NOT** clean the workstation with any solvents which may damage the paint surface or the protective coating on the wooden top.
- x **DO NOT** pull out all drawers at the same time.
- Maximum weight for each drawer is 25 kg, full load for workstation is 250kg.




2. CONTENTS AND SPECIFICATION

- 2.1 Powder coated steel panels with 25mm wood laminate top. Five drawers. Supplied flat packed.
- 2.2 Table Size (W x D): 838 x 508mm
Working Height: 865mm
Capacity: 250kg
- 2.3 Carefully unpack the product and check the contents against the diagram below. Should any items be missing or damaged make immediate contact with your Sealey dealer.

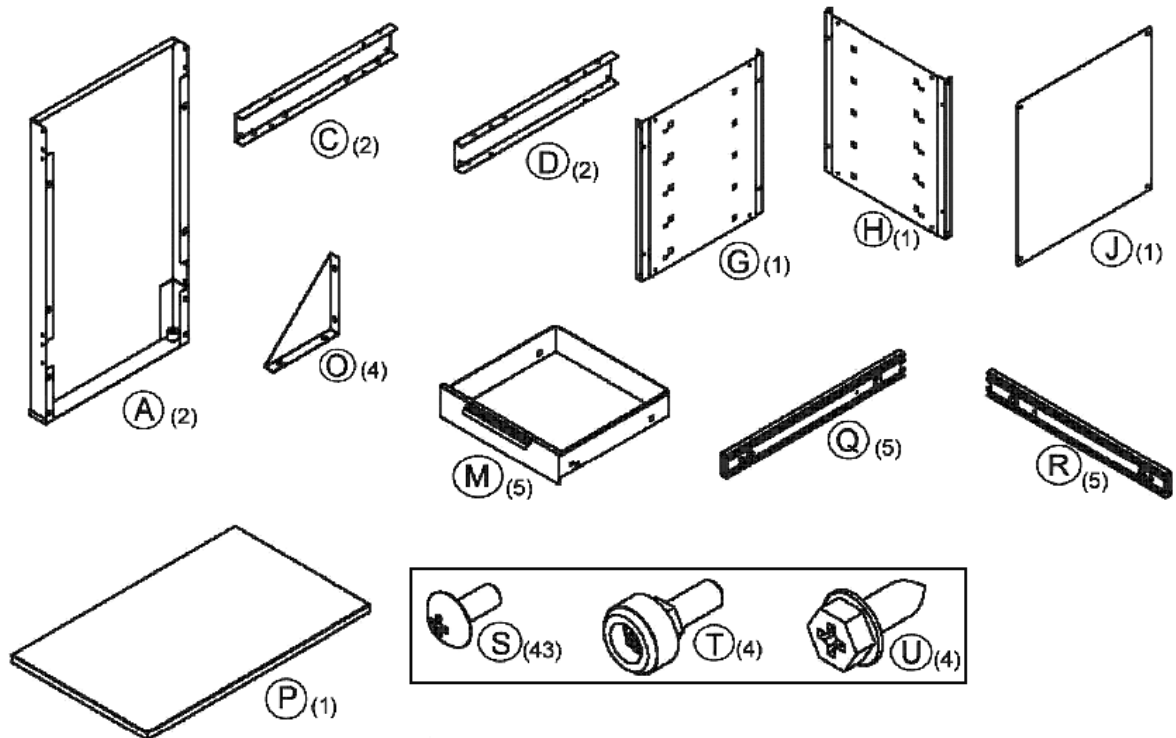


- | | | | |
|----------------------------|-----------------------------|-----------------------------|------------------------------------|
| ASIDE PANEL | HRIGHT SIDE PANEL | PWOODEN TOP | TADJUSTABLE LEG LEVELLER |
| CBOTTOM RAIL | JBACK PANEL | QLEFT SIDE RUNNER | UHEX HEAD SCREW 5/8" |
| DTOP RAIL | MDRAWER | RRIGHTSIDE RUNNER | |
| GLEFT SIDE PANEL | OCORNER BRACE | SSCREW (M5x12) | |


3. ASSEMBLY

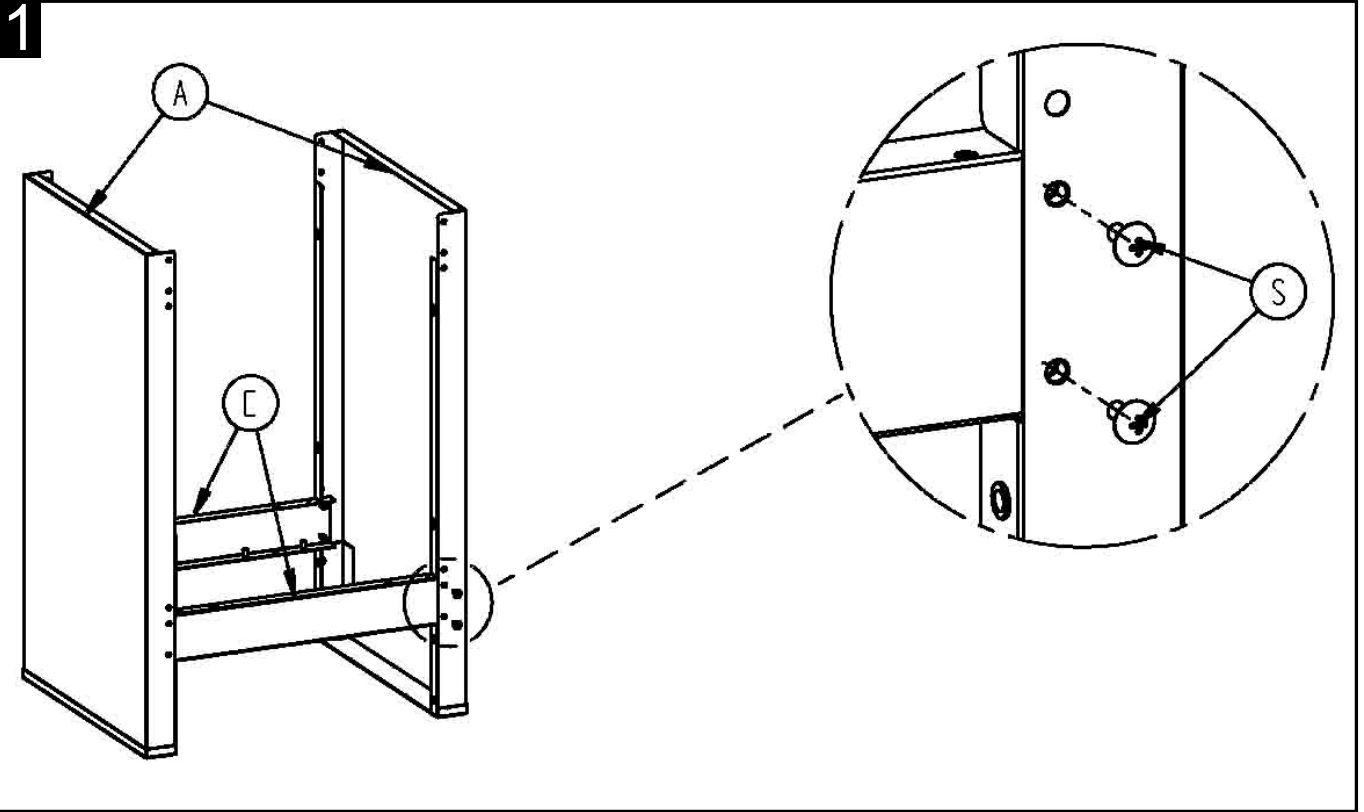


Step 1. As shown in the diagram attach the two large side panels (A) to the bottom rails (C).

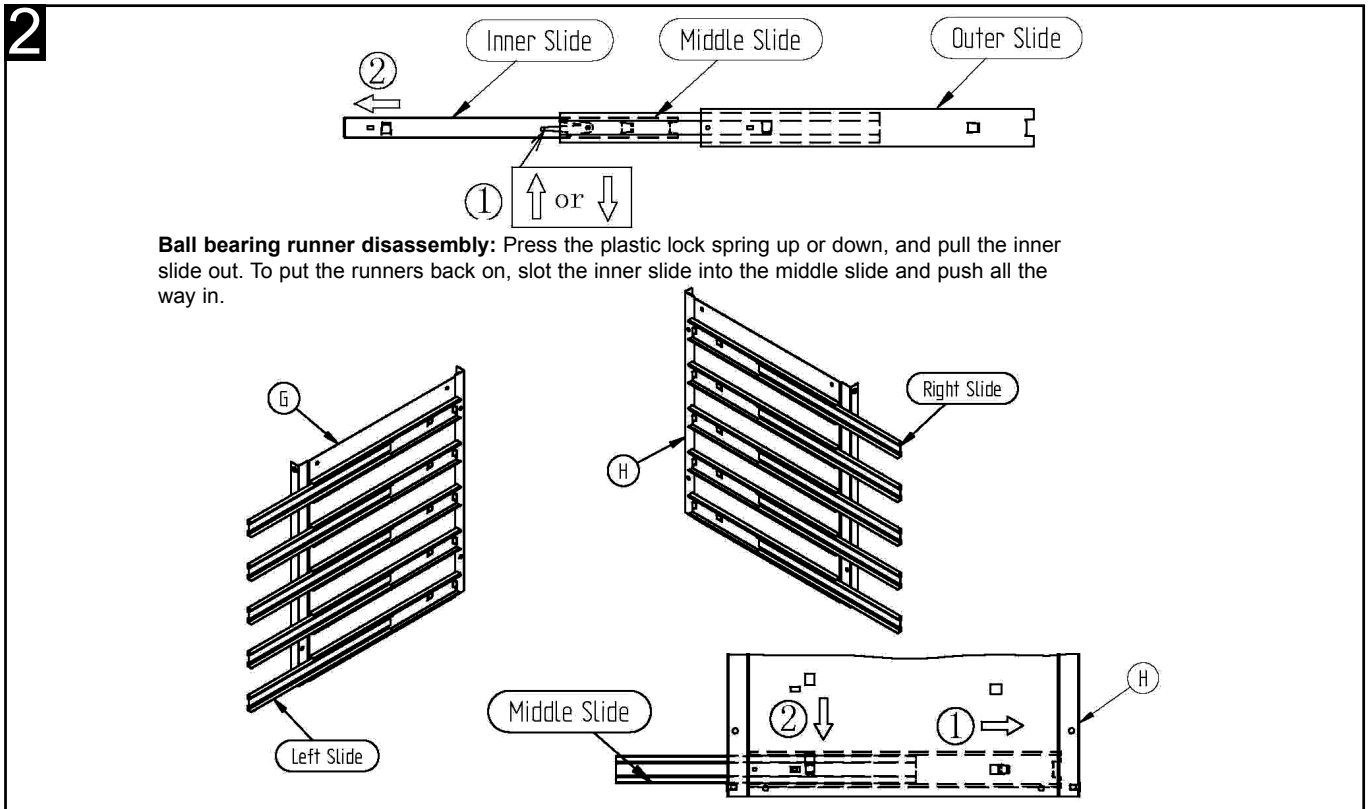


STEP 2. Attach the outer slide to the corresponding left/right side panel (G, H). Insert the tabs into the holes in the side panel making sure that the slider stop fits into the small hole.

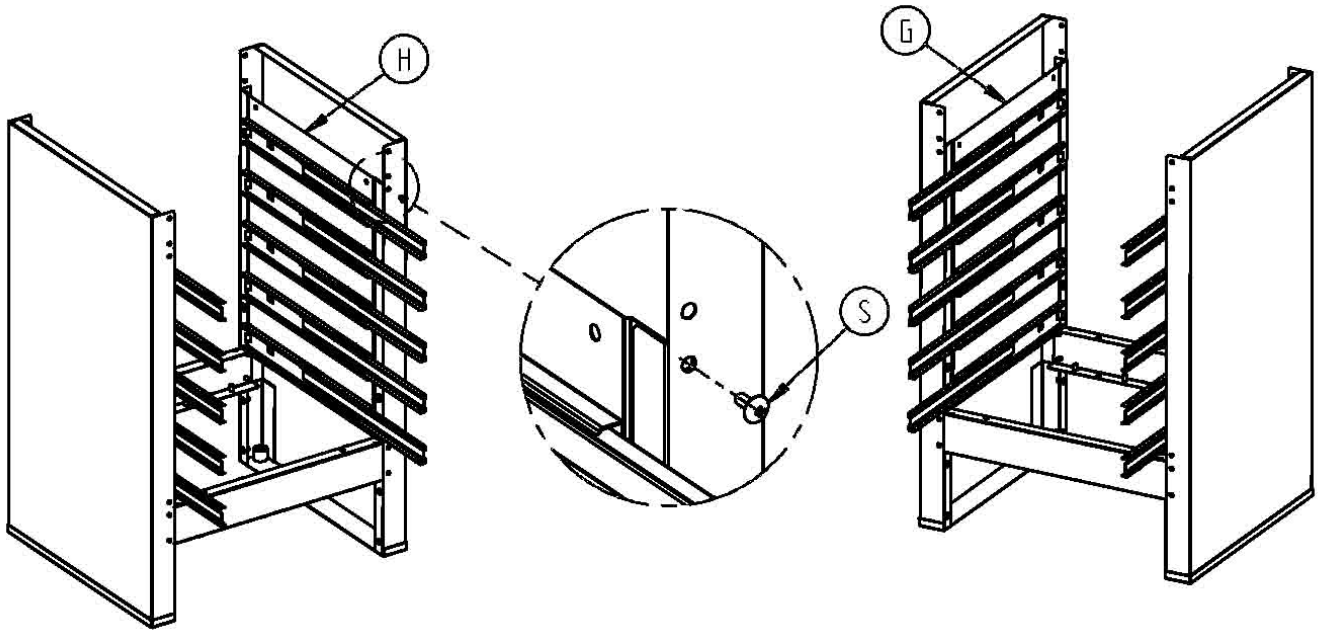3


Step 3. Attach panels (G, H) to the main unit by screwing onto side panels (A).

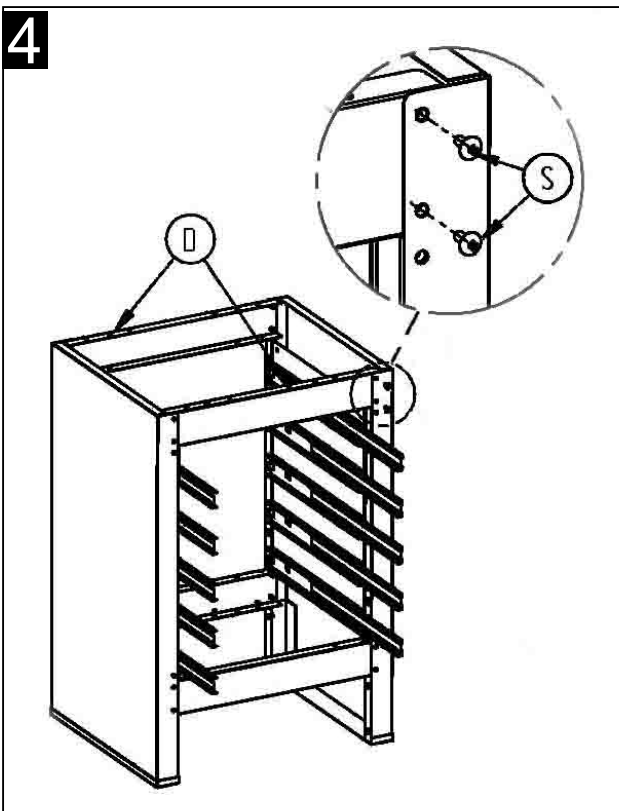4


STEP 4. Screw the top rails (D) onto the front and back.

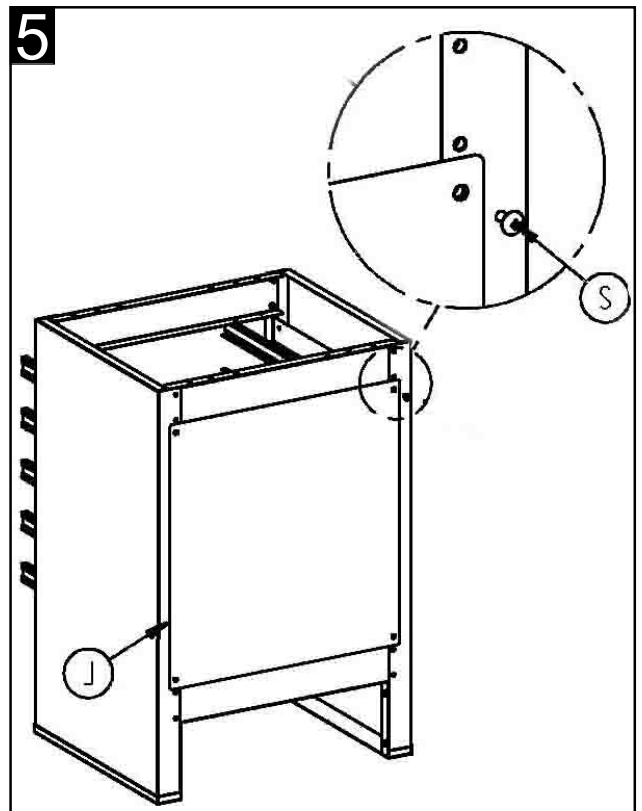5


STEP 5. Secure the back panel (J) using 4 screws, 1 in each corner.

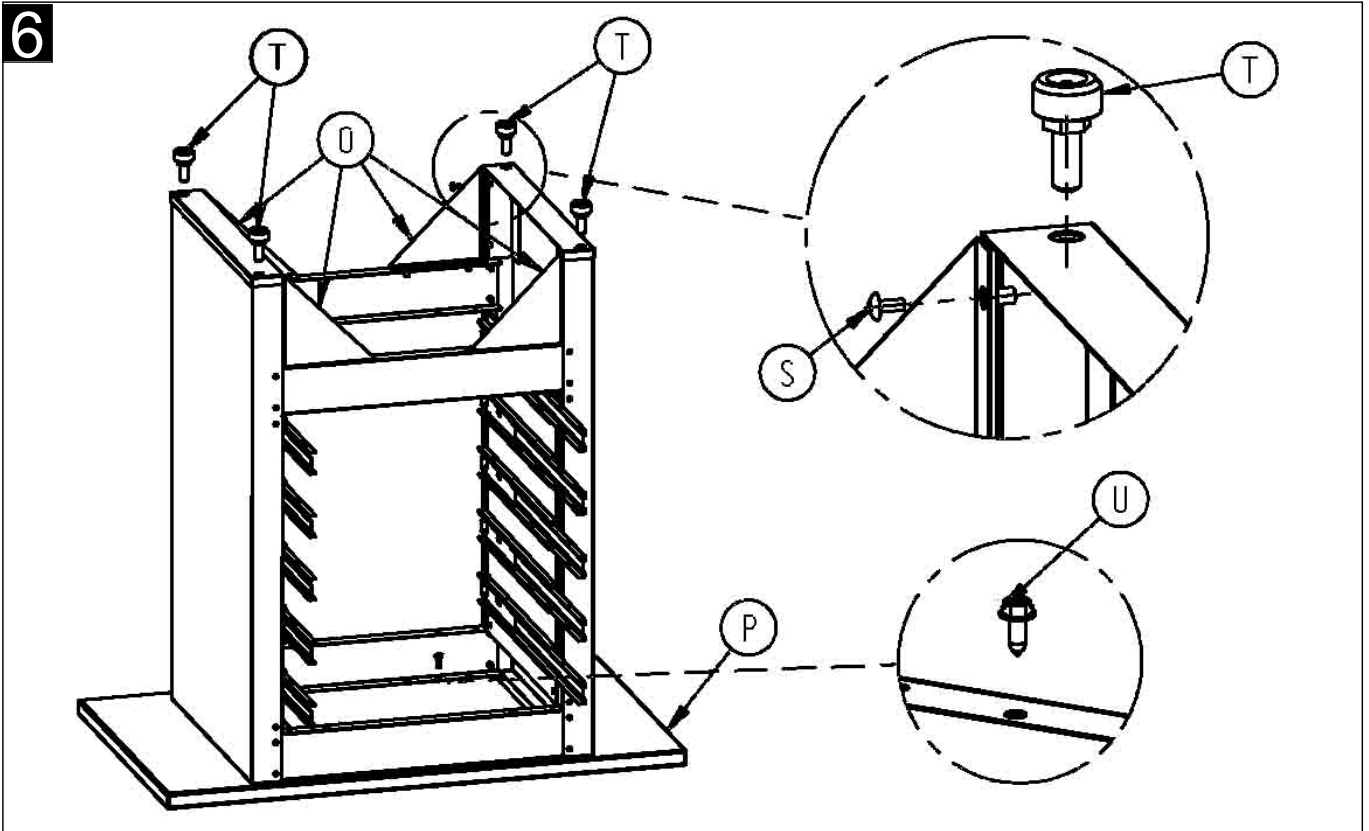

STEP 6. Turn the workbench upside down and screw in the corner braces (O) as shown in the diagram. At each corner attach the leg levellers (T). Slide the workbench top (P) under the main unit and fix with 4 hex head screws (U).

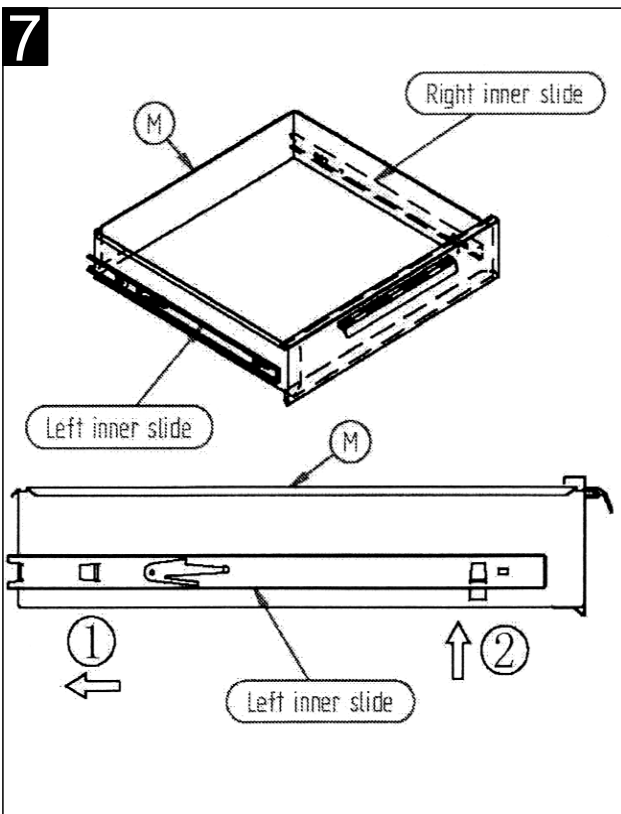

STEP 7. Attach the inner slides onto the drawers. Slot the horizontal tab into the hole in the drawer and the vertical tab into the other hole. Push down until the stop slots into the small hole.

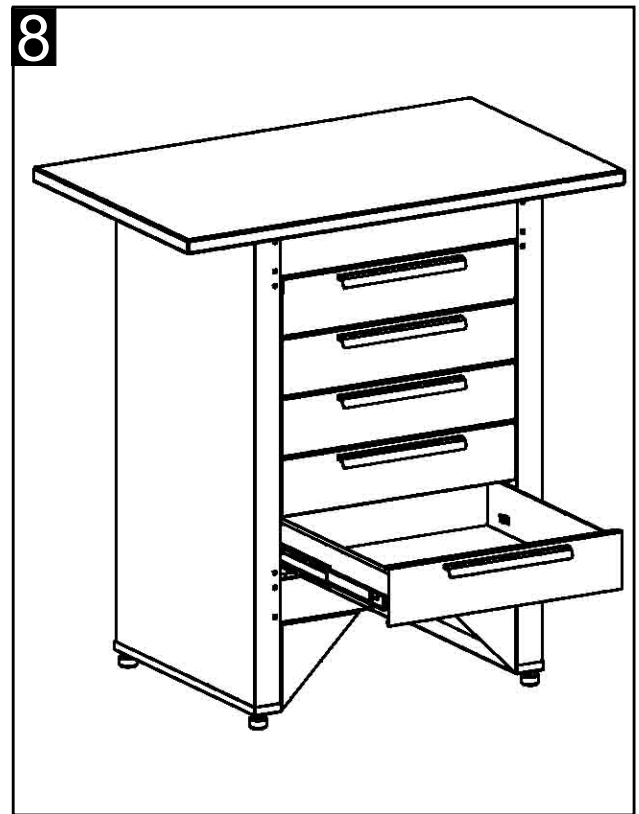

STEP 8. Pull the middle slide and the ball bearings out as far as possible. Hold the drawer and slot the inner slide on the drawer into the middle slide, then push the drawer all the way in.

To remove drawer see **Step 2.**