

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1 GENERAL SAFETY


- WARNING!** *Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this bench back panel.*
- ✓ Locate bench and back panel in a suitable working area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- WARNING!** Use bench on level and solid ground, preferably concrete.
- ✓ Keep the bench and back panel clean and tidy in accordance with good workshop practice.
- ✓ Keep children and unauthorised persons away from the working area.
- x **DO NOT** use the bench or back panel for any purpose other than that for which it is designed.
- x **DO NOT** undertake work on the bench without the workpiece being adequately secured.
- x **DO NOT** overload the back panel.

2. INTRODUCTION & SPECIFICATION

Heavy-duty perforated steel panel, finished in a powder coat to help prevent corrosion. To be fitted to **AP2020**, **AP2020BB**, **AP2010**, **AP2030** and **AP2030BB** extending the storage area available. Suitable for hanging tools, keeping them close to hand when needed. Helps work area to stay neat and tidy when in/not in use.



Size (W x H):1366 x 680mm

3. CONTENTS

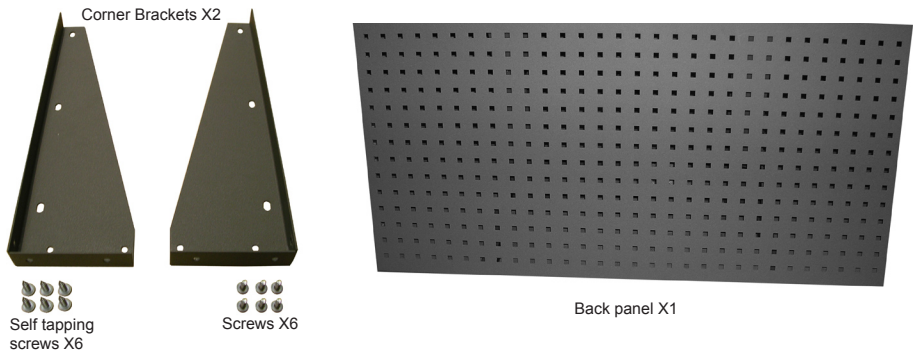

4. ASSEMBLY INSTRUCTIONS

- 4.1 Offer up one of the angle brackets to the rear corner of the bench (Fig.1).
- 4.2 Mark the position of the mounting holes and remove the bracket.
- 4.3 Using a suitable pilot drill, prepare the holes you marked in the work top to accept the three self tapping screws.
- 4.4 Offer the angle bracket back up to the work top, align the holes you prepared and the bracket holes; screw in the three self tapping screws (Fig.1).
- 4.5 Repeat this procedure on the other rear corner of the work top.
- 4.6 With the corner brackets securely fastened to the work top, offer up the back panel.
- 4.7 Align the back panel threaded mounting points with the holes on the corner bracket and fasten with the screws (Fig.2).
- 4.8 Check that all the fixings and the panel are secure.

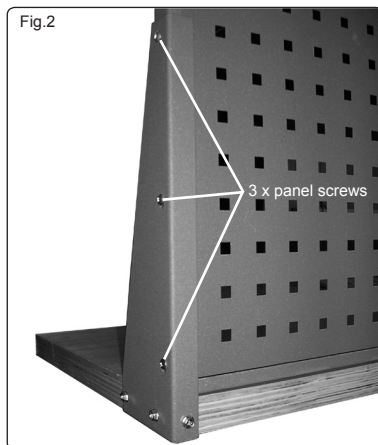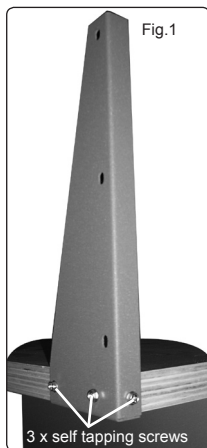

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

SEALEY POWER PRODUCTS

Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

01284 757500

01284 703534



www.sealey.co.uk



sales@sealey.co.uk