



INSTRUCTIONS FOR:
TOPCHEST 9 DRAWER/ ROLL CAB 14 DRAWER,
BALL BEARING RUNNERS, HEAVY DUTY - RED
MODEL No's: AP420913T/AP421413T

Thank you for purchasing a Sealey product. Manufactured to a high standard these products will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCTS CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH THEY ARE INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

1.1. GENERAL SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using these units.
- ✓ Locate the units in a suitable work area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- WARNING!** Use the Rollcab on level and solid ground, preferably concrete.
- ✓ Keep the units clean and tidy in accordance with good workshop practice.
- ✓ Keep children and unauthorised persons away from the work area.
- x **DO NOT** use these units for any purpose other than that for which they are designed.
- x **DO NOT** use the units outdoors.
- x **DO NOT** place the units in a damp or wet location or an area where there is condensation.
- x **DO NOT** clean the units with any solvents which may damage the surfaces or the protective coating.
- x **DO NOT** move the units with the drawers out. To avoid tipping, open one drawer at a time and close and secure all drawers whilst moving the rollcab.
- x **DO NOT** step on the drawers.
- x **DO NOT** overload the drawers.

2. INTRODUCTION

AP420913T

Heavy gauge steel construction for strength and durability. Sealey embossed topchest lid fitted with gas dampers for smooth opening and closing. All drawers are on heavy duty ball bearing runners for ease of use and heavier loads. Drawers have stainless steel pulls, non-slip liners are compatible with Sealey Premier Line tool trays. External features are: rust and solvent resistant powder coated finish; heavy duty side handles and side storage areas. An integral locking system secures all drawers with the turning of one key. For use alone or in conjunction with AP421413T rollcab.

AP421413T

As above plus bumpers to protect rollcab and surrounding objects when unit is moved. Four composite Ø125mm wheels, two castors with toe locks and two fixed wheels, make for easy manoeuvrability using heavy duty side handles. Supplied with two keys.

3. SPECIFICATION

Topchest Model No:	AP420913T
Overall Size W x D x H:	1150x470x525mm
Large Drawer (x5):	530x390x50mm
Medium Drawer (x1):	350x390x120mm
Small Drawer (x3):	350x390x50mm
Top Tray:	1060x420x45mm

Rollcab Model No:	AP421413T
Overall Size W x D x H:	1200x500x1060mm
Large Drawer (x1):	900x395x55mm
Medium Drawer (x1):	530x395x130mm
Medium Drawer (x2):	350x395x130mm
Small Drawer (x6):	530x395x50mm
Small Drawer (x4):	350x395x50mm

4. ASSEMBLY AND USE

- 4.1. These units are heavy, obtain the help of at least one other person before attempting to unpack them.
AP421413T
- 4.2. Attach the wheels to the bottom of the rollcab using 4 bolts and washers per wheel. Two of the wheels have brakes on them, ensure these are fixed to one side.
AP420913T & AP421413T
- 4.3. Fit the external tool holder and screwdriver racks to the outside using the screws provided.
AP420913T
- 4.4. To unlock the topchest turn the key clockwise and lift open the lid to allow the two draw locking buttons to disengage and allow the drawers to be opened. To lock the topchest, close the lid, ensure all drawers are fully in, and turn the key counter clockwise.
AP421413T
- 4.5. To lock the rollcab, ensure all drawers are fully in and turn the key counter clockwise.
- 4.6. To remove a draw, the black retaining clips need to be released. Push the left hand side clip down, and pull the right hand side clip up simultaneously and pull the drawer out. To re-install drawers, place the drawer onto the slides and push in fully.
- 4.7. Periodically lubricate wheel axles and ensure all nuts and bolts are tight. Lubricate the top and bottom channels of the drawer slides at least twice a year.

AP420913T



AP421413T

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or phone 01284 757500.



Environmental Protection.
Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business
Park, Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



www.sealey.co.uk



01284 703534



sales@sealey.co.uk