



FLOOR CABINET 2 DOOR

MODEL NO's: **APC1, APC2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear protective
gloves

1. SAFETY

- ☐ **WARNING!** Ensure Health & Safety, and local authority regulations are adhered to when assembling and using the cabinet.
- ✓ Keep the general area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep children and unauthorised persons away from the area.
- ✗ **DO NOT** use the cabinet for any purpose other than that for which they are designed.
- ✗ **DO NOT** get the cabinet wet or use in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** clean with any solvents which may damage the coated surface.
- ✓ Ensure that the cabinet is properly assembled before loading them.
- ✓ Load must be evenly distributed.
- ☐ **WARNING!** Cabinet should be fixed to the wall with suitable fixings.
- ☐ **WARNING!** This unit may have sharp edges. Wear protective gloves during assembly.

2. INTRODUCTION

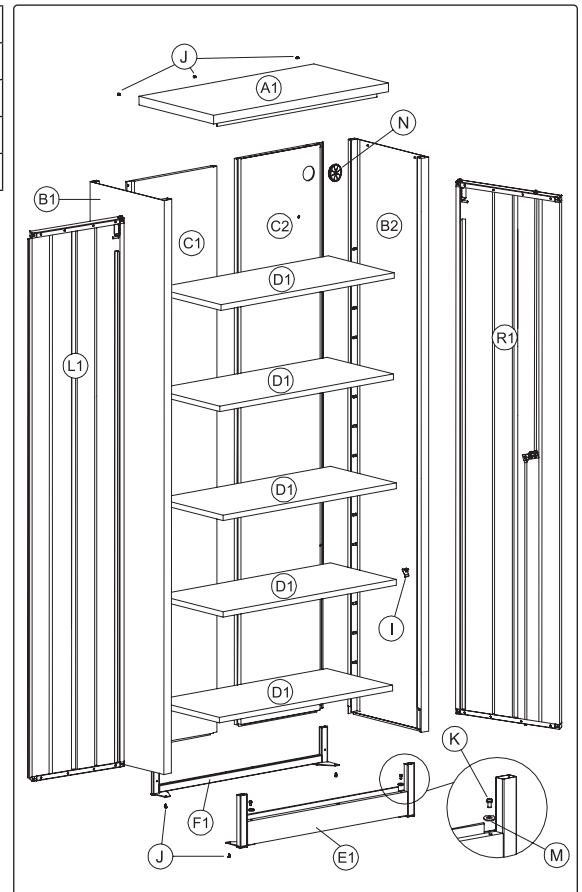
Manufactured from cold-rolled steel with a powder-coated finish for added corrosion resistance. Simple setup required. Features five shelves with adjustable heights, providing spacious storage to suit a variety of tools and equipment. Added security provided by a 3-point locking system. Suitable for use with Sealey Model No's AP7300, AP7301, AP7350C, APMR1, APMR2, APMR3, APMR5. Maximum load per shelf 30kg, total load 150kg.

3. SPECIFICATION

Model No:	APC1	APC2
Capacity per shelf	30kg	30kg
Nett Weight:	45kg	66.5kg
Overall Size (W x D x H):	860 x 540 x 2090mm	1160 x 540 x 2090mm
Shelves:	5	5

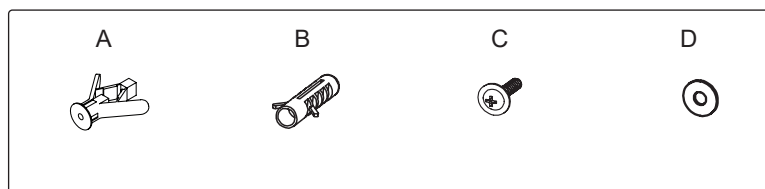
4. CONTENTS

A1	Top Panel	1 pc
B1	Left hand side panel	1 pc
B2	Right hand side panel	1 pc
C1	Left back panel	1 pc
C2	Right back panel	1 pc
D1	Shelf	5 pcs
E1	Front base bracket	1 pc
F1	Back base bracket	1 pc
R1	Right door	1 pc
L1	Left door	1 pc
I	Shelf support	20 pcs
J	M4x10mm self tapping screw	25 pcs
K	Bottom hinge pin	2 pcs
M	Washer	2 pcs
N	Wiring grommet	2 pcs



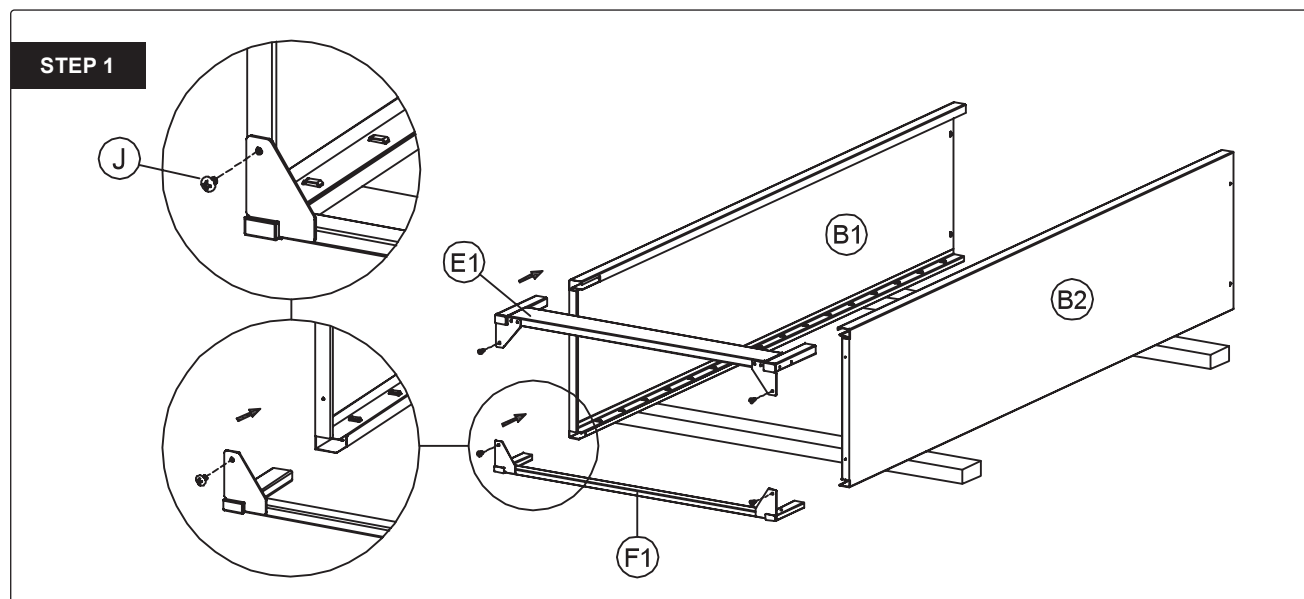
4.1. FIXINGS

A	Hollow wall fixing	X2
B	Wall plug	X2
C	Cross head screw	X2
D	Washer	X2

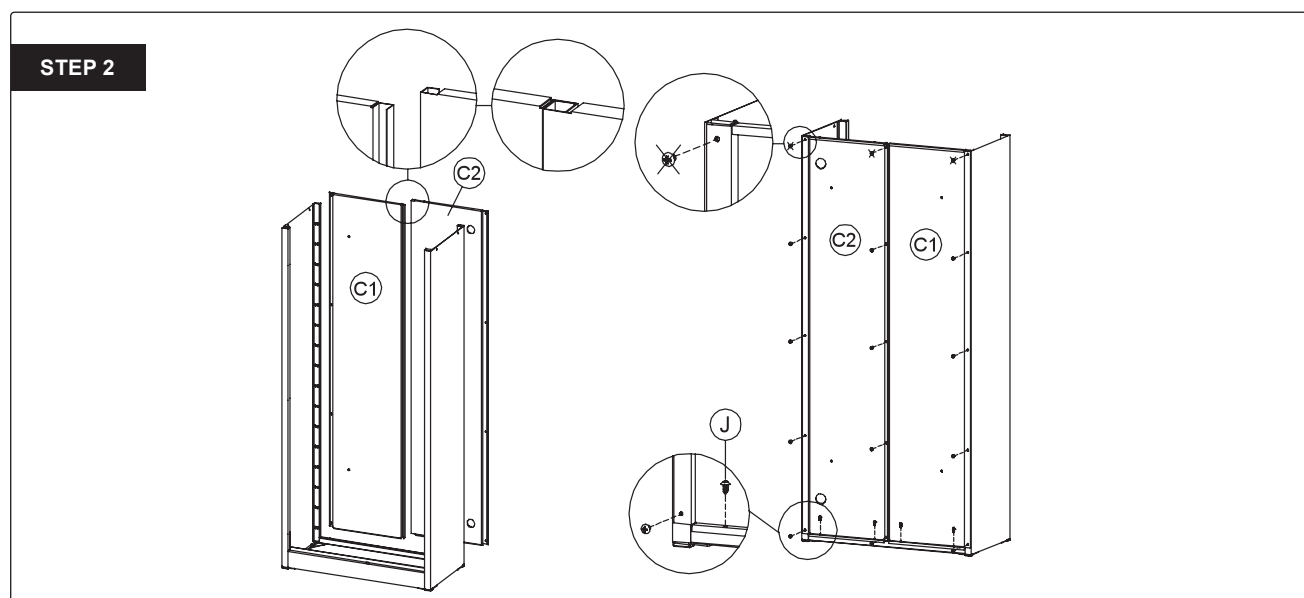


5. ASSEMBLY

IMPORTANT: Unpack the unit and check that all parts listed are present before beginning assembly. Use the packaging material to protect the panels and prevent scratching during assembly. Assemble the unit on a firm, level surface. **TIP:** We recommend using a trestle table or sawhorse to support the panels during assembly, as this will make the assembly process easier. Avoid assembling on carpet. Assembly requires two people. For additional safety and stability, we recommend securing the unit to a wall using a suitable anti-tip fixing. You will need a cross-head screwdriver and a rubber mallet to complete the assembly.



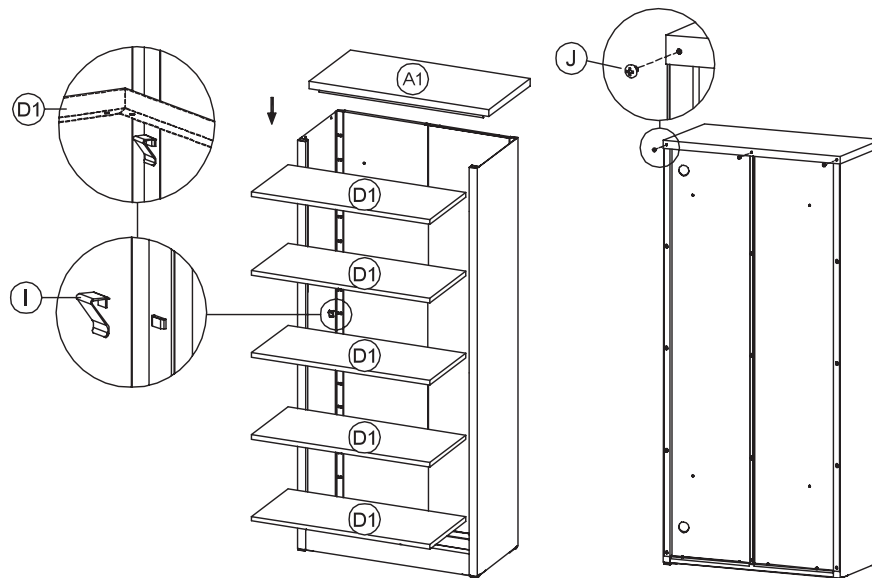
Step 1. Insert the front base bracket (E1) and rear base bracket (F1) into the bottom of the left side panel (B1) and right side panel (B2), as shown in the diagram. Secure the brackets using one screw (J) in each of the four corners, as illustrated.



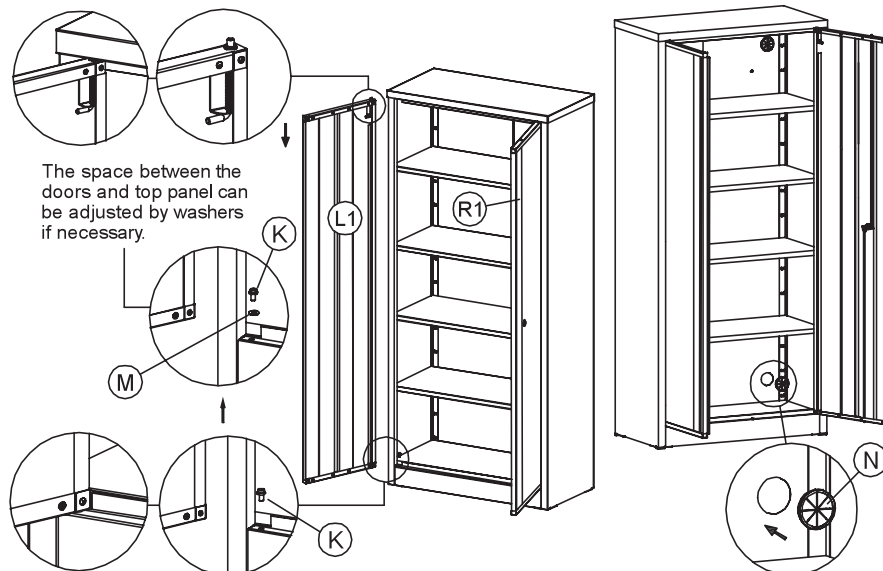
Step 2. Stand the unit upright and fit the left back panel (C1), followed by the right back panel (C2). Secure the back panels using self-tapping screws (J), as shown in the diagram.

NOTE: At this stage, install all the screws except those marked with a cross.

TIP: We recommend having a second person support the back panels from the opposite side while you secure the screws.

STEP 3

Step 3. Install the top panel (A1), ensuring it is pushed fully down over the two metal tabs at the top of the left and right side panels (B1 and B2). This locks the three panels together, allowing the doors to be fitted. Secure the top panel (A1) using the supplied self-tapping screws (J), as shown in the diagram. Finally, insert the shelf supports (I) into the four corner holes at the desired height for each shelf (D1), ensuring all four supports are level before fitting the shelf.

STEP 4

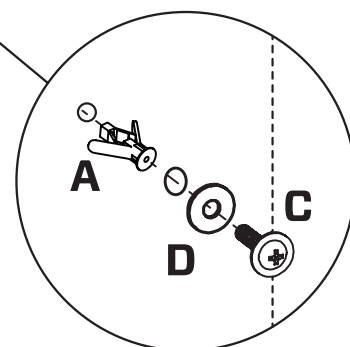
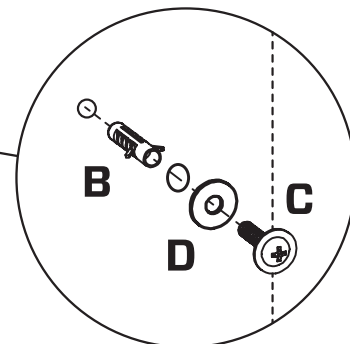
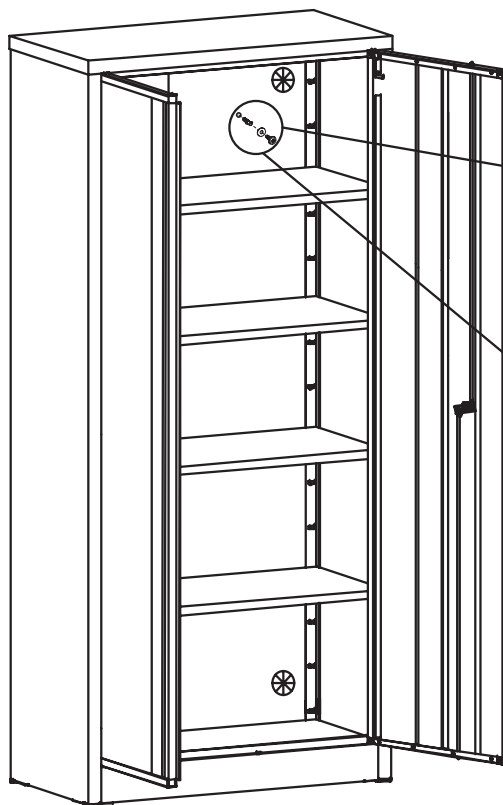
Step 4. Install the right door (R1) and left door (L1) by locating them onto the bottom hinge pins (K) and securing them with the top latches. If necessary, use the supplied washers (M) to adjust the gap between the doors and the top panel. Finally, insert the wiring grommets (N) into the pre-cut holes in the back panel.

NOTE: If you are having difficulty fitting the doors (L1 and R1), ensure the top panel (A1), fitted in Step 3, has fully engaged with the metal tabs on the side panels and is securely locked into place.

- ❑ **WARNING!** It is strongly recommended that this product is securely anchored. Furniture that tips over can cause serious injury or death. A tip-over prevention kit is supplied with this product to help prevent it from tipping forwards. For your safety, securely fix the product to a wall or other solid structure using the supplied fixings. (See illustration on the next page for reference).
- IMPORTANT:** Regularly check that the wall fixings remain secure. The stability of tall furniture may be affected by thick-pile carpets or uneven floors.

CAUTION: Before fitting the wall fixings, please observe the following:

1. Check for concealed electrical cables, water pipes or gas pipes before drilling into the wall. If you are unsure, seek advice from a qualified tradesperson.
2. Walls are constructed from different materials, such as solid masonry or plasterboard-lined cavity walls. Always use fixings that are suitable for your wall type. If necessary, seek advice from a qualified hardware retailer or tradesperson.

STEP 5**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



REGISTER YOUR
PURCHASE HERE

Jack Sealey (EU) Ltd t/a Sealey Group Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Jack Sealey Ltd t/a Sealey Group Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk