



™ 6 DRAWER ROLLCAB WITH VICE BASE - GREY/BLACK

MODEL NO'S: **APMWS2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual

1. SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this rollcab.
- ✓ Locate the tool rollcab in a suitable working area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- ✓ Keep the tool rollcab clean and tidy in accordance with good workshop practice.
- ✓ Keep children and unauthorised persons away from the working area.
- ✗ **DO NOT** use the tool rollcab for any purpose other than that for which it is designed.
- ✗ **DO NOT** move the tool rollcab with drawers open.
- ✗ **DO NOT** open more than one drawer at the same time.
- ✗ **DO NOT** step on the drawers.
- ✗ **DO NOT** use in damp work areas.
- ☐ **WARNING!** The warnings, cautions and instructions referred to in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

2. INTRODUCTION

 
Heavy gauged steel frame with reinforced inner walls for durability. Integrated vice base for direct clamping and material handling. Trigger lock prevents drawer opening during movement. Ø125mm castors for easy movement. Powder coated finish resists rust and solvent spills. Plastic bumpers reduce impact damage in busy workshops. Full height rear locking mechanism locks full-length drawers in multiple locations. Supplied with two keys. Includes a 10mm thick top mat.

3. SPECIFICATION

Model No:	APMWS2
Nett Weight:	53.4kg
Overall Size with handle:	788 x 468 x 974mm
Overall size without handle:	708 x 468 x 974mm
Small drawer (x4):	582 x 398 x 66mm
Medium Drawer (x1):	582 x 398 x 122mm
Large Drawer (x2):	582 x 398 x 180mm


4. ASSEMBLY

Place it on a protective surface to prevent any damage.

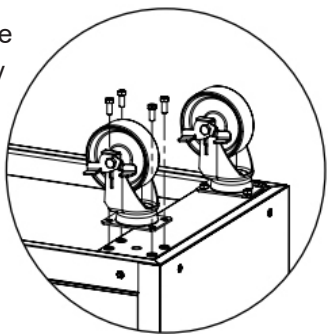


1. Attach Castors

 Attach castors to the bottom of unit with (16) M8 x 20mm bolts and spring washers.

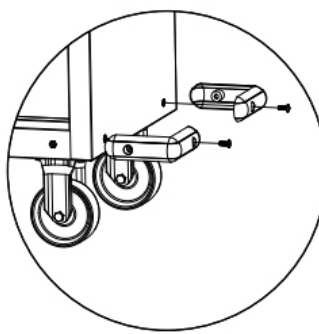


2. Attach Bumpers

 Attach bumpers to four corners with (8) M6 x 16mm bolts.

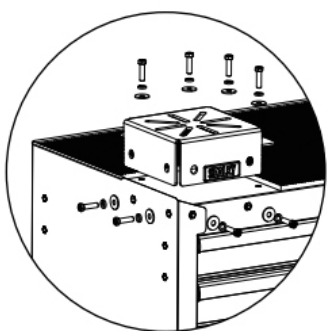


3. Attach Vice Base

 Attach vice base on top of the trolley with (8) M8 x 25mm bolts, flat washers, spring washers and (4) M8 nuts.

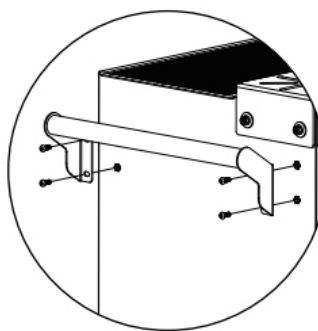

4. Attach Side Handle

 Attach side handle to the side panel with (4) M6 x 16mm round head bolts.

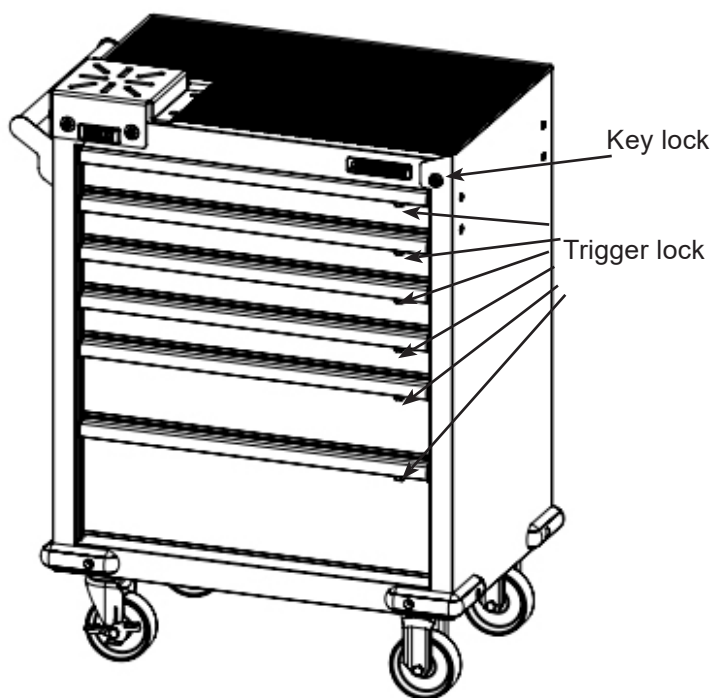

5. OPERATION

5.1. TO UNLOCK THE DRAWERS

- 5.1.1. Ensure the key lock located on the far right of the toolbox is in the unlocked position.
- 5.1.2. To open a drawer, place your finger under the right-hand side of the lower edge of the drawer.
- 5.1.3. Pull back the trigger lock to release the drawer.
- 5.1.4. Once the trigger lock is retracted, pull the drawer open.

5.2. TO LOCK THE DRAWERS

- 5.2.1. Ensure all drawers are fully closed and the trigger lock are latched.
- 5.2.2. Turn the key lock to the locked position. This will secure all drawers.

5.3. TO REMOVE THE DRAWERS

- 5.3.1. Fully extend it, then locate the release levers on each side. Push the right-hand lever up and the left-hand lever down simultaneously, then gently pull the drawer out.

5.3.2. TO REPLACE THE DRAW AFTER REMOVAL

- 5.3.3. To replace the drawer, slide it onto the runners, push it shut, then reopen to check the levers are locked.

6. MAINTENANCE

- 6.1. Periodically lubricate the drawer slides.
- 6.2. Clean the surfaces with a soft cloth and water.
- 6.3. Check all fixings and tighten if required.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 60 months from purchase date, proof of which is required for any claim.



REGISTER YOUR
PURCHASE HERE

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk