



INSTRUCTIONS FOR

# HIGH LEVEL SUPPLEMENTARY SUPPORT STAND

MODEL NO: **AS1500HS**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

**IMPORTANT NOTE:** these stands are rated singly. Used in pairs they will support twice the rated load.

**TAKE CARE;** you may know the total weight of the load you want to support but you cannot calculate the exact weight distribution between support points.

For this reason always allow a 40% margin for error.

For example: a load weighing 3tonne could have a single point load of more than 1.5tonne and two 1.5tonne supports would not be adequate.

**Note:** Sold singly but must be used in pairs.

Only to be used in conjunction with permanently fixed lifts. Not mobile column lifts.

## 1. SAFETY

### ❑ WARNING!

**DO NOT OVERLOAD SUPPLEMENTARY SUPPORT STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE STANDS. POSITION LOAD ON CENTRE OF CRUTCH/SADDLE ONLY. ALWAYS ENSURE ADEQUATE NUMBER OF STANDS ARE USED TO SUPPORT THE LOAD FULLY AND USE ON A HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE TO STANDS, LOSS OF LOAD RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY OR LOSS OF LIFE.**

### ▲ DANGER! GREAT CARE MUST BE TAKEN TO ENSURE YOU LOWER THE LOAD SLOWLY AND CAREFULLY ONTO THE CENTRES OF THE CRUTCH/SADDLE OF THE STANDS.

✓ Inspect stands before each use. **DO NOT** use if they show signs of damage. **DO NOT** use if it is suspected that they have been overloaded.

✓ Use only as specified by the manufacturer.

✓ These stands must be used in pairs and in conjunction with a permanently fixed lift. They are not designed to support a load on their own.

✓ Use no more than a single pair of stands either on the front or rear of the vehicle.

✓ Vehicle must have wheels that stay in contact with the lift chocked before using the stands.

✓ Ensure the load does not exceed the maximum capacity as marked on the stand.

✗ **DO NOT** alter or modify the stands in any way.

✓ Use on a hard, level surface, e.g. concrete. Do not use on uneven ground or tarmacadam.

✓ Make sure that each stand is securely located under a strong point on the load; consult the manufacturer's handbook for guidance.

✓ Ensure that height adjust locking mechanism is fully located before applying any load to the stand.

✓ Ensure that the load is located centrally on the saddle and that the weight is directed through the vertical axis of the stand.

✓ Ensure that the load and stands are stable before starting work.

✓ Ensure that it is not possible for the load to move before commencing any work.

✓ Before commencing any work undertake a risk assessment.

✓ Ensure that a responsible person is aware of the work about to be undertaken.

✓ Replace any labels on the stand should they become unreadable. This applies in particular to any warning or operation instruction labels. If replacement labels are required, contact your Sealey stockist.





✗ **DO NOT** use stands on the highway, or anywhere else if it is deemed to be unsafe.

✗ **DO NOT** push or twist the load whilst it is supported on stands.

✗ **DO NOT** mix components between stands. Use only as supplied.

✗ **DO NOT** allow children or animals in the vicinity of a loads supported on stands.

✗ **DO NOT** leave a load on stands in an area that could be considered a hazard to others or property.

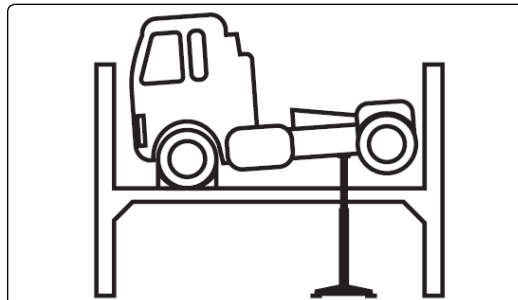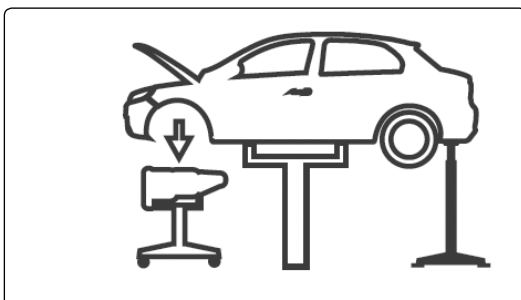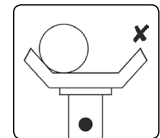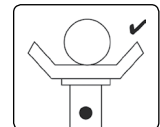

✓ **Only to be used in conjunction with permanently fixed lifts. Not mobile column lifts.**

✗ **DO NOT** use the stand or multiple stands to solely support the vehicle.

## 2. INTRODUCTION

All steel stand with pin and chain load support. Full width V-crutch for safe support of load.

**Note:** These stands should not be used to support a vehicle on their own. Sold singularly but **MUST** be used in pairs.

## 3. SPECIFICATION

Model No.....AS1500HS  
Capacity Each.....1.5tonne(1500Kg)  
Capacity Pair.....3tonne(3000Kg)  
Minimum Height.....1245mm  
Maximum Height.....1845mm

## 4. OPERATION

- 4.1. Before undertaking work, conduct a risk assessment with a responsible person and ensure it covers the weight to be supported and a margin for error. Never work alone on a load supported on these stands. It is the employer's responsibility to ensure the operator has read these instructions and is familiar with the products' use and limitations. Ensure that all operators can read English or have the instructions explained to them in their native language. Also ensure the warnings on the product are observed.
  - 4.2. Vehicle must have wheels that stay in contact with the lift chocked before using the stands.
  - 4.3. Use only in conjunction with a permanently fixed vehicle lift - Never with any other jacking device. Elevate the lift to the appropriate height and locate the supplementary supports, on the recommended support positions.
  - 4.4. Ensure the pin is inserted fully. Use stands as a pair to support either the front or rear of the vehicle only. **BE CERTAIN** that all the stands are set to a height that will leave the load supported completely horizontal and not at an angle that could cause slipping on the stand support heads. Ensure there are no objects or individuals in the area other than the operator and the supervisor. Take extreme care in lifting or lowering the load. Engage the assistance of a colleague while you perform this task. **LOWER ONTO ALL STANDS BEING USED AT THE SAME TIME**, ensuring load is lowered onto the centre of the crutch/saddle.
- WARNING!** When load is supported on stands never apply excessive force to the load so that it becomes unstable.
- 4.5. To remove stands, lift load slowly, ensuring that the load is balanced and will not slip from lifting points. Remove the stands.

## 5. MAINTENANCE

- 5.1. Before and after each use, check that stands and stand welds are not cracked and that there are no missing or damaged parts. Any suspect stands must be removed from service immediately.
- 5.2. Periodically lubricate the main support column with general purpose oil.
- 5.3. After use, wipe the stand and saddles clean.
- 5.4. Store the stand in a dry childproof area.

**Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to [www.sealey.co.uk](http://www.sealey.co.uk), email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or telephone 01284 757500.**



### Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk.  
IP32 7AR



01284 757500



01284 703534



[www.sealey.co.uk](http://www.sealey.co.uk)



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)