



INSTRUCTIONS FOR;
CHARGER DISPLAY STAND

MODEL NO: **CDS1**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- DO NOT** use the display stand for any purpose other than that for which it is designed.
- WARNING!** Place the display stand on a level and solid floor.
- DO NOT** use the display stand outdoors or in damp or wet conditions.

2. ASSEMBLY

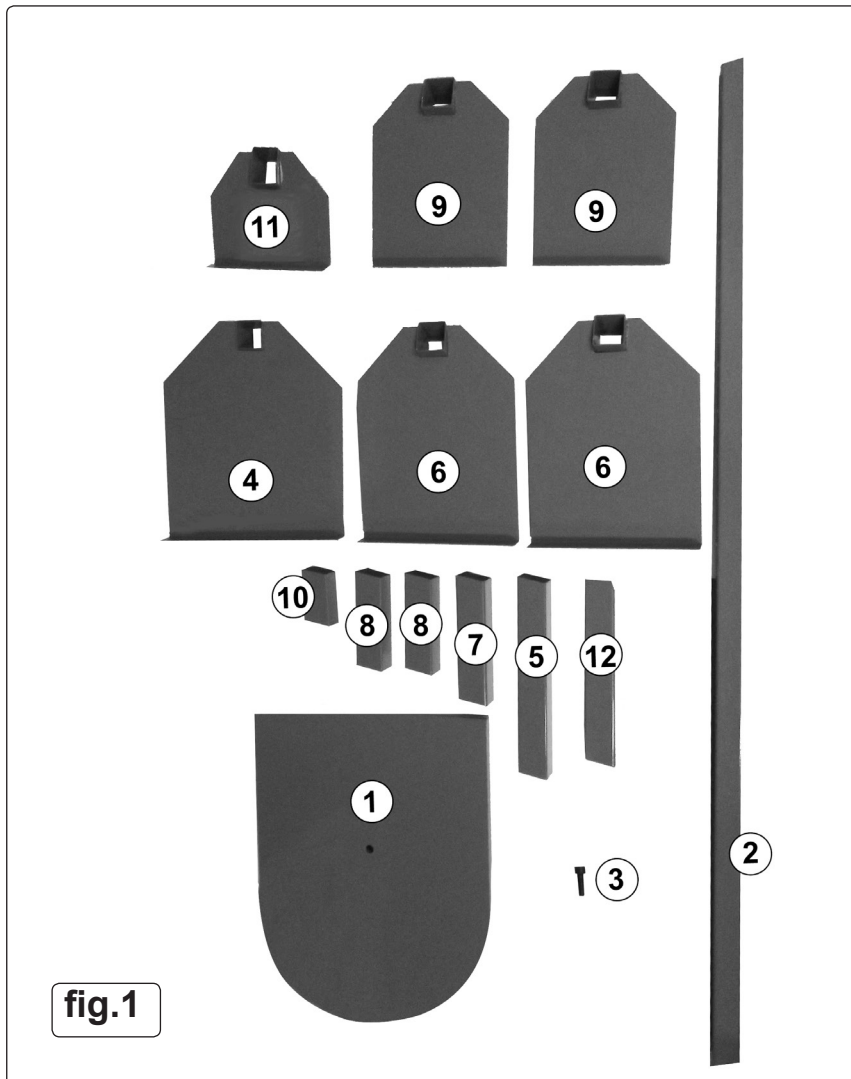


fig.1

- 2.1. Assembly is achieved easily by sliding the progressively smaller shelves and spacers over the upright.
- 2.1.1. Connect the upright (fig.1.2) to the base (fig.1.1) by means of the M10 hex bolt (fig.1.3). Ensure that the semi-circular end of the base faces to the rear.
- 2.1.2. Slide and lower the largest shelf (340 x 300mm - fig.1.4) over the upright followed by the 300mm long spacer (fig.1.5).
- 2.1.3. Slide one of the second shelves (325 x 250mm - fig.1.6) over the upright followed by 190mm long spacer (fig.1.7).
- 2.1.4. Repeat with the identical shelf followed by one of the 150mm spacers (fig.1.8).
- 2.1.5. Slide one of the 265 x 200mm shelves (fig.1.9) down followed by the other 150mm spacer (fig.1.8).
- 2.1.6. Slide the other fig.1.9 shelf over the upright followed by the 80mm spacer (fig.1.10).
- 2.1.7. Slide the remaining shelf (140 x 200mm - fig.1.11) down and top with the cap (fig.1.12).
- 2.1.8. Apply the labels in the order shown in fig.2 and affix the showcard to the cap.

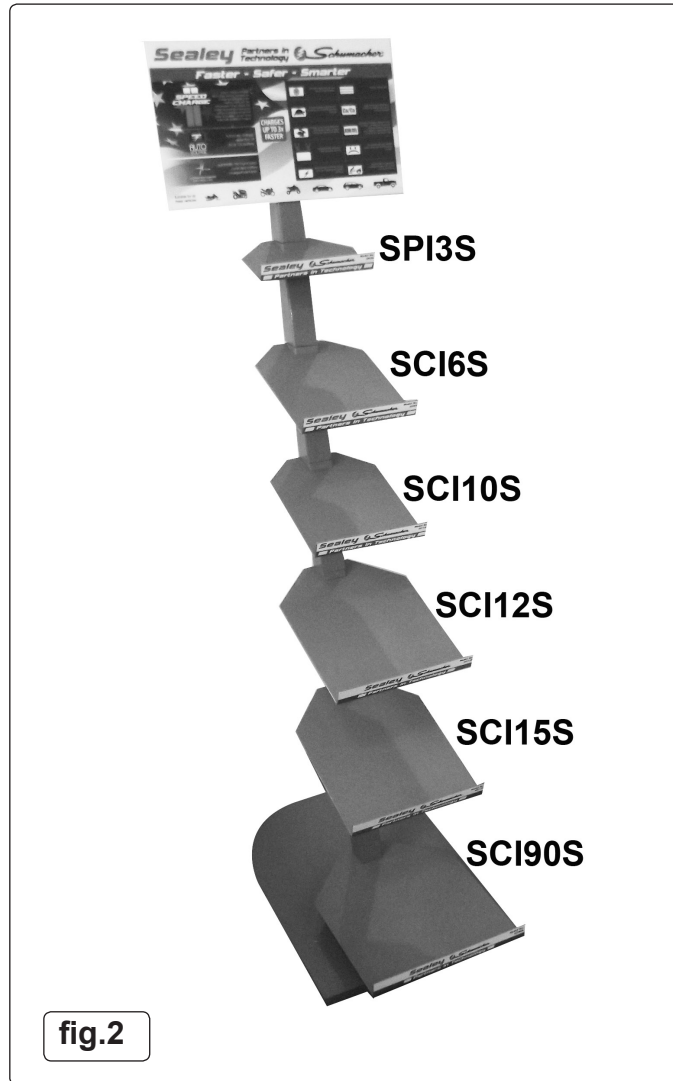


fig.2

3. MAINTENANCE.

- 3.1. Check that the bolt securing the upright is tight periodically.
- 3.2. Clean the stand with a cloth dampened in a mild detergent solution.

Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk