



20V 15L HANDHELD ASH VACUUM CLEANER

MODEL NO: CP20VAV

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Keep in dry area protect from rain



Warning!

1. SAFETY

- ❑ **WARNING!** This handheld ash vacuum cleaner is for the vacuuming of cold ashes from fireplaces, wood or coal stoves, BBQ's and grills.
NOTE: Cold ash is defined as ash that has sufficiently cooled down without any pockets of hot embers.
- ✓ Rake through the ash with metal tools, to check for any hot embers prior to using the handheld ash vacuum cleaner.
- ✗ **DO NOT** use for vacuuming materials with a temperature above 40°C.
- ▲ **DANGER! DO NOT** vacuum hot or glowing ash, cigarette ends, inflammable, explosive, corrosive or other dangerous substances.
- ✗ **DO NOT** use to vacuum soot.
- ✗ **DO NOT** use to vacuum the following health hazardous dusts:
Class L (soft woods and solid surface material).
Class M (hard woods, board materials, concrete and brick dust).
Class H (asbestos and mould).
- ✗ **DO NOT** operate the handheld ash vacuum cleaner without the filter in place. Using the ash vacuum cleaner without the filter may result in motor failure and will invalidate the warranty.
- ✗ **DO NOT** allow children or untrained persons to operate the handheld ash vacuum cleaner.
- ✗ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ✗ **DO NOT** Allow children to play with the appliance.
- ✓ Cleaning and user maintenance shall not be made by children without supervision.
- ✗ **DO NOT** place the attachments close to your face.
- ✗ **DO NOT** point the hose end at other persons or animals.
- ✗ **DO NOT** leave the handheld ash vacuum cleaner running unattended. Remove the battery cartridge when not in use.
- ✗ **DO NOT** operate the handheld ash vacuum cleaner while under the influence of drugs, alcohol or intoxicating medication.
- ✗ **DO NOT** use the handheld ash vacuum cleaner in the rain or in very damp conditions.
- ✗ **DO NOT** use the handheld ash vacuum cleaner for a task it is not designed to perform.
- ✓ Remove the battery cartridge from the handheld ash vacuum cleaner before servicing, changing accessories, or performing any maintenance.
- ✓ Use only genuine parts and accessories. Unauthorised parts and accessories may be dangerous and will invalidate your warranty.
- ✓ Maintain the handheld ash vacuum cleaner in good condition. Use an authorised agent for servicing.
- ✓ Empty and clean the handheld ash vacuum cleaner after each use.
- ✓ When not in use store the handheld ash vacuum cleaner in it's original packaging in a clean, safe, childproof location.
- ❑ **WARNING! The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.**

2. INTRODUCTION


Extremely lightweight portable cordless ash vacuum. Ideal for the collection of ash or fire debris from fireplaces, stoves, wood burners, BBQs, grills and more. 150W motor provides great suction performance whilst also acting as a blower. With a 15L capacity, the lightweight tank features quick release clips for ease of emptying. A 1m flexible metal lined suction hose allows the suction of ash up to a temperature of 40°C(100°F). Easily switch to blow function by using the outlet on the top of the vacuum. Includes a HEPA filter with inner metal mesh preventing the leaking of ash and dust and round aluminium nozzle. Requires compatible 20V battery and mains charger, sold separately.

3. SPECIFICATION

Model No:CP20VAV
 Airflow:36m³/hr
 Battery:20V 2Ah - 6Ah Lithium-ion (not included)
 Consumable parts: CP20VBP2-2Ah Battery
P20VBP4-4Ah Battery,CP20VBP6-6Ah Battery
 Drum size:..... 15L
 Filter type:.....HEPA
 Maximum vacuum pressure: 100mbar
 Motor power:..... 150W
 Replacement Parts: CP20VMC-Mains Charger (not included)
 Supply:.....20V
 Vacuum accessories diameter: 32mm

4. CONTENTS

ITEM	DESCRIPTION
1	Tank
2	Cover
3	HEPA Filter
4	Foam filter
5	Suction hose
6	Hose nozzle extension

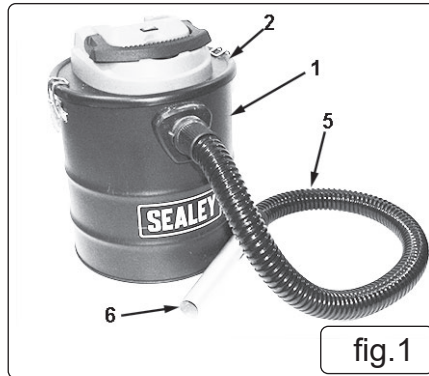

5. ASSEMBLY

- 5.1. ATTACHING THE FOAM FILTER**
 5.1.1. Attach the foam filter to the underside of the motor housing, securing it onto the two retaining tabs (fig 3).
- 5.2. REMOVING THE FOAM FILTER**
 5.2.1. With care ease the foam filter off the retaining tabs.
- 5.3. ATTACHING THE HEPA FILTER**
 5.3.1. The HEPA filter is a push fit. Fully push the filter onto the motor housing (fig 4).
- 5.4. REMOVING THE HEPA FILTER**
 5.4.1. To remove the HEPA filter follow section 5.3 but in reverse.
- 5.5. ATTACHING THE COVER**
 5.5.1. Centrally place the cover with the attached filters onto the top of the tank (fig 5).
 5.5.2. Secure into place with the latch hooks (fig 5).
- 5.6. REMOVING THE COVER**
 5.6.1. To remove the cover follow section 5.5 but in reverse.
- 5.7. ATTACHING THE HOSE**
 5.7.1. Align the tongues on the end of the hose with the grooves in the tank suction inlet and turn in the direction of the lock arrow indicator (fig 5).
- 5.8. REMOVING THE HOSE**
 5.8.1. To remove the hose follow section 5.7 but in reverse.
- 5.9. ATTACHING THE HOSE NOZZLE EXTENSION**
 5.9.1. Centrally insert one end of the metal hose nozzle extension into the remaining open end of the hose (fig 1).
- 5.10. REMOVING THE HOSE NOZZLE EXTENSION**
 5.10.1. To remove the hose nozzle extension follow section 5.9 but in reverse.
- 5.11. INSTALLING THE BATTERY CARTRIDGE**
 5.11.1. Align the tongue on the battery cartridge with the groove in the battery housing on the cover and slide into place (fig 5).
 5.11.2. Insert all the way until the battery cartridge is locked into position with an audible click.
- 5.12. REMOVING THE BATTERY CARTRIDGE**
 5.12.1. Push the battery cartridge latch button, the slide and remove the battery.

6. OPERATION

NOTE: Ensure all Safety Instructions in Section 1 are read and fully understood and carried out before use and retain the instructions and warnings for future reference.





- 6.1. POWER SWITCH**
 6.1.1. To turn the handheld ash vacuum cleaner on, press the **I** (ON) on the power switch (fig 6).
 6.1.2. To turn the handheld ash vacuum cleaner off, press the **O** (OFF) on the power switch (fig 6).
- 6.2. EMPTYING THE TANK**
 WARNING! Ensure that the power switch is in the OFF position and the battery cartridge is removed.
 6.2.1. Release the latch clips (fig 5) and remove the cover (fig 5) and place in a secure location.
 6.2.2. Empty the ash into a suitable container.
NOTE: Dispose of the ash properly according to local regulations.

6.3. BLOWER FUNCTION

- 6.3.1. Turn the power switch to the OFF position.
- 6.3.2. Remove the suction hose from the tank. See section 5.8.
- 6.3.3. Lift the carry handle into the raised position.
- 6.3.4. Align the tongues on the end of the suction hose with the grooves in the tank cover, situated on top of the cover, and turn clockwise to lock the suction hose in place (fig 6).
- 6.3.5. Turn the power switch to the ON position.

6.4. RETURN TO VACUUM FUNCTION

- 6.4.1. Turn the power switch to the OFF position.
- 6.4.2. Remove the suction hose, from the tank cover, by turning counter clockwise.
- 6.4.3. Reattach the suction hose to the tank (fig 1). See section 5.7.

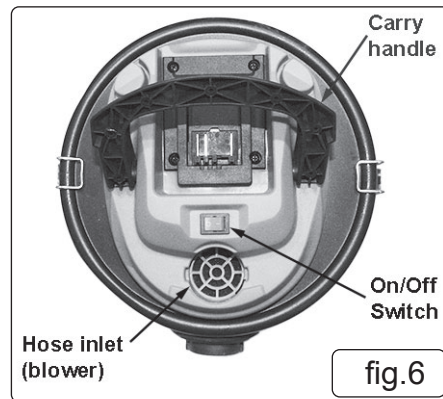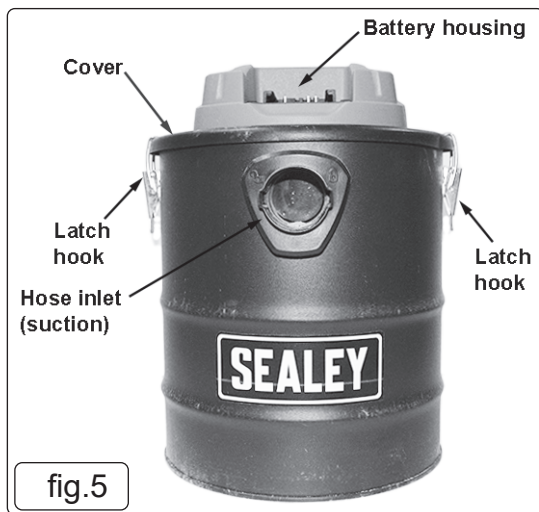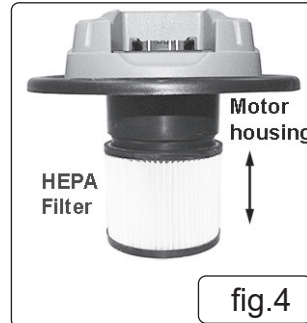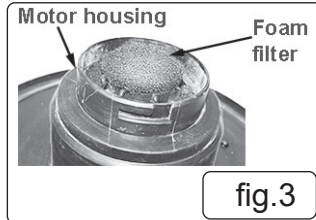

7. MAINTENANCE

- ❑ **WARNING!** Prior to carrying out any maintenance or cleaning remove the battery cartridge. See section 5.12.

7.1. HEPA FILTER CLEANING

- 7.1.1. When there is a notable reduction of suction the HEPA filter will require cleaning.
- 7.1.2. Remove the cover from the tank. See section 5.6.
- 7.1.3. Remove the filter. See section 5.4.
- 7.1.4. For routine cleaning, remove any deposits using a soft bristle brush (not supplied) into a suitable container.

NOTE: Dispose of the waste properly according to local regulations.

- ❑ **WARNING!** Avoid breathing in any airborne dust.

7.2. CLEANING

- 7.2.1. Clean with a damp cloth
- * **DO NOT** use abrasive or solvent cleaners.

8. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor does not start	No battery charge	Recharge the battery cartridge. Replace the battery if recharging is ineffective
	Cleaner not switched on	Switch on
Low suction power	Blocked hose	Remove the blockage
	Dust filter clogged	Remove and clean
	Motor cover not fitted correctly	Remove and reattach correctly



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk