



20V CORDLESS GLUE GUN - BODY ONLY

MODEL NO: CP20VGG

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear protective gloves



Warning! hot surface



Wear eye protection

1. SAFETY

1.1. GENERAL SAFETY

- ✓ Familiarise yourself with this products application and limitations, as well as the specific potential hazards peculiar to the glue gun.
 - ❑ **WARNING!** Disconnect the charging lead before changing accessories, servicing or performing any maintenance.
 - ✓ Maintain the glue gun in good condition (use an authorised service agent).
 - ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
 - ❑ **WARNING!** Always wear approved eye or face protection when operating the glue gun.
 - ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
 - ✓ Remove ill fitting clothing. Remove ties, watches, rings, and other loose jewellery, and contain and/ or tie back long hair.
 - ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes,
 - ✓ Secure non stable workpiece with a clamp, vice or other adequate holding device.
 - ✗ **DO NOT** touch the hot nozzle or the silicon cap.
 - ✗ **DO NOT** use the glue gun for a task it was not designed to perform.
 - ✗ **DO NOT** operate the glue gun if any parts are damaged or missing as this may cause failure and/or possible personal injury.
 - ✗ **DO NOT** hold the workpiece by hand. Use clamps or a vice (not included) to secure the workpiece. Available from your Sealey stockist.
 - ✗ **DO NOT** get the glue gun wet or use in damp or wet locations or areas where there is condensation.
 - ✗ **DO NOT** place nozzle close to your face (especially eyes, ears, etc) or other persons or animals.
 - ✗ **DO NOT** allow children or untrained persons to operate the glue gun.
 - ✗ **DO NOT** operate the glue gun when you are tired or under the influence of alcohol, drugs or intoxicating medication.
 - ✗ **DO NOT** get glue on your skin.
 - ✗ **DO NOT** inhale any vapour given off by the glue.
 - ✗ **DO NOT** carry the glue gun with your finger on the trigger.
 - ✗ **DO NOT** use the glue gun where there are flammable liquids, solids or gases such as paint solvents, etc.
 - ✗ **DO NOT** leave the glue gun operating/heating up unattended.
 - ✓ Protect work surface from glue spilt during warm up phase and whilst being used.
 - ✓ After use place the glue gun down to cool in a safe manner. Ensure it has cooled down completely before storage.
 - ✓ When not in use switch the glue gun off, store the tool in a safe, dry child proof area.
- NOTE:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

2. INTRODUCTION

Ready to use in 3 minutes. Cordless operation allows use anywhere in the workshop. Composite housing with soft grip for added comfort. Suitable for glue stick between Ø10-12mm. On/off switch and trigger feed control.

3. SPECIFICATION

Model no CP20VGG
Max. running time 3.5hr
Battery 20V 2Ah - 4 Ah Li-ion (not included)
Glue stick diameter 10-12mm
Consumables..... AK292/2 - All purpose glue stick pack of 25

4. OPERATION

- WARNING!** Risk of burns. If hot glue comes into contact with skin, hold under a stream of cold water for several minutes.
- 4.1. Save energy, only switch on when being used.
- WARNING! Ensure On/Off switch is in OFF position.**
- 4.2. **FIT BATTERY**
- 4.3. **SWITCH ON**
Slide button On/Off to turn on, red LED indicator light will illuminate . **DO NOT** leave unattended. Place on a heatproof surface.
- 4.4. **SWITCH OFF**
Slide On/Off button red LED indicator will turn off.
- 4.5. After use place glue gun down in a safe manner and allow it to cool down completely before storage.
- 4.6. **PREPARATION FOR GLUING**
- 4.6.1. Surfaces must be free from grease, clean and dry.
- 4.6.2. Materials to be glued as well as the surface on which the work is taking place must not be easily ignitable or flammable.
- 4.6.3. Check the suitability of materials to be glued on a test work piece.
- 4.6.4. Ambient temperature of a workpiece must be between +5°C and +50°C.
- 4.6.5. Materials such as metals, which cool off the glue quickly, should be preheated with a hot air gun.
- 4.7. **GLUING**
- 4.7.1. Insert the appropriate glue stick into the opening in the rear of the glue gun.
- 4.7.2. Switch on and allow to heat up.
- 4.7.3. Press the feed trigger, applying moderate pressure.
- 4.7.4. Apply glue onto one side only, press the glued surfaces together. It is still possible to adjust the location of the two pieces at this point.
- 4.7.5. The glued joint can be subjected to load after a cool down period of approximately two minutes.
- 4.7.6. Remove glue residue after cooling with a blunt object. If necessary glued joints can be separated again by applying heat.
- * **DO NOT** use inflammable solvents for cleaning the surfaces to be glued. Solvent residues can ignite from hot glue or hazardous vapours could develop.
- * **DO NOT** remove a partially used glue stick from the end of the glue gun.

5. MAINTENANCE

- WARNING!** Remove battery before performing maintenance.
- 5.1. Clean with a damp cloth, **DO NOT** use solvents.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk