



# CORDLESS 20V TELESCOPIC POLE FOR CP20VPSH/CP20VPHT

MODEL NO: **CP20VTP**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instructions

## 1. SAFETY

### 1.1. BATTERY SAFETY INSTRUCTIONS (BATTERY NOT INCLUDED)

 
- WARNING!** Battery contains Lithium-ion which is dangerous. Handle with care to avoid damage, fire, corrosion or personal injury.
- Charge battery prior to its first use. The battery will have been shipped in a low charge state. To reduce the risk of burns or fire:
- DO NOT** attempt to open, disassemble, modify or service the battery pack.
- DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
- DO NOT** expose to temperatures above 40°C (104°F).
- Replace only with the battery pack designated for this product.
- Use only the charging base provided to charge the tool.
- Remove the battery if the tool is not to be used for a period of time.
- Keep the battery terminals and grooves free from wood chips, sawdust or soil.
- DO NOT** allow the battery to become fully discharged.
- Recharge the battery when you notice the tool has less power.
- DO NOT** recharge a fully charged battery. Overcharging shortens the batteries service life.
- Charge the battery at a room temperature between 5°C to 45°C.
- Charge the battery if tool has not been used for 6 months.
- DO NOT** attempt recharging the battery by means of an engine generator or a DC power source.
- WARNING!** Dispose of spent batteries correctly as they contain Lithium-ion. **DANGER! DO NOT** attempt to disassemble the battery. For safety and environmental reasons **DO NOT** discard in domestic waste or by burning. **ONLY** discard or recycle according to local authority regulations.
- WARNING! DO NOT** allow a leaking battery to contact your person.

### 1.2. GENERAL SAFETY


- WARNING!** Ensure that Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- Familiarise yourself with the applications, limitations and potential hazards peculiar to the tool.
- WARNING!** Disconnect the battery before changing accessories, servicing or performing any maintenance.
- Maintain the tool in good condition (use an authorised service agent).
- Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- Keep the work area clean, uncluttered and ensure that there is adequate lighting.
- Keep the tool clean for best and safest performance.
- Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain, and/or tie back, long hair.
- Keep children and unauthorised persons away from the work area.
- DO NOT** use the tool for any purpose other than that for which it is designed.
- DO NOT** operate the tool if any parts are damaged or missing.
- DO NOT** get the tool wet or use in damp or wet locations or areas where there is condensation.
- DO NOT** allow untrained persons to operate the tool.
- DO NOT** operate tool when you are tired or under the influence of alcohol, drugs or intoxicating medication.



CP20VTP

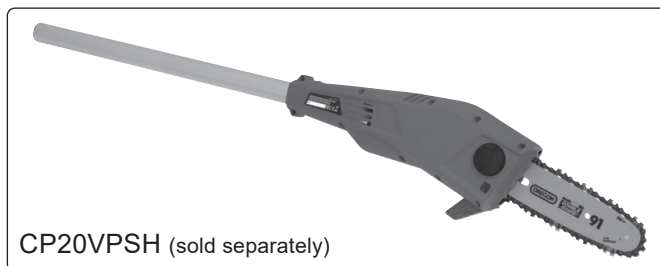

CP20VPSH (sold separately)

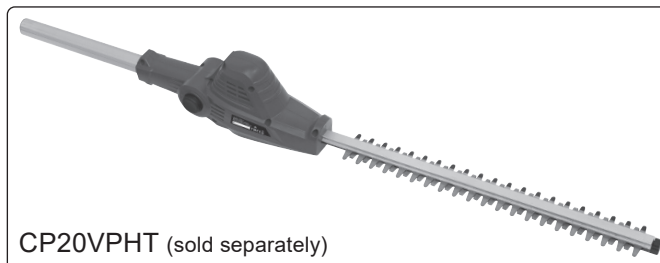 

CP20VPHT (sold separately)

## 2. INTRODUCTION

Adjustable telescopic pole for Model No's CP20VPSH Saw Head or CP20VPHT Hedge Trimmer Head. Lightweight and adjustable for easy use with either choice of attachment. With adjustable clip waist fastener for added security.

## 3. SPECIFICATION

Model No: ..... CP20VTP

## 4. OPERATION

**IMPORTANT WARRANTY INFORMATION:** the battery pack fitted to this cordless tool are considered to be a consumable item and its ability to accept charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year - this does not cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery pack even if it is less than one year old.

### 4.1. BATTERY INSTALLATION

 
- 4.1.1. Hold the tool firmly and align the tongue on the battery cartridge with the groove in the housing and slide into place (fig 1).
- 4.1.2. Fully push the battery cartridge until it locks into place with an audible click.

### 4.2. BATTERY REMOVAL

- 4.2.1. Hold the tool firmly and press the battery release button, then slide and remove the battery cartridge (fig 1).



Indicator lights		Remaining capacity
Lighted	Off	
		75% to 100%
		25% to 50%
		10% to 25%

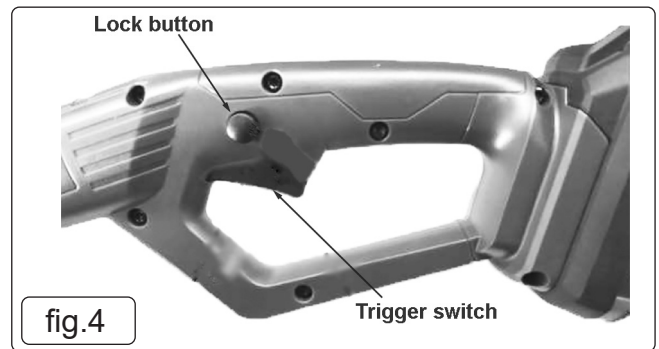

### 4.3. BATTERY POWER INDICATOR

- 4.3.1. Press the check button (fig 2), on the battery cartridge.
- 4.3.2. The indicator lights (fig 2), will illuminate to indicate remaining capacity (fig 3).

### 4.4. STARTING / STOPPING THE TOOL

- 4.4.1. To start the tool, press the lock button (fig 4) in and pull the trigger switch (fig 4) upwards, towards the handle.
- 4.4.2. To stop the tool, release the trigger switch (fig 4).

- WARNING!** Before attaching the battery cartridge to the tool, firstly check that the trigger switch returns to the OFF position when released.
- WARNING! DO NOT** use the tool if it can be started without pressing the lock button. Return the tool to an authorised Sealey service centre for repair.
- DO NOT** try and override the lock button by locking it down with tape or similar.

## 5. PROTECTION SYSTEM

The tool is equipped with a tool/battery protection system. This system automatically cuts off the power to the motor to extend the tool and battery life. The tool will automatically stop during its operation if the tool or battery is subjected to one of the following:

### 5.1. OVERLOAD PROTECTION

- 5.1.1. If the battery draws an abnormally high current, the tool will automatically stop, without an indication.
- 5.1.2. Stop the operation that has caused the battery to become overloaded.
- 5.1.3. Restart the tool.

### 5.2. OVERHEAT PROTECTION

- 5.2.1. If the tool or battery becomes overheated, the tool will automatically stop.
- 5.2.2. Allow the battery or tool to fully cool down.
- 5.2.3. Restart the tool.

### 5.3. OVER DISCHARGE PROTECTION

- 5.3.1. When the battery capacity becomes low the tool will automatically stop.
- 5.3.2. Remove the battery cartridge from the tool.
- 5.3.3. Recharge the battery cartridge.

## 6. TELESCOPIC POLE

### 6.1. ADJUSTING THE TELESCOPIC HEIGHT

❑ **WARNING!** Prior to adjusting the telescopic height, switch off the tool and remove the battery cartridge.

 
 
 
6.1.1. Loosen the joint nut (fig 5) by turning it clockwise.

6.1.2. Extend the pole to the required length (fig 6).

6.1.3. Re-tighten the joint nut (fig 7) by turning counter clockwise.

NOTE: the telescopic pole can be extended from 2.1m to 2.6m.

❑ **WARNING!** Ensure the joint nut is securely tightened to avoid any slippage.

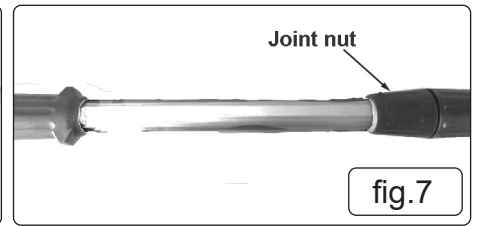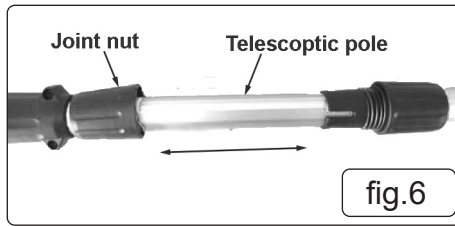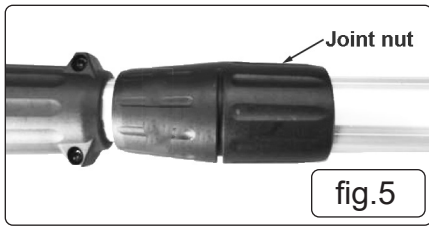

## 7. ATTACHMENT TO POLE

 
 
 
### 7.1. ATTACHMENT OF TOOL HEAD TO THE TELESCOPIC POLE

❑ **WARNING!** Before fitting tool head to pole switch off and remove the battery.

7.1.1. Turn the attachment locking nut (fig.10) at the end of the telescopic pole so that the tool head can be inserted. Push the head home (fig.11) making sure the electrical contacts at the end of both components are aligned correctly (telescopic pole contact (fig.8), tool head contact (fig.9)).

7.1.2. Tighten the attachment locking nut to secure both components together (fig.10).


7.1.3. To separate again reverse sections 7.1.1 and 7.1.2

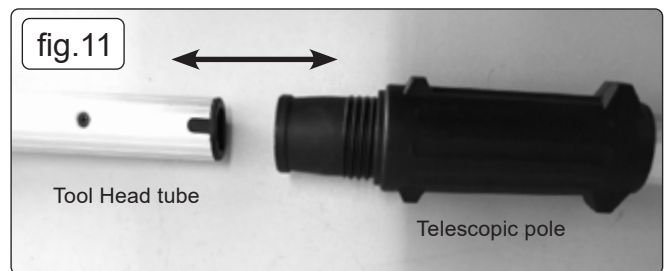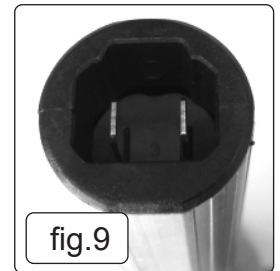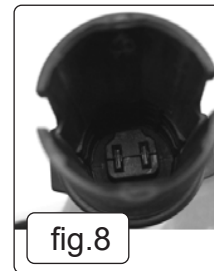

## 8. SHOULDER HARNESS

8.1. Securely fasten the buckle (fig.12) and hook the harness clasp onto the telescopic poles hook fixing bracket (fig.13).

 8.1.1. Place the harness over your right shoulder only (fig.14).

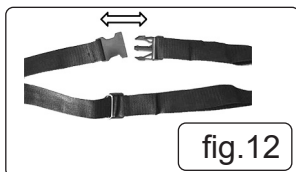

## 9. MAINTENANCE

### 9.1. CLEANING

9.1.1. Use a clean cloth to remove dirt, dust, oil, grease etc.

\* **DO NOT** use solvents.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



#### BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk