



INSTRUCTIONS FOR:

CORDLESS POLISHER/SANDER 14.4V 2Ah LITHIUM ION 2 BATTERIES 40MIN CHARGER

MODEL NOs: **CP6005, CP6015 (BODY ONLY)**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions and maintained properly, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to Instruction Manual



Wear Eye Protection



Wear Ear Protection



Wear Protective Gloves



Charger: Indoor Use Only

 


Wear a mask

1. SAFETY

1.1. ELECTRICAL SAFETY.

- WARNING!** It is the owner's responsibility to read, understand and comply with the following electrical instructions:
You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products, particularly portable equipment which is plugged into an electrical supply not protected by an RCCB. **You must** also read and understand the following instructions concerning electrical safety.
- 1.1.1. The **Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2. The **Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator.
If in any doubt about electrical safety, contact a qualified electrician.
- ✓ Ensure that the charger and cable are inspected for wear and damage, to ensure they are safe before connecting to the mains power supply. If worn or damaged **DO NOT** use, replace immediately or contact a qualified electrician.
DO NOT use worn or damage cables, plugs or connectors. Have any faulty item repaired or replaced immediately by a qualified electrician. When an ASTA/BS approved UK 3 pin plug is damaged, cut the cable just above the plug and **dispose of the plug safely.**
Ensure that the double insulated charger is correctly connected via a three-pin plug, as follows:
 - a) Connect the Brown live wire to live terminal 'L'.
 - b) Connect the Blue neutral wire to the neutral terminal 'N'.
 - c) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends past the cable clamp and that the clamp is tight.**Note that the earth pin 'E' remains unconnected.**
- ✓ Check cables are always protected against short circuit and overload.

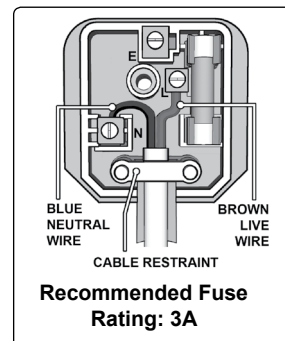

1.2. BATTERY SAFETY.

- ✓ Charge battery prior to first use. The battery pack will have been shipped in a low charge state.
- ✓ Use only the charger provided to charge the polisher battery.
- ✗ **DO NOT** charge battery when room temperature is below 50°F (10°C) or above 104°F (40°C).
- ✗ **DO NOT** attempt recharging the battery by means of a generator or a DC power source.
- ✗ **DO NOT** short-circuit the battery by linking both terminals with conductive materials.
- ✗ **DO NOT** store the battery (or wrench) in locations where the temperature may exceed 104°F (40°C).
- ▲ **DANGER! DO NOT attempt to dismantle the battery pack. For safety and environmental reasons DO NOT discard in domestic waste or by burning. ONLY discard or recycle according to local authority regulations.**
- WARNING! DO NOT allow a leaking battery to contact your person. If you come into contact with battery liquid take the following immediate action:**
 - a) Skin contact: Wash immediately with soap and water, then wash flesh in either lemon juice or vinegar.
 - b) Eye contact: Wash with a strong solution of boric acid, and seek immediate medical attention.

1.3. BATTERY CHARGER SAFETY INSTRUCTIONS.

- WARNING: DO NOT use the charger to charge any battery other than that supplied for the polisher. Other types of batteries may explode.**
- ✓ All mains electrical supply safety features must be followed as described in 1.1. above.
- ✓ Disconnect the charger from the mains power supply when not in use.
- ✓ **Important:** Check that the voltage marked on the charger is the same as the power supply to be used.
- ✗ **DO NOT** pull or carry the charger by the power lead, or pull the plug from the mains socket by the power lead.
- ✗ **DO NOT** use any other type of charger.
- ✗ **DO NOT** try to open or dismantle the charger.
- ✗ **DO NOT** get the charger wet, or use in wet, damp conditions (for indoor use only).
- ✗ **DO NOT** operate the charger if it or the battery is damaged.
- ✗ **DO NOT** insert foreign objects or material into the hole reserved for the battery.
- ✗ **DO NOT** force the battery into the charger. The battery will only fit one way to ensure correct polarity alignment.
- ✗ **DO NOT** charge a second battery immediately. Consecutive charging will overheat the charger. Allow the unit to cool for 15 minutes before charging the next battery.
- ✓ Store the charger in the same manner as the battery, see section 1.2.

1.1. **GENERAL SAFETY.**

- ✓ Maintain the polisher and battery in good condition. Check moving parts alignment on a regular basis.
- ✓ Replace or repair damaged parts. Use an authorised service agent and recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Ensure the polisher is switched off before installing the battery pack.
- ✓ Keep the polisher and charger clean for best and safest performance.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain long hair.
- ✓ Ensure battery pack is correctly inserted into the polisher handle and latched in place before attempting to switch on polisher.
- ✓ Secure loose work pieces with a clamp, vice or other adequate holding device.
- ✓ Avoid unintentional starting.
- ✓ Wear approved safety eye protection (standard spectacles are not adequate).
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-skid shoes.
- ✓ Be aware that this polisher does not need to be plugged into the mains power.
- ✓ Keep children and unauthorised persons away from the working area.
- ✗ **DO NOT** use the wrench where there are flammable liquids, solids or gases, such as paint solvents, etc.
- ✗ **DO NOT** allow children to operate the polisher.
- ✗ **DO NOT** operate the polisher if any parts are missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** hold unsecured work piece in your hand.
- ✗ **DO NOT** leave the polisher operating unattended.
- ✗ **DO NOT** carry the polisher with your finger on the power switch.
- ✗ **DO NOT** use the polisher for a task it is not designed to perform.
- ✗ **DO NOT** operate the polisher when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** get the polisher or battery charger wet or use in damp or wet locations.

2. INTRODUCTION

The One-Battery-Fits-All range has been carefully selected with the professional tradesman in mind. Slim, compact and lightweight designs, due largely to the lithium-ion battery technology, punch well above their weight, delivering power and performance for most tradesmen's requirements. Weight for weight Li-ion batteries give an all-round better performance than standard Ni-Cd/Ni-MH cells.

- Li-ion maintains a higher energy density level (generally twice that of a Ni-Cd cell) giving more battery power per gram.
- Has a flat discharge curve - performing better for longer.
- Li-ion has no memory effect - these batteries can recover from a deep discharge with no tendency to reduce overall capacity.
- Li-ion technology is lightweight and therefore perfect for the tradesman or high demand user.

Selecting the right tools from this range could not be more simple. Purchase a tool combination kit, then add your own selection of power tools and accessories to build your own tool profile. No need to worry about battery compatibility - one battery fits all.

3. SPECIFICATION

Model No:	CP6005	CP6015
Battery:	14.4V 2Ah Li-ion	14.4V 2Ah Li-ion (Not Supplied)
No Load Speed:	0-1900rpm/0-6900rpm	0-1900rpm/0-6900rpm
Thread Size:	5/16"UNF	5/16"UNF
Battery Model No:	CP60BP	CP60BP
Battery Charger Model No.:	CP60MC	CP60MC
Weight:	2.3kg	0.9kg
Noise Power	80dB	80dB
Noise Pressure	69dB	69dB
Complete Kit Model No:	CP6005	CP6005

4. CHARGING

4.1. **Battery Pack Removal and Replacement**

- 4.1.1. Switch the machine off before removing the battery pack.
- 4.1.2. Press the battery latches in and withdraw the battery pack (fig.1).
- 4.1.3. To replace the battery pack, push the stem into the polisher until the latches engage. The battery pack can only be inserted in the correct orientation.

4.2. **Battery Charging**

Batteries that have been out of use for some time or are new may not accept a full charge. This is not a battery fault; the battery may need to be discharged and charged a couple of times to restore full capacity.

- 4.2.1. Connect the charger to the electric power supply. A flashing green LED will show.
- 4.2.2. Insert the battery into the charger (fig.2). A steady red light will show.
- 4.2.3. When the battery is 80% full, the green LED will flash.
- 4.2.4. When fully charged, a steady green LED will show.
- 4.2.5. The battery is ready for use.
- 4.2.6. The LED indications are:

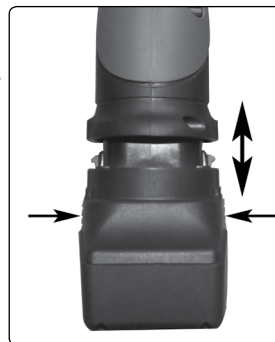 



fig.1



fig.2

- Power On (Green light flashes slowly)
- Battery Low (Red light stays illuminated)
- Battery charged 80% (Green light flashes rapidly)
- Battery charged 100% (Green light stays illuminated)
- Battery Pack temperature is too hot or too cold (Red light flashes slowly): Allow temperature to stabilise.
- Battery Pack malfunction (Red and Green lights stay illuminated): Contact dealer or service agent.

 5. OPERATION

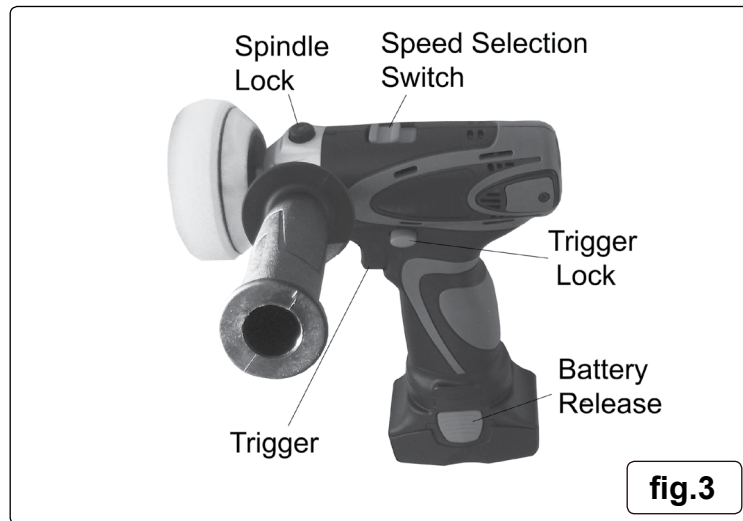

5.1. USING THE POLISHER

- WARNING!** Ensure you read, understand and apply the safety instructions in Section 1.
- 5.1.1 Select required polishing/sanding head and screw (clockwise) onto drive spindle, the spindle can be locked by depressing the spindle lock. fig.3.
- 5.1.2 Hold the polisher firmly with one hand on the handle grip and the other on the Side-Handle. To select the required speed slide the speed selection switch forward or back to select either high or low speed range. fig.3.
- 5.1.3 To start the polisher gradually press the trigger when in the fully depressed state it can be locked on by sliding the trigger lock to stop the polisher push lock in opposite direction and release trigger. fig.3.
- 5.1.4 Lock the spindle and turn the polishing/sanding head anti-clockwise
 - WARNING!** The high speed settings are intended for sanding. If used for polishing an excessive amount of surface material may be removed.
- 5.1.5 Keep the machine clean and dry. Do not use abrasives to clean the unit.
 - WARNING!** Wear approved safety eye protection and, if necessary, respiratory protection.
Note. maintenance must only be carried out by a technically qualified person or an authorised service agent.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.



Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.



WEEE Regulations

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



Battery Removal

See section 4.1

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk.
IP32 7AR



01284 757500



01284 703534



www.sealey.co.uk



sales@sealey.co.uk

WARNING! – Risk of Hand Arm Vibration Injury.

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated in accordance with these instructions.

Measured vibration emission value (a):1.69 m/s²

Uncertainty value (k):1.5 m/s²

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

NB: Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.

Health surveillance.

We recommend a programme of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

Personal protective equipment.

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSE website www.hse.gov.uk - Hand-Arm Vibration at Work.