

Thank you for purchasing a Sealey product. Manufactured to a high standard this article will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND # CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS


1.1. GENERAL SAFETY

 
- ✓ Follow all workshop safety rules, regulations and conditions when using the gun.
- ✓ Remove the battery pack from the gun before servicing or performing any maintenance.
- ✓ Maintain the gun and battery pack in good condition. Check moving parts for alignment on a regular basis.
- ✓ Replace or repair damaged parts. *Use an authorised service agent and recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Keep the gun, battery pack and charger clean for optimum performance.
- ✓ Use approved eye and ear protection.
- ✓ Keep the work area clean and tidy and free from unrelated materials.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- x DO NOT operate the gun if any parts are missing as this may cause failure and/or personal injury.
- x DO NOT operate the gun where there are solvent fumes or flammable gases, liquids or solids.
- x DO NOT use the gun for a task it is not designed to perform.
- x DO NOT operate the gun when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- x DO NOT get the gun or battery charger wet or use in damp or wet locations.
- ✓ Keep gun and charger in the case and store in a safe, dry, childproof area where the temperature will not exceed 104°F (40°C).

1.2. BATTERY SAFETY INSTRUCTIONS

- ✓ Use only the charger provided to charge the battery pack.
- x DO NOT charge the battery pack when room temperature is below 41°F (5°C) or above 104°F (40°C).
- x DO NOT attempt recharging the pack by means of an engine generator or a DC power source.
- x DO NOT short-circuit the battery pack by touching both terminals at the same time with a metal object, or your fingers etc.
- x DO NOT store battery pack (or gun) in locations where the temperature may exceed 104°F (40°C) e.g. in outside sheds, above heaters etc.
- ▲ **DANGER!** DO NOT attempt to disassemble the battery pack. For safety and environmental reasons DO NOT discard in domestic waste or by burning. ONLY discard or recycle according to local authority regulations.
- ☐ **WARNING!** DO NOT allow a leaking battery to contact your person. If you come into contact with battery liquid take the following immediate action:
 - ☐ a) **Skin contact:** Wash immediately with soap and water, then wash in either lemon juice or vinegar.
 - ☐ b) **Eye contact:** Wash with a strong solution of boric acid and seek immediate medical attention.

1.3. MAINS POWER ELECTRICAL SAFETY (In relation to the battery charger)

- ☐ **WARNING! It is the user's/owner's responsibility to check the following:**
 - You must** check all electrical equipment and appliances to ensure that they are safe before using. **You must** inspect power supply leads, plugs and all electrical connections for wear and damage. **You must** ensure the risk of electric shock is minimised by the installation of appropriate safety devices. An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We recommend that an RCD (Residual Current Device) is used with all electrical products. It is particularly important to use an RCD with portable products that are plugged into a supply not protected by an RCCB. If in doubt consult a qualified electrician. You may obtain an RCD by contacting your local Sealey dealer. **You must** also read and understand the following instructions concerning electrical safety.
- 1.3.1. The **Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified person, using a Portable Appliance Tester (PAT), at least once a year.
- 1.3.2. The **Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. **If in any doubt about electrical safety, contact a qualified electrician.**
- 1.3.3. DO ensure that the insulation on all cables and the product itself is safe before connecting to the mains power supply. See 1.3.1. above and use a Portable Appliance Tester (PAT).
 - x DO NOT use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When a BS 1363/A UK 3 pin plug is damaged, cut the cable just above the plug and dispose of the plug safely. Fit a new plug according to the following instructions (UK only).
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight. Double insulated products, which are always marked with this symbol , are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated above - DO NOT connect either wire to the earth terminal.
- 1.3.4. DO ensure that cables are always protected against short circuit and overload.
- 1.3.5. DO regularly inspect power supply leads, plugs and sockets for wear, damage or loose connections.
- 1.3.6. DO check that the voltage marked on the product is the same as the power supply to be used.
- 1.3.7. DO NOT pull or carry the appliance by the cables.
- 1.3.8. DO NOT pull the plug from the socket by the cable.
- 1.3.9. DO NOT use worn or damage leads, plugs or connections.

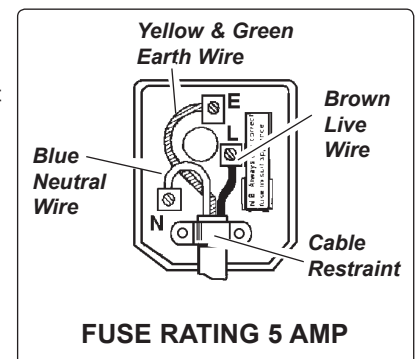

1.4. BATTERY CHARGER SAFETY INSTRUCTIONS


- ☐ **WARNING! DO NOT attempt to charge any battery other than that supplied for the gun. Other types of batteries may explode!**
- ✓ All mains electrical supply safety features must be followed as described in 1.3. above.
- ✓ Disconnect the charger from the mains supply when not in use.
- x DO NOT charge battery if room temperature is below 41°F (5°C) or above 104°F (40°C)
- x DO NOT expose the charger to damp or wet conditions.
- x DO NOT pull or carry the charger by the power lead.

- x DO NOT operate the charger if it has been dropped, or has received a sharp knock, or is damaged. Take the charger to an authorised agent for repair or obtain a replacement.
- x DO NOT dismantle the charger as this may cause damage and/or personal injury and will invalidate the warranty.
- x DO NOT insert foreign objects or material into the hole reserved for the battery pack.

2. INTRODUCTION & SPECIFICATION

Ideal for dispensing 310ml cartridges and sausage packs. Anti-drip feature with variable rewind and variable speed control allows pin-point control of caulking bead. Superb gun for dispensing all types of caulking - particularly suitable for windscreen repair applications.

Battery:	4.8V
Speed:	372 mm/min
Charge Time:	1hour
Accessories:	Extra Battery
Battery Model No:	CPC48VRBP
Weight Inc. Battery:	2.1kg
No. of cartridges per hour:	35 Cartridges (310ml Silicone at room temperature. Approx).

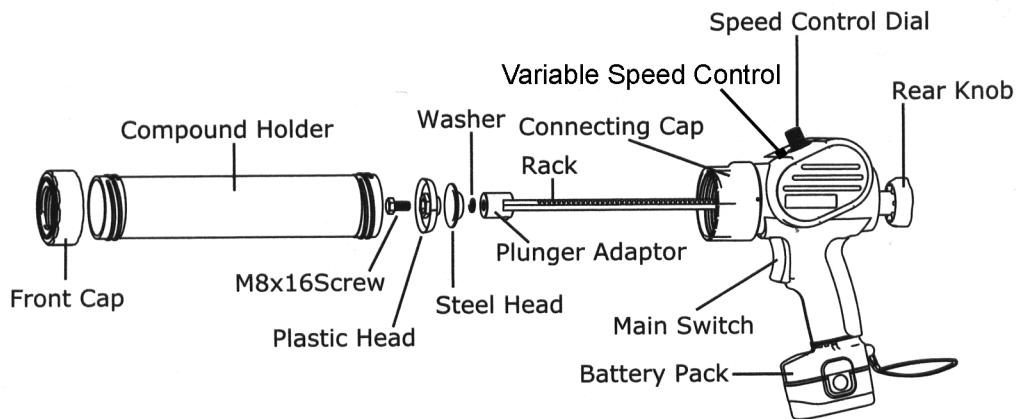 

3. OPERATING INSTRUCTIONS

Note: When new, the battery pack will have been shipped in a low charge state. It will take longer to charge initially, and several subsequent charges may also take a little longer than when the battery pack reaches its optimum performance. Remove battery pack from case and charge as below:

3.1. CHARGING THE BATTERY PACK

- 3.1.1. Plug the AC charger into the supply wall outlet.
- 3.1.2. To remove the battery pack from gun, depress the two side release clips and withdraw battery from the gun handle.

WARNING! Do not touch metal terminals.

- 3.1.3. The battery pack and charger have the positive (+) and negative (-) terminals marked. Align the correct terminals and insert the battery into the charger.

Note: The battery pack is so designed that it will only enter the charger unit the correct way. When placed in the charger, a very slight downward pressure will seat the pack firmly onto the terminals. The red LED will light when the battery is inserted to indicate power supply is connected, and battery is charging.

- 3.1.4. The charging will take approximately 1 hour from a fully discharged state. When fully charged the LED on the charger will light green to indicate a trickle charge.

- 3.1.5. After removing the battery, disconnect the charger from the mains supply and store in the carry case.

WARNING! Never leave the battery unattended whilst charging due to the potential fire hazard.

Note: If two batteries are to be charged in succession allow the charger to cool between uses.

3.2. SAUSAGE BAG APPLICATION.

- 3.2.1. Ensure plastic head (fig.1) is fitted. If not, unscrew and remove the compound holder, loosen the M8 screw (fig.2) fit the plastic head (fig.3) and tighten the M8 screw.
- 3.2.2. Cut a hole in one end of the sausage bag (fig.4).
- 3.2.3. Remove the front cap from the compound holder. Fit the nozzle and cut the tip of to suit your requirements (fig.5).
- 3.2.4. Insert the sausage bag into the front of the compound holder. Screw the front cap and nozzle on.
- 3.2.5. Push the rear knob forward gently advancing the rack until it comes into contact with the sausage pack. The sausage pack is now loaded and ready to use.

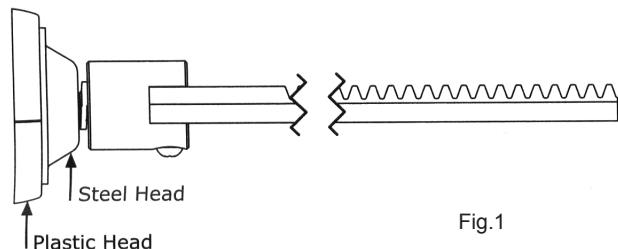 


Fig.1

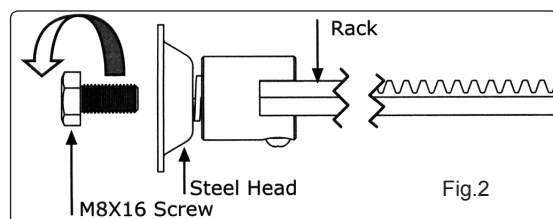 


Fig.2


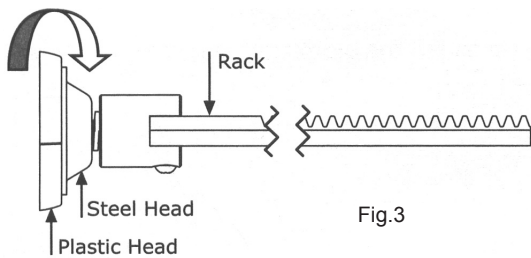 


Fig.3

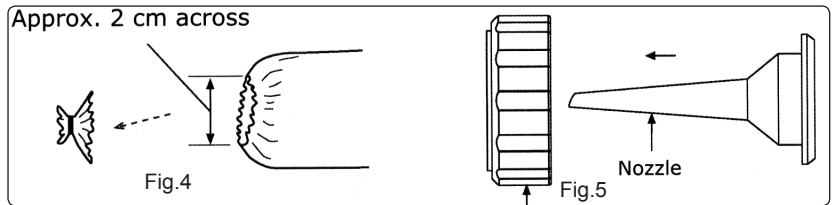 

3.3. CARTRIDGE APPLICATION.

- 3.3.1. Unscrew the compound holder.
- 3.3.2. Loosen the M8 screw and remove the plastic head (fig.6).
- 3.3.3. Re-fit the steel head and tighten the M8 screw (fig.7).
- 3.3.4. Screw back on the compound holder and remove the front cap.
- 3.3.5. Use a sharp knife to cut the tip of the caulking tube to the desired width and angle.
- 3.3.6. Insert the cartridge into the compound holder. Screw the front cap back on.
- 3.3.7. Push the rear knob forwards gently advancing the rack until it comes into contact with the cartridge.

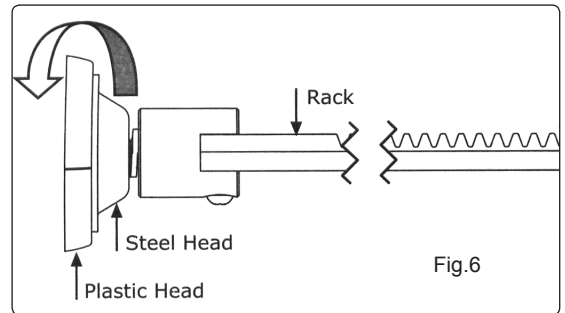 


Fig.6


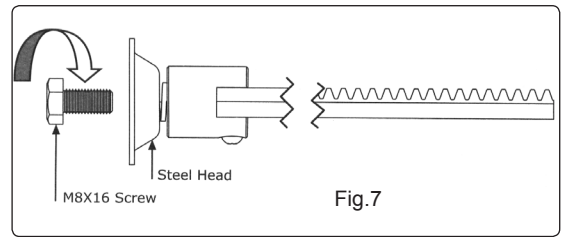 


Fig.7

 3.4. USING THE SEALING GUN.

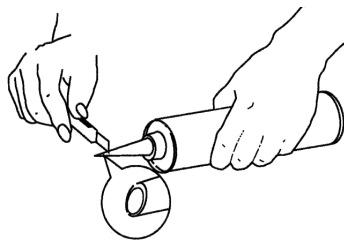


- 3.4.1. Pass one hand through the toggle strap and grasp the handle while holding the compound holder with the other.
 - 3.4.2. Set the tip of the nozzle in the joint to be filled and press the main trigger switch. The rack will move forward and force the sealant from the nozzle of the cartridge.
 - 3.4.3. The rack will retract slightly (rewind) when you release the main switch in order to prevent dripping.
 - 3.4.4. The CPC48VR is fitted with a variable rewind feature that enables you to adjust the amount of rewind available to suit your needs.
 - 3.4.5. To adjust the rewind use a small screwdriver to turn the rewind adjustment screw situated in front of the variable speed control. Clockwise increases the amount of rewind and anticlockwise decreases the amount of rewind.
- NOTE!** When pressing the main trigger switch again allow a few seconds for the rack to recover the distance rewound before it dispenses more sealant.
- 3.4.6. Use the speed control to adjust the flow rate according to the task you are performing.
- NOTE!** Do not try to use a cartridge that has hardened as this will cause damage to the caulking gun.

4. MAINTENANCE

4.1. CLEANING

- 4.1.1. After completing usage, always remove the tube holder and tube.
- 4.1.2. Regularly inspect tube holder cap to ensure it is properly tightened.
- 4.1.3. Keep the tube holder and piston joint clean and in proper working order.
- 4.1.4. Always release the rack back to the correct position for storage after use.
- 4.1.5. Keep motor vents clear of dust and debris.
- 4.1.6. If the tool is not operating normally, making unusual noises, or appears defective, stop using it immediately and get it repaired by a qualified technician.
- 4.1.7. Clean tool with a damp cloth and light detergent. Do not use solvents as they can damage the plastic parts.

Environmental Protection

-  Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.
-  When the product is no longer required, it must be disposed of in an environmentally protective way.
-  Rechargeable battery contains nickel cadmium (NiCad). It is recyclable. Take to your local recycling centre to be disposed of properly. Do not incinerate NiCad battery as it may explode when exposed to fire. Do not attempt to open battery pack.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP37 7AR

 01284 757500

 www.sealey.co.uk

 01284 703534

 sales@sealey.co.uk