




INSTRUCTIONS FOR:
CLOCK RADIO ALARM
MODEL No: CR01

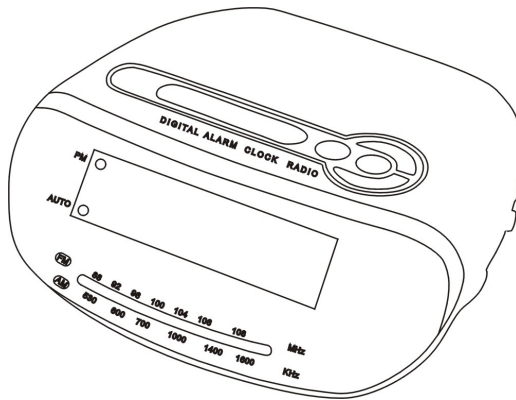

AM/FM ALARM Clock Radio

AC 230-240V~ 50Hz, 6W
AM: 530-1600kHz
FM: 88 -108MHz

1. SAFETY

1.1. GENERAL

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- It shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

1.2. ELECTRICAL SAFETY

☐ **WARNING!** It is the user's responsibility to read, understand and comply with the following electrical instructions:

You must ensure the risk of electric shock is minimised by the installation of appropriate safety devices.

An RCCB (Residual Current Circuit Breaker) should be incorporated in the main distribution board. We also recommend that an RCD (Residual Current Device) is used with all electrical products, particularly portable equipment which is plugged into an electrical supply not protected by an RCCB.

You must also read and understand the following instructions concerning electrical safety.

1.2.1. **The Electricity At Work Act 1989** requires all portable electrical appliances, if used on business premises, to be tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.

1.2.2. **The Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of the appliance and the safety of the appliance operator. **If in any doubt about electrical safety, contact a qualified electrician.**

1.2.3. **You must ensure that you:**

✓ Inspect the plug, cable and connector for wear and damage to ensure items are safe before connecting to the mains power supply.

If worn or damaged **DO NOT** use.

✓ Important: Check that the voltage marked on the radio is the same as the power supply to be used.

x **DO NOT** pull the plug from the mains socket by the lead.

x **DO NOT** get the radio wet, or use in wet, damp conditions (for indoor use only).

1.2.4. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.2.1. and 1.2.2. and use a Portable Appliance Tester.

1.2.5. Ensure that cables are always protected against short circuit and overload.

1.2.6. **DO NOT** use worn or damaged cables, plugs or connectors.

Immediately have any faulty item repaired or replaced by a qualified electrician.

When a BS1363/A UK 3 pin plug is damaged, cut the cable just above the plug and dispose of the plug safely.

Fit a new plug according to the following instructions (UK only).

a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.


b) Connect the BROWN live wire to the live terminal 'L'.

c) Connect the BLUE neutral wire to the neutral terminal 'N'.

d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight. ☐

Double insulated products, which are always marked with this symbol, are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated right.

DO NOT connect either wire to the earth terminal.

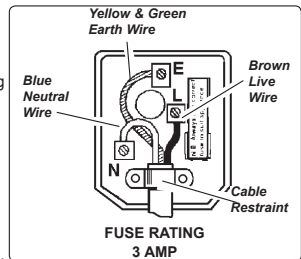

The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within The product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

Warning: to reduce the risk of electric shock, **DO NOT** remove cover (or back). No user serviceable parts inside, refer servicing to qualified service personnel.

2. PARTS

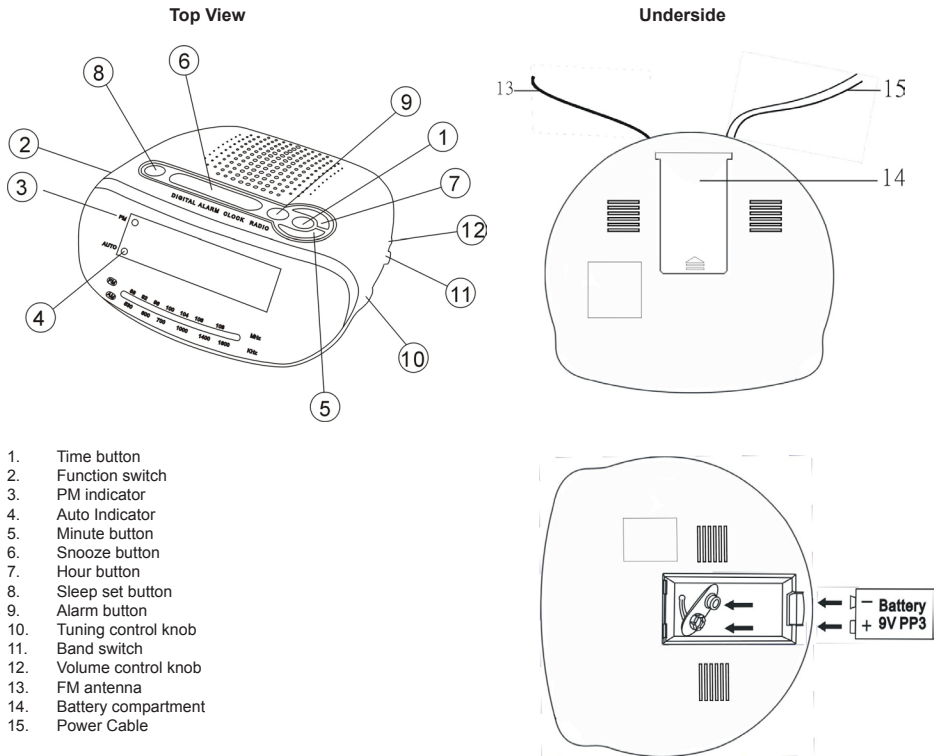

1. Time button
2. Function switch
3. PM indicator
4. Auto Indicator
5. Minute button
6. Snooze button
7. Hour button
8. Sleep set button
9. Alarm button
10. Tuning control knob
11. Band switch
12. Volume control knob
13. FM antenna
14. Battery compartment
15. Power Cable

3. FITTING THE BACK UP BATTERY

It is advisable to fit a battery (not supplied) in the battery compartment to prevent the loss of the display time and settings during a power failure.

To install the battery

- 3.1 Slide off the battery compartment cover from the underside of the unit.
- 3.2 Insert 1 x 9V heavy-duty alkaline battery. Insert the positive (+) round terminal of the battery into the negative connector. Fit the round connector into the negative (-) terminal of the battery. Take care to observe the correct polarity (+/-).
- 3.3 Refit the battery compartment cover.
- 3.4 **DO NOT** expose the batteries or the installed batteries to excessive heat (e.g. fire, sunshine or position close to radiators etc.).

Note! Dispose of used batteries responsibly at local authority household waste recycling facility.

- **DO NOT dispose of batteries in a fire as the batteries may explode.**
- Only use 9V batteries in this appliance.
- Be sure to insert correctly taking care to observe the correct polarity (+ and -).
- Use only batteries of the same or equivalent type as recommended.
- **DO NOT** recharge non-rechargeable batteries.
- Never try to dismantle batteries.
- **DO NOT** short-circuit the supply terminals.
- Always remove exhausted or dead batteries from the product, do not dispose of in fire.
- Remove batteries from the product before extended storage.

4. SETTING THE TIME

- 4.1 Move the function switch to OFF and plug the mains power cable into the household socket. '12:00' will flash in the display.
- 4.2 Press and hold the TIME button and at the same time press the HOUR button until the correct hour is displayed. If setting the time in the afternoon and evening, cycle through the hours until the correct hour is displayed and the pm indicator is illuminated.
- 4.3 After setting the hour, press the MIN button until the correct minute is displayed.
- 4.4 Once the time has been set, release the TIME button.

5. USING THE RADIO

- 5.1 Plug the mains power cable into the household socket and switch on.
- 5.2 Slide the FUNCTION switch to the 'ON' position.
- 5.3 Select the waveband by sliding the BAND switch to the desired waveband (AM or FM).
- 5.4 Turn the TUNING knob to select the station of choice. The radio frequency scale will show the wavelength selected.
- 5.5 Adjust the volume to the desired level by rotating the VOLUME control knob.
- 5.6 To turn off the radio, slide the FUNCTION switch to 'OFF'.

Note! The built in AM and the external FM antennas are directional. If tuning into an FM station extend or move the antenna for a better reception. If tuning into an AM station rotate the whole unit after tuning to obtain the best reception.

6. SETTING AND USING THE ALARM

- 6.1 Press and hold the ALARM button and at the same time press the HOUR button repeatedly until the correct alarm hour is displayed.
- 6.2 After setting the hour, press the MIN button repeatedly until the correct alarm minute is displayed.
- 6.3 Once the time has been set, release the ALARM button.
- 6.4 To activate the alarm, slide the FUNCTION switch to the position marked 'BUZZ' to wake up to a buzzer or 'AUTO' to wake up to the radio.
- 6.5 Once the alarm has been activated, the AUTO indicator will illuminate in the display.
- 6.6 When the time on the clock is the same as the alarm time that has been set, the alarm will sound.
- 6.7 The alarm will continue to sound and stop automatically after 1 hour 59 minutes. To silence the alarm, press the ALARM button. The alarm indicator will remain illuminated and the alarm will sound again the same time the following day unless the FUNCTION switch is moved to 'OFF'.
- 6.8 To activate the snooze function, press the SNOOZE button when the alarm sounds. The alarm will silence and the alarm will sound again after approximately nine minutes.
- 6.9 To turn off the alarm permanently, slide the FUNCTION switch to the 'OFF' position.

Note! The snooze button can be used repeatedly in the 1 hour 59 minute interval after the set alarm time.

7. SETTING AND USING THE SLEEP FUNCTION

- This function will switch off the unit automatically after a preset time interval up to 59 minutes.
- 7.1 Move the FUNCTION switch to 'OFF', 'BUZZ' or 'AUTO' position.
 - 7.2 Press and hold the SLEEP button, the radio will start to play and '0:59' will be shown in the display. Release the button and the display will show the clock and the radio will switch off after 59 minutes.
 - 7.3 To set a shorter time interval, press and hold the SLEEP button and at the same time press the MIN button until the desired switch off time interval is displayed.
 - 7.4 The unit will switch off after the time interval selected has lapsed.
 - 7.5 To turn off the sleep function, press the SNOOZE button and the radio will stop immediately.

Note! If the function switch is moved to 'BUZZ' or 'AUTO' the alarm is also activated. Before setting the sleep interval, ensure the alarm is set to the desired wake up time.

8. CARE AND MAINTENANCE

- Wipe external surfaces with a soft cloth. If the cabinet is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow to dry thoroughly before reusing.
- Should it become necessary to replace the fuse in the plug, please replace with a 3A fuse that conforms with BS 1362.

9. TECHNICAL SPECIFICATION

Rated voltage	230 - 240V~ 50Hz
Power consumption	6W
Radio	AM 530-1600kHz
.	FM 88-108MHz

Operating conditions Temperature: 5°C to 35°C
. Humidity 5% to 90%
Operating position Horizontal
Rating Information: At the bottom of the unit.

10. TROUBLESHOOTING GUIDE

Observation	Potential cause / solution
The unit does not work.	Does the socket that is being used have power? Is the unit switched on at the plug?
No sound.	Is the volume control set at minimum?
Radio reception weak.	Extend or adjust the position of FM antenna to help improve FM reception. Adjust the position of the radio to help improve AM reception.
Alarm function does not work.	Has the alarm been activated by moving the FUNCTION switch to 'AUTO' or 'BUZZ'? Has the alarm been set for the correct 12-hour interval (e.g. alarm set for 'pm' instead of 'am')? Has the clock been set for the correct 12-hour interval? Ensure the PM INDICATOR is illuminated when setting the clock for time intervals between midday and midnight.
Sleep function does not work.	Has the sleep function been activated by pressing the SLEEP button and moving the FUNCTION switch to the 'OFF', 'BUZZ' or 'AUTO' position?

Environmental Protection.



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Visit www.recycle-more.co.uk, click on "bank locator" and enter your postcode to find your nearest recycling site.



When the product is no longer required, it must be disposed of in an environmentally protective way.

Battery Removal

To remove the battery refer to Section 3 'Fitting the back up battery' and reverse the procedure for fitting the battery.

Dispose of used batteries responsibly at local authority household waste recycling facility.



Declaration of Conformity We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives.

CLOCK RADIO ALARM

Model: CR01

2006/95/EC Low Voltage Directive

2004/10/EC EMC Directive

93/68/EEC CE Marking Directive

2002/95/EC RoHS Directive

2002/96/EC WEEE Directive



The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

Signed by Mark Sweetman

24th June 2009

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor
Sealey Group,
Bury St. Edmunds, Suffolk.

01284 757500
01284 703534



www.sealey.co.uk
sales@sealey.co.uk