



RETRACTABLE CABLE REELS 230V

MODEL No's: **CRM10.V6 & CRM15.V6**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

1. SAFETY INSTRUCTIONS

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using.
Inspect power supply leads, plugs and all electrical connections for wear and damage.
Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- × **DO NOT** use worn or damaged cables, plugs or connectors.
- ✓ Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
- ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
Ensure that repairs are carried out by a qualified electrician.
- ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
Important: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- × **DO NOT** pull or carry the appliance by the power cable.
- × **DO NOT** pull the plug from the socket by the cable.

1.2. GENERAL SAFETY

- ✓ Familiarise yourself with the application and limitations of the reel, as well as the specific hazards.
- WARNING!** Isolate the reel from the electrical supply before connecting or disconnecting equipment, servicing or performing any maintenance.
- ✓ Maintain the reel in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate and fix the reel in a suitable work area. Do not position in direct sunlight, or in areas of extreme heat or cold.
- ✓ Keep extended cable away from heat, oil and sharp edges. Check cables for wear before each use and ensure all connections are secure.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Keep children and unauthorised persons away from the work area.
- × **DO NOT** use the reel for any purpose other than that for which it is designed.
- × **DO NOT** operate the reel when you are tired, under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use, switch off the electrical supply and retract cable into case.
- WARNING! DO NOT** dismantle the reel casing, or attempt to remove the screws on the sides. To do so may result in damage to the reel and/or personal injury and will invalidate the warranty. Internal maintenance, which will require the opening of the casing, must only be undertaken by an authorised service agent.

2. INTRODUCTION

Double socket outlet with individual LED power indicators and rocker on/off switches. Features integral manual thermal trip switch to prevent overload. Built-in bracket rotates 180° and can be used to mount to a wall or ceiling. Retracting cable reel operated by simple pull and release action. Hard-wearing composite case prevents damage to the cable and eliminates potential trip hazards.

3. SPECIFICATION

Model No:	CRM10.V6	CRM15.V6
Cable Section:	3 x 1.5mm ²	3 x 1.5mm ²
Cable Type:	PVC	PVC
Capacity Unwound:	3200W	3200W
Capacity Wound:	1000W	1000W
Fuse Rating:	13A	13A
Length:	10m	15m

Model No:	CRM10.V6	CRM15.V6
Nett Weight:	3.42kg	4.70kg
Plug Type:	3-Pin	3-Pin
Power Supply Cable Length:	1.3m	1.7m
Sockets:	2	2
Supply:	230V	230V
Thermal Trip:	Yes	Yes

4. MOUNTING/ASSEMBLY

- 4.1. To wall mount the reel, first remove the wall mounting bracket from the reel by releasing and withdrawing the two bracket pivots. To release the pivots, remove the casing screws which pass directly through each pivot.
Note: There are two screws attaching the top pivot. **DO NOT** remove any other casing screws.
- 4.2. Fix the bracket in an appropriate position, ensuring that the wall and the mounting screws and plugs will adequately support the weight of the reel and the tension of the cable as it is pulled from the reel.
- 4.3. Re-attach the reel to the bracket, ensuring that the pivots are correctly inserted and retained by the casing screws.
- 4.4. Ensure that the cable can be pulled out to, and reeled back from, work sites without rubbing on the sides of the cable entry.

5. OPERATION

5.1. EXTENDING THE CABLE

- 5.1.1. As the cable is pulled out from the reel the action of the ratchet mechanism can be heard alternating between the usual clicking sound and a short period of silence. If the tension on the cable is released whilst the ratchet is clicking the cable will remain extended. If the tension on the cable is released during the period of silence, the cable will retract. To stop the cable retracting, pull it out again a little until you hear the ratchet clicking.

5.2. RETRACTING THE CABLE

- 5.2.1. To release the cable and allow it to automatically rewind, pull the cable out from the locked position until the clicking stops and then release the tension on the cable. **DO NOT** let go of the cable, but keep hold of it and guide the socket back to the reel.

WARNING! The reel tension is factory set, if any adjustment is required contact an authorised service agent. **DO NOT** remove any of the black spring cover screws.

5.3. THERMAL CUT-OUT

- 5.3.1. In the event of the reel being overloaded, the cut-out will trip. If this occurs disconnect the reel from the mains supply and then determine and rectify the cause of the overload.
- 5.3.2. Reconnect to the mains supply and press the cut-out reset button, after allowing two or three minutes for cooling.



WEEE REGULATIONS



Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



REGISTER YOUR PURCHASE HERE

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

sales@sealey.co.uk

www.sealey.co.uk