



INSTRUCTIONS FOR:
CYCLE STORAGE TENT
MODEL NO: **CST01**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- WARNING!** Ensure Health & Safety and local authority practice regulations are adhered to when using this equipment.
- ✓ Familiarise yourself with the specific applications and limitations of the shelter, as well as any potential hazards.
- x **DO NOT** use the shelter for any purpose other than that for which it is designed.
- ✓ Maintain correct balance and footing. Ensure the floor/ground is not slippery and wear non-slip shoes.
- ✓ Locate the shelter on level and solid ground. If placed on grass ensure that the cycle is adequately supported before using the shelter.
- ✓ Locate the shelter in a suitable area. Keep the area clean and tidy and free from unrelated materials, and ensure that there is adequate lighting.
- x **DO NOT** use if any parts are damaged, as this may cause failure and/or personal injury.
- x **DO NOT** use the shelter when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Keep the shelter clean for best and safest performance.

2. INTRODUCTION

Versatile and innovative low cost solution to bike storage for home and workplace. Can be secured to a solid structure or free standing. Water resistant and large enough for 2-3 adult sized bikes and other items such as lawn mowers. Extra security is provided by a small access panel at the rear of the tent to allow the contents to be secured to fixing points by chain or bike cable. Manufactured from polyester and polyurethane.

3. SPECIFICATION

Approximate Size: 2000 x 800 x 1670mm

4. ASSEMBLY

- 4.1. Remove tent from bag, unroll and lay on ground, with ground sheet side facing down.
- 4.2. Extend both long poles to their full length.
- 4.3. Slide poles into the sleeves that run the length of each side of the tent. Fix the ends of the poles into the holes in the tabs at each of the four corners, (see fig.1).
- 4.4. Extend the seven cross poles and place their ends into the eyelets around the circumference to tension the width of the tent, (see fig.2).
- 4.5. Position the tent in its final location and anchor it through the corner tabs using the tent pegs, (see fig.1).
- 4.6. Use the eyelets around the circumference to attach guy ropes (not supplied) for extra stability in windy weather.





fig.3



Environmental Protection

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.


IMPORTANT: No liability is accepted for incorrect use of this product.


WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

 01284 757500

 01284 703534

 www.sealey.co.uk

 sales@sealey.co.uk