



# SACK TRUCK 2-IN-1 250KG CAPACITY

MODEL NO: **CST978\_V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

✓ **IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS



Refer to instruction manual



Wear protective gloves



Wear protective clothing



Wear safety footwear

## 1. SAFETY


- ✓ Always load evenly with the centre of gravity of the load as near the centre and rear of the plate as possible.
- ✓ Obtain additional support for large or wide loads to prevent tipping.
- ✗ **DO NOT** overload the truck - see Specification.
- ✗ **DO NOT** leave unattended, especially when loaded, unless the wheels are chocked or the truck is otherwise secured.
- ✗ **DO NOT** use truck on uneven ground and do not run over curbs or steps - use a ramp.
- ✗ **DO NOT** allow others to ride on the truck.
- ✗ **DO NOT** use the truck if any part is damaged, paying particular attention to the wheels.

## 2. INTRODUCTION

Tubular steel framework with heavy-duty pneumatic wheels. Use as a traditional sack truck or in a horizontal position. Quick and easy conversion between different configurations.

## 3. SPECIFICATION

Model No. ....	<b>CST978_V2</b>
Max. Load.....	250kg
Wheel Diameter.....	250mm
Wheel Thickness .....	90mm
Height.....	1450mm
Overall Width.....	550mm
Platform Depth .....	225mm
Nett weight.....	12.5kg

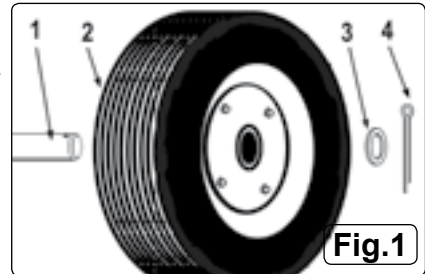 

**Fig.1**

## 4. ASSEMBLY

### 4.1. WHEELS.


- 4.1.1. Ensure each axle is clean from dust and dirt to allow free movement of the wheel. You will need to slide the axle through the frame bushes first.
- 4.1.2. Slide the wheel (1.2) onto the axle (1.1), followed by the washer (1.3) and complete by pushing the split pin (1.4) through the hole in the end of the axle and bending over to retain.
- 4.1.3. Repeat for the other side.



**Fig.2**

### 4.2. CASTOR WHEELS.

- 4.2.1. Bolt the two castor wheels to the flat cross member at the other end of the frame (see Fig.2&3).
- 4.2.2. Insert the threaded stub through the hole, place the flat washer provided over the threaded stub followed by the split spring washer and retaining nut. Tighten both nuts.

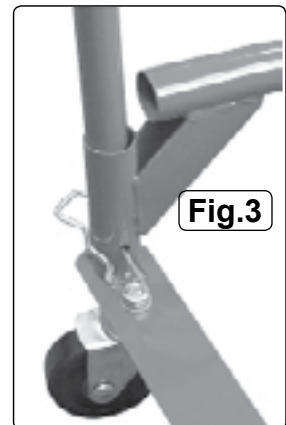 

**Fig.3**

### 4.3. HANDLE. (To assemble in sack truck configuration)

- 4.3.1. Fully insert the loop handle into the main frame tubes as shown.
- 4.3.2. Retain in place by inserting an 'R' clip through each tube as shown in Fig.2. Ensure that the clip is on the back of the frame away from the loading surface. It may be necessary to lift the handle very slightly to get the holes in the handle tube to align with the holes in the frame tubes.

### 4.4. HANDLE. (To assemble as a flat bed truck configuration)

- 4.4.1. Firstly remove the 'R' clips from the main frame tubes and withdraw the loop handle.
- 4.4.2. Lay the frame horizontal and insert the loop handle into the short length tube above the castors as shown in fig.3.
- 4.4.3. Retain in place by inserting an 'R' clip through each tube as shown in Fig.3. It may be necessary to lift the handle very slightly to get the holes in the handle tube to align with the holes in the short length tubes.

Parts support is available for this product. Please log on to  
[www.sealey.co.uk](http://www.sealey.co.uk), email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or telephone 01284 757500



**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR**



**01284 757500**



 
**01284 703534**



**[sales@sealey.co.uk](mailto:sales@sealey.co.uk)**



**[www.sealey.co.uk](http://www.sealey.co.uk)**

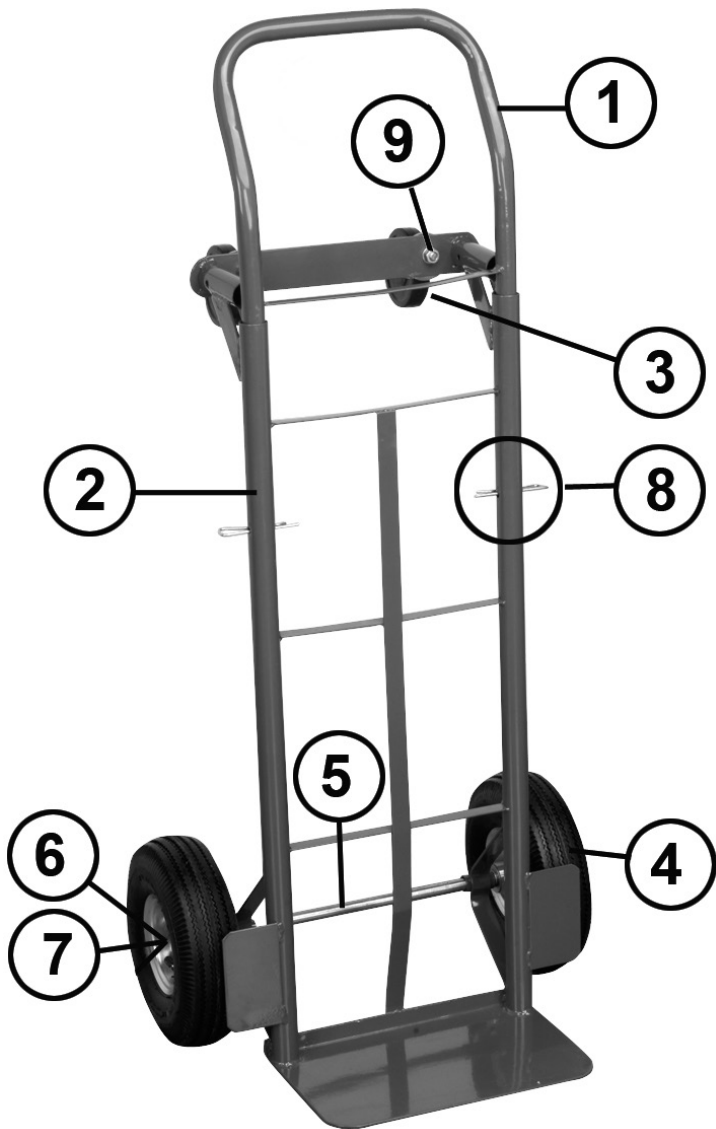

Item	Part No.	Description
1	CST978.01	Handle
2	CST975.02	Frame & Axle
3	CST978.03	Wheel,Swivel Castor (99x11x23x121)
4	CST986.V2-01	Wheel,Pneumatic 4.10/3.50-4 (250x16x79)
5	CST975.05	Axle

Item	Part No.	Description
6	FWM16.S	Flat Washer M16 Single
7	CST975.07	Pin
8	CST975.08	R Clip
9	SN10.S	Steel Nut M10 Zinc Din934(Single)

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.