

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Always load evenly with the centre of gravity of the load as near the centre of the truck as possible.
- ✓ Obtain additional support for large or wide loads to prevent tipping.
- ✗ **DO NOT** overload the truck - see Specifications.
- ✗ **DO NOT** leave unattended, especially when loaded, unless the wheels are chocked or the truck is otherwise secured.
- ✗ **DO NOT** use truck on uneven ground and do not run over curbs or steps - use a ramp.
- ✗ **DO NOT** allow others to ride on the truck.
- ✗ **DO NOT** use the truck if any part is significantly damaged - pay particular attention to the wheels.

2. SPECIFICATIONS

Lightweight frame design, weighs only 8.5kg yet has a carrying capacity of 150kg. Extending loading platform sits on four easy rolling, Ø100mm wheels (two fixed and two castors). Handle assembly retracts and folds flat against platform for compact storage. Ideal for business and home use.

Max. Load.....	150kg
Wheel Diameter.....	100mm
Load Area Folded.....	420 x 420mm
Load Area Extended.....	630 x 420mm
Height Folded.....	220mm
Height Extended.....	800mm

3. ASSEMBLY & USE

Before assembling wheels raise rear guard and handle assembly - see para. 4.1.1

3.1 Rear Wheels - Castor

- 3.1.1 Remove rear corner plastic trim (fig.1.1) (to give access to screw head).
- 3.1.2 Remove 4 nuts (2) and spring washers (3).
- 3.1.3 Place bridge piece (4) as shown in fig.1 and fit castor wheel mounting plate over screws.
- 3.1.4 Replace the 4 washers and nuts, tighten and replace trim.
- 3.1.5 Repeat for the second rear wheel.

Note! 1 screw is shorter than the other 3 and goes in position A fig.1.

3.2 Front Wheels - Fixed




- 3.2.1 Fit 2 short screws through mounting holes in positions B fig.2.
- 3.2.2 Place bridge piece (4) as shown in fig. 2 and fit wheel mounting plate over screws.
- 3.2.3 Fit 2 washers and nuts finger tight.
- 3.2.4 Fit 2 short screws through holes in positions C, through spacers (5) and through wheel mounting plate.
- 3.2.5 Fit washers and nuts and tighten all 4.
- 3.2.6 Repeat for the second front wheel.

4. ADJUSTMENTS

4.1 Rear Guard and Handle

- 4.1.1 To lift the rear guard and handle assembly from the folded position, pull it upward until it locks.
- 4.1.2 The handle is raised by pulling upward until it latches.
- 4.1.3 To lower the handle, press down firmly, against spring load, the upper cross-bar of the guard and, at the same time, push the handle down.
- 4.1.4 To fold the rear guard and handle assembly, press down the guard cross-bar and, at the same time, push the handle forward.
- 4.1.5 To extend the load platform, lift catch (fig.3) and turn through 180°, then pull front and rear platform sections apart. Ensure catch re-engages.
- 4.1.6 To close the extended platform, reposition catch, as 4.1.5, then push sections together. Ensure catch re-engages.

Note! Only use trolley with platform **fully closed or fully extended.**

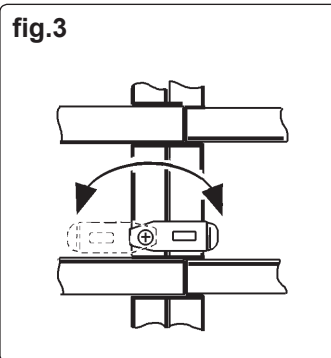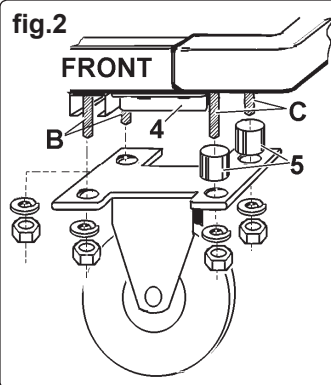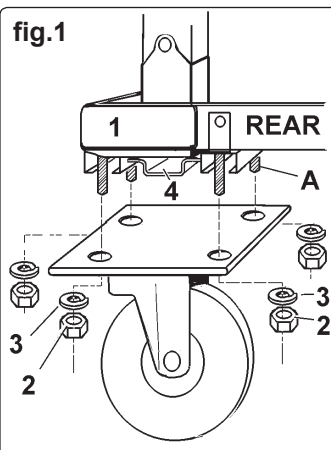

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.

